ORDER NO. KM40101757C7

F12

Service Manual

Telephone Equipment

Caller ID Compatible

KX-TG2583B / KX-TG2583S / KX-TG2583W

2.4GHz Cordless Answering System

Black Version

Silver Version

Pearl White Version

(for U.S.A.)

(for Latin America)

(Handset) (Base Unit)

SPECIFICATIONS

SPECIFICATIONS

	Base Unit	Handset
Power Source:	AC Adaptor (PQLV10Z)	Rechargeable Ni-cd battery
Receiving Frequency:	24 channels within 2.4015~2.4705 GHz	24 channels within 2.4015~2.4705 GHz
Receiving Method:	Direct conversion	Direct conversion
Transmitting Frequency:	24 channels within 2.4015~2.4705 GHz	24 channels within 2.4015~2.4705 GHz
Oscillation Method:	PLL synthesizer	PLL synthesizer
Tolerance of OSC Frequency:	24 MHz ± 720 Hz	24 MHz ± 720 Hz
Modulation Method:	NA (FSK/SS)	NA (FSK/SS)
Spread spectrum Method:	Direct sequence	Direct sequence
Chip rate	15 chip	15 chip
ID Code:	22-bit	22-bit
Dial Mode:	Tone (DTMF)/Pulse	Tone (DTMF)/Pulse
Redial:	Up to 32 digits	Up to 32 digits
Speed Dialer:		Up to 48 digits
Power Consumption:		11 days at Standby, 4.5 hours at Talk (maximum)
Dimension (H × W × D):	$2^{9}/_{16}$" × $6^{1}/_{2}$" × 8" (65 × 165 × 203 mm)	$1^{15}/_{32}$" × $2^{9}/_{32}$" × $9^{11}/_{32}$" (37 × 58 × 237 mm)
Weight	0.95 lbs. (431 g)	0.50 lbs. (228 g)

Design and specifications are subject to change without notice.

© 2001 Kyushu Matsushita Electric Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

When you mention the serial number, write down all 11 digits. The serial number may be found on the label affixed to the bottom of the unit.

FOR SERVICE TECHNICIANS

ICs and LSIs are vulnerable to static electricity.
When replacing, the following precautions will help prevent recurring malfunctions.
1. Cover the plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on the work table.
4. Do not grasp IC or LSI pins with bare fingers.

1. LOCATION OF CONTROLS

1.1. Base Unit

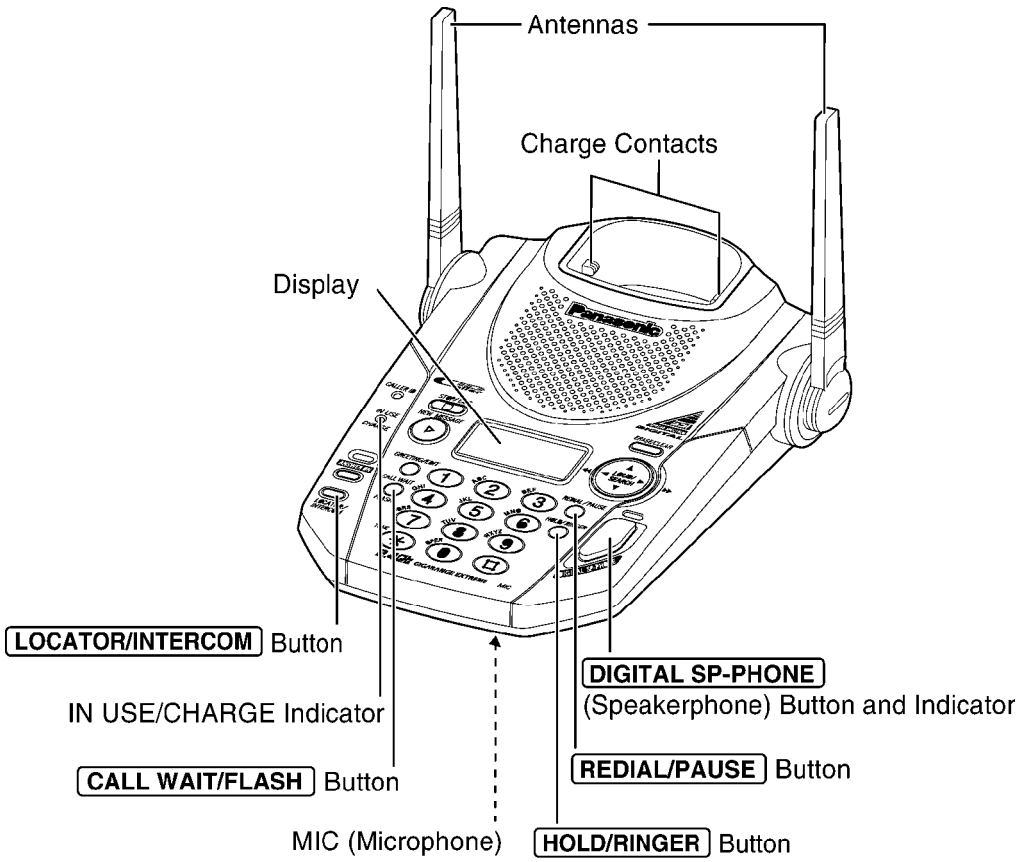
Antennas
Charge Contacts
Display
LOCATOR/INTERCOM Button
IN USE/CHARGE Indicator
CALL WAIT/FLASH Button
MIC (Microphone)
DIGITAL SP-PHONE
(Speakerphone) Button and Indicator
REDIAL/PAUSE Button
HOLD/RINGER Button

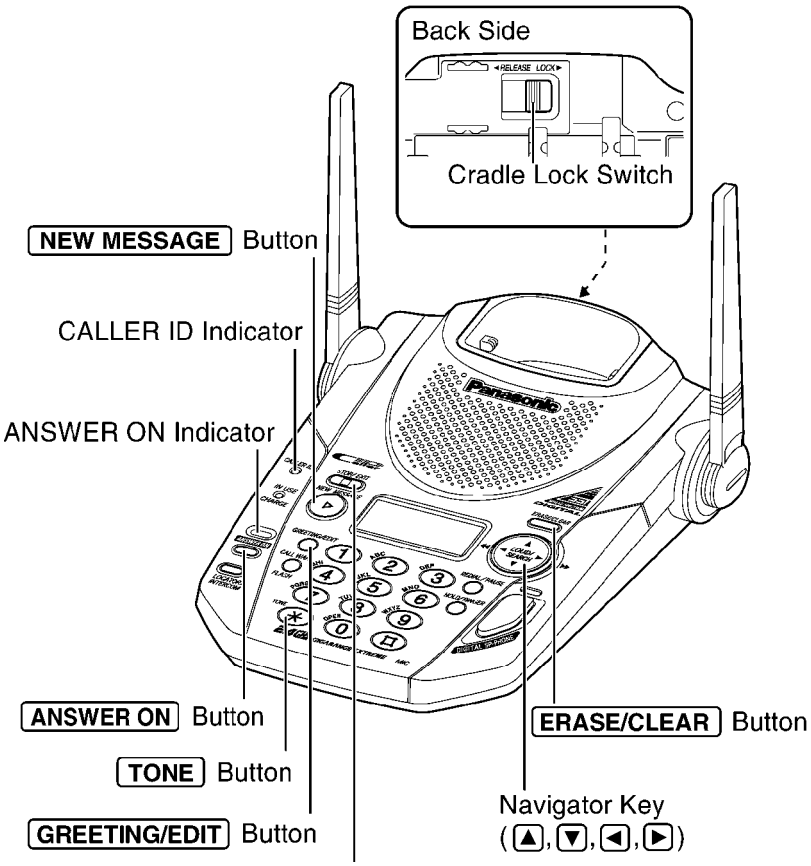
Back Side
Cradle Lock Switch
NEW MESSAGE Button
CALLER ID Indicator
ANSWER ON Indicator
ANSWER ON Button
TONE Button
GREETING/EDIT Button
ERASE/CLEAR Button
Navigator Key
(▲, ▼, ◄, ►)

STOP/EXIT Button

1.2. Handset

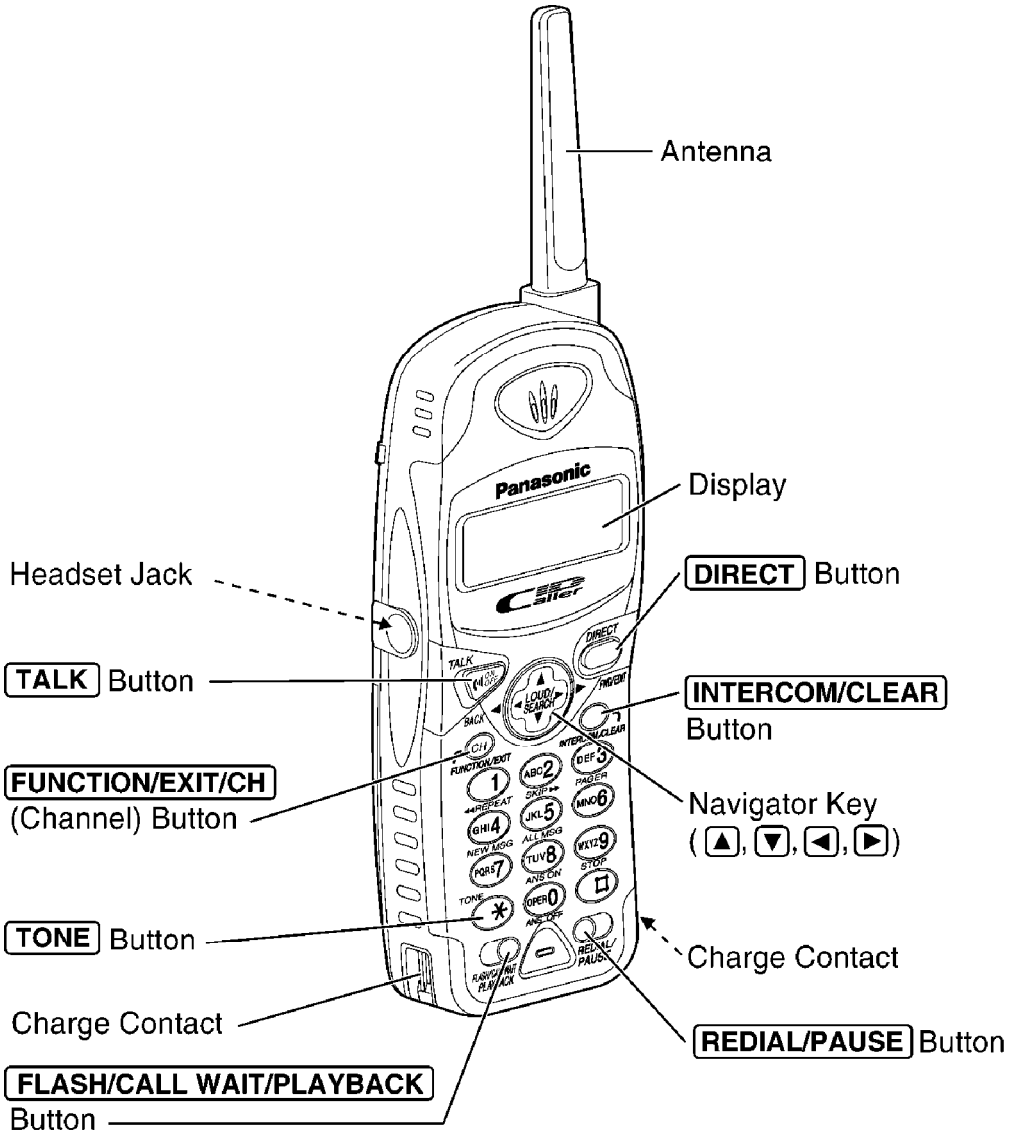

2. DISPLAYS

Handset

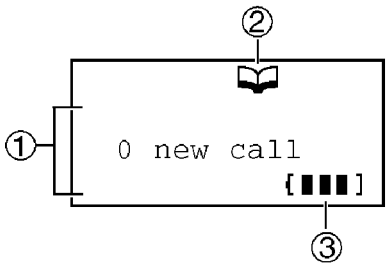

① The display shows the dialed number, call status, programming options and directory items etc. If you subscribe to a Caller ID service, caller information will be displayed. The number of new calls will also be displayed.

②The directory icon displays when storing or viewing the directory items.

③The battery icon indicates the battery strength.

Standby mode:
While the handset is off the base unit, the display becomes blank after you finish using the handset (making/answering a call, viewing the Caller List or directory list etc.). The handset can receive calls. The battery life is conserved in this state. While the handset is on the base unit, the battery icon and the number of new Caller ID calls are displayed in the standby mode.

Base unit

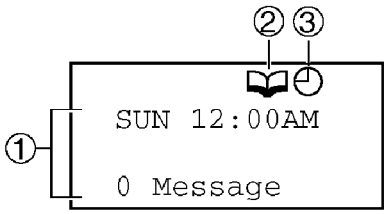

① The day and time and the number of incoming messages are displayed while the unit is not in use (**Standby mode**). The display shows the dialed number, call status, programming options and directory items etc.
If you subscribe to a Caller ID service, caller information will be displayed. The number of new calls will also be displayed.

②The directory icon displays when viewing the directory items.

③The clock icon flashes with the day and time if the clock needs adjusting.

3. SETTINGS

3.1. Connections

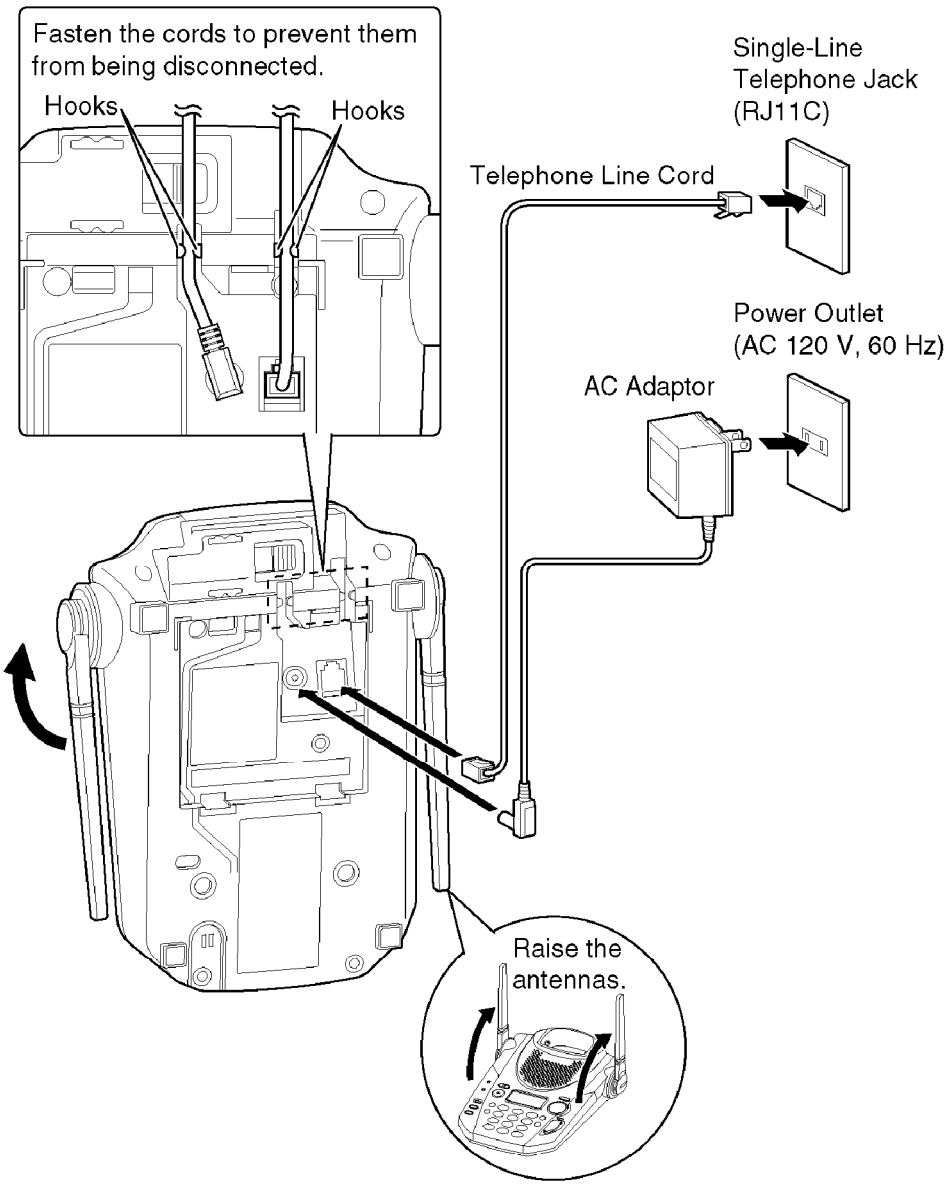

- USE ONLY WITH Panasonic AC ADAPTOR PQLV10Z.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.

3.2. Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use the Panasonic T-adaptor KX-J66.

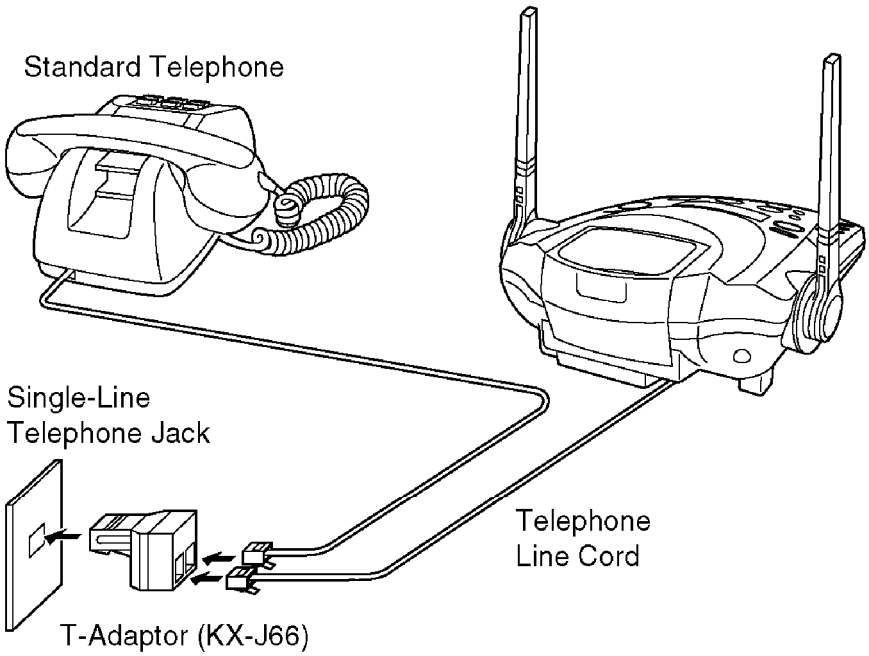

3.3. Battery Charge

3.3.1. Battery strength

You can check the battery strength on the handset display while the handset is on the base unit, while it is in use (making/answering a call etc.), or after viewing the Caller List or directory items, programming etc. The battery strength will remain for 5 seconds after using the handset, then the display will return to the standby mode.

The battery strength is as shown in the chart below.

Display prompt	Battery strength
[▮▮▮]	Fully charged
[▮▮]	Medium
[▮]	Low
[▮] (flashing)	Needs to be recharged.

3.3.2. Recharge

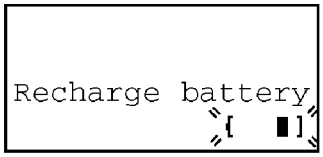

Recharge the battery when:
– "Recharge battery" is displayed on the handset,
– "[▮] " flashes on the display, or
–the handset beeps intermittently while it is in use.

- If you DO NOT recharge the handset battery for more than 15 minutes, the display will keep indicating "Recharge battery" and/or "[▮]" will continue to flash.

3.3.3. Battery information

After your Panasonic battery is fully charged:

Operation		Approx. battery life
While in use (TALK)	near the base unit*	Up to 4.5 hours
	away from the base unit	Up to 3.5 hours
While not in use (Standby)		Up to 11 days

* Within about 10 feet (3 m)

- Battery life may be shortened depending on usage conditions, such as viewing the Caller ID Caller List or directory list, and ambient temperature.
- **Clean the handset and the base unit charge contacts with a soft, dry cloth. Clean if the unit is subject to grease, dust or** high humidity Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until "Recharge battery" is displayed and/or "[▮]" flashes. This will maximize the battery life.
- The battery cannot be overcharged.

3.4. Selecting the Dialing Mode

You can program the dialing mode **using the handset near the base unit**.
If you have touch tone service, set to "Tone". If rotary or pulse service is used, set to "Pulse". Your phone comes from the factory set to "Tone".
Make sure the unit is in the standby mode initially.

1 Press [FUNCTION/EXIT/CH].

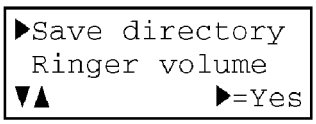

2 Press [▼] or [▲] repeatedly until the arrow points to "Program".

3 Press **FWD/EDIT** [▶] (Yes key).

4 Press [▼] or [▲] repeatedly until the arrow points to "Set dial mode".

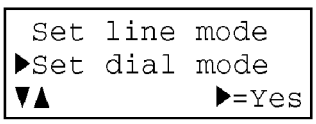

5 Press **FWD/EDIT** [▶] (Yes key).

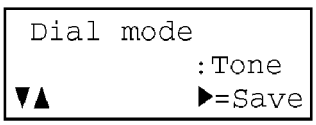

6 Press [▼] or [▲] to select "Pulse" or "Tone".

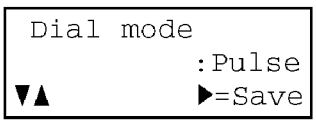

7 Press **FWD/EDIT** [▶] (Save key).
- A beep sounds.
- To return to the standby mode, press [FUNCTION/EXIT/CH].

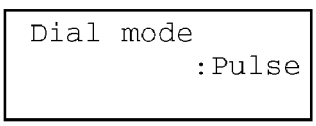

- You can exit the programming mode any time by pressing [FUNCTION/EXIT/CH].
- If the handset has lost communication with the base unit, 3 beeps sound and "No link to base. Place on cradle and try again." is displayed.

3.5. Selecting the Line Mode

If the line is connected to a low voltage system such as a PBX, set to "B". Otherwise the Call Waiting Caller ID Feature may not be used.
Your phone comes from the factory set to "A". **Use the handset near the base unit. Make sure the unit is in the standby mode initially.**

1 Press FUNCTION/EXIT/CH.

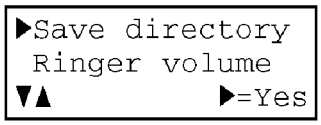

2 Press ▼ or ▲ repeatedly until the arrow points to "Program".

3 Press FWD/EDIT ▶ (Yes key).

4 Press ▼ or ▲ repeatedly until the arrow points to "Set line mode".

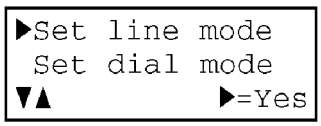

5 Press FWD/EDIT ▶ (Yes key).

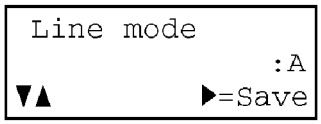

6 Press ▼ or ▲ to select "B" or "A".

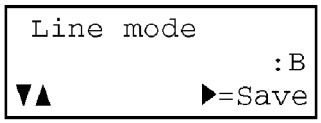

7 Press FWD/EDIT ▶ (Save key).
- A beep sounds.
- To return to the standby mode, press FUNCTION/EXIT/CH.

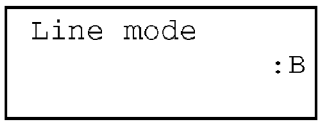

- You can exit the programming mode any time by pressing FUNCTION/EXIT/CH.
- If the handset has lost communication with the base unit, 3 beeps sound and "No link to base. Place on cradle and try again." is displayed.

4. PREPARING THE ANSWERING SYSTEM

4.1. Day and Time Adjustment

Voice Time/Day Stamp: During playback, a synthesized voice will announce the time and day that each message was recorded.

1 Press FUNCTION/EXIT/CH.

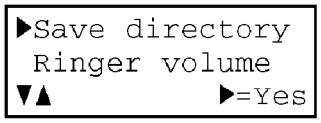

2 Press ▼ or ▲ repeatedly until the arrow points to "Program".

3 Press **FWD/EDIT** ▶ (Yes key).

4 Press ▼ or ▲ repeatedly until the arrow points to "TAD program".

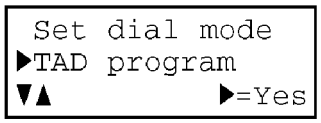

5 Press **FWD/EDIT** ▶ (Yes key).

- The base unit display shows programming options.

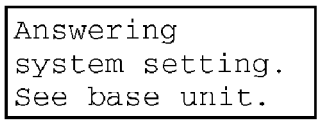

6 Press 0.

- "Set time" is announced.
  If previously adjusted, the day/time will be heard.

Base unit display

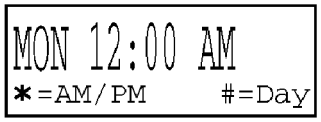

7 Enter the time (hour and minute) using a 4-digit number.
(Ex. To set 9:30, enter "0930".)

8 Press * to select "AM" or "PM".
Press # repeatedly to set the day.

9 Press **FWD/EDIT** ▶ (Save key).

- The unit announces the day/time. The clock starts working.
- If 6 beeps sound, the setting is not correct. Start again from step 4.
- To return to the standby mode, press FUNCTION/EXIT/CH.

- In step 7, you cannot enter numbers greater than 12. **Do not use military time.** (To set 13:00 hours, enter "0100", and select "PM" by pressing *.)

If a power failure occurs, the adjusted time/day will be erased. Readjust the day/time.

For Caller ID service users

For Caller ID service users

- The Caller ID information will re-set the clock after the first ring if the adjusted time is incorrect. However, the day will not be re-set.
- If the time has not previously been set, the Caller ID information will not adjust the clock.
- The Caller ID information will automatically adjust the clock for daylight saving time.

5. OPERATION

5.1. Making Calls

5.1.1. With the Handset

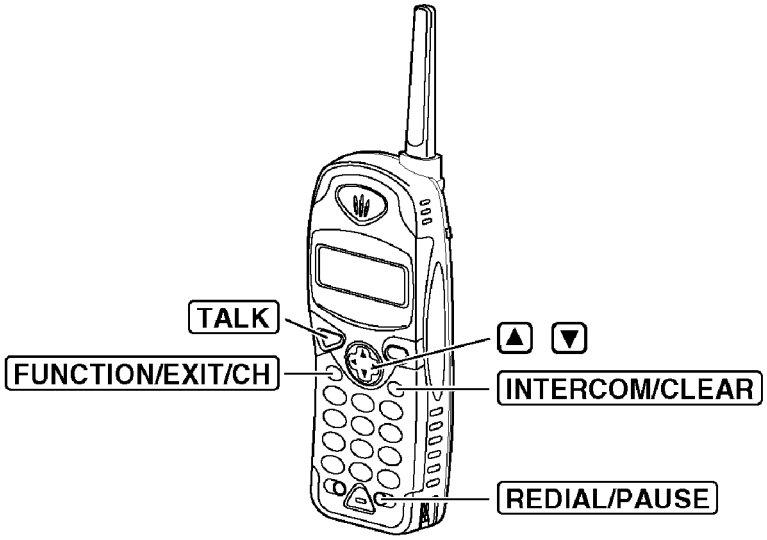

1 Press **TALK**.

```
Talk
```

2 Dial a phone number.
- The dialed number is displayed.
- After a few seconds, the display will show the length of the call and the battery strength.

```
Talk
1112222
```

```
Talk

00-00-00      [■■■]
```

3 To hang up, press **TALK** or place the handset on the base unit.

```
Off

00-01-08      [■■■]
```

- If the handset has lost communication with the base unit, 3 beeps sound and "`No link to base. Place on cradle and try again.`" is displayed.

If noise interferes with the conversation

Press **FUNCTION/EXIT/CH** to select a clearer channel or move closer to the base unit.

To redial the last number dialed on the handset

Press **TALK** and press **REDIAL/PAUSE**.

To dial after confirming the entered number

1 Dial a phone number.
- If you misdial, press INTERCOM/CLEAR and dial again.

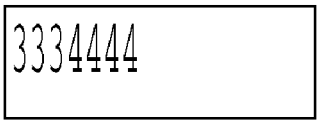

2 Press TALK.
- After a few seconds, the display will show the length of the call and the battery strength.

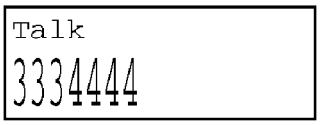

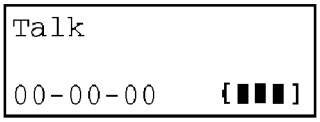

3 To hang up, press TALK or place the handset on the base unit.

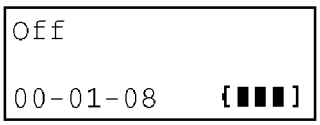

To redial after confirming the last number dialed

Press REDIAL/PAUSE and press TALK.

To adjust the receiver volume while talking

To increase, press ▲.
To decrease press ▼.
- Each time you press ▼ or ▲, the volume level will change.
- The display will return to the length of the call.

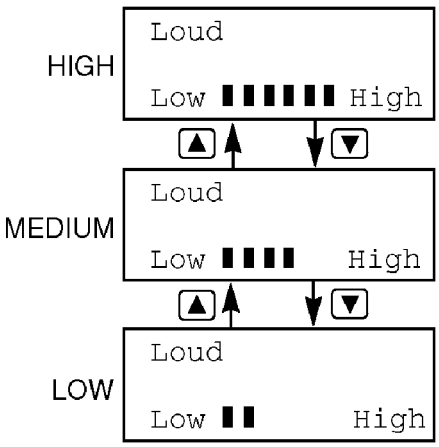

Lighted handset keypad

The handset dialing buttons will light when you press a button or lift the handset off the base unit, and flash when a call is received. The lights will go out a few seconds after pressing a button, lifting the handset or answering a call.

Backlit LCD display

The lighted handset display will stay on for a few seconds after pressing a handset button or lifting the handset off the base unit.

5.1.2. With the Base Unit (Digital Duplex Sperkerphone)

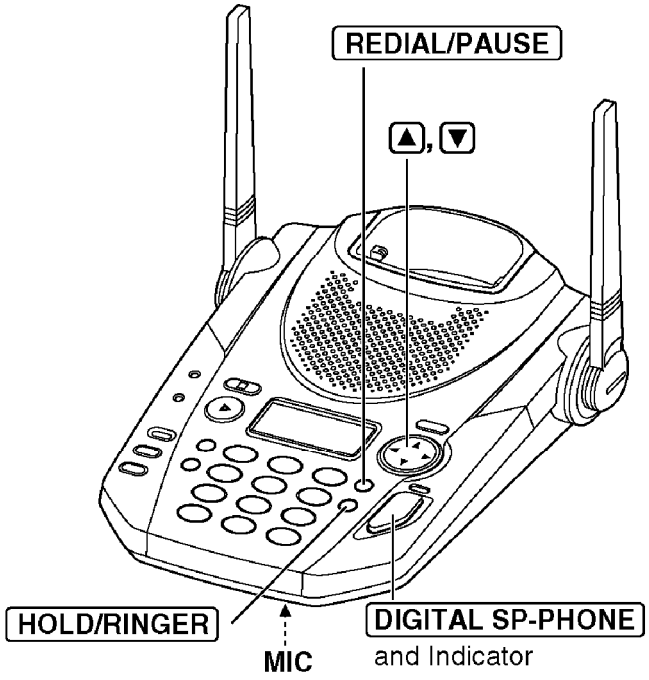

1 Press **DIGITAL SP-PHONE**.
- The DIGITAL SP-PHONE indicator lights.

```
Talk
```

2 Dial a phone number.

```
Talk
1112222
```

3 When the other party answers, talk into the **MIC** (microphone).

```
Talk
00-00-00
```

4 To hang up, press **DIGITAL SP-PHONE**.
- The indicator light goes out.

```
Off
00-00-00
```

- To switch to the handset while using the base unit speakerphone:
  - —If the handset is off the base unit, press **TALK**.
  - —If on the base unit, just lift up.
- During a call using the handset, the call can be switched to the speakerphone by pressing **DIGITAL SP-PHONE**.

Hands-free Digital Duplex Speakerphone
For best performance, please note the following:
- Talk alternately with the caller in a quiet room.
- If the other party has difficulty hearing you, press ▼ to decrease the speaker volume.
- If the other party's voice from the speaker cuts in/out during a conversation, press ▼ to decrease the speaker volume.

To adjust the speaker volume (8 levels) while talking

To increase, press ▲ .
To decrease, press ▼ .

Ex. Level 8

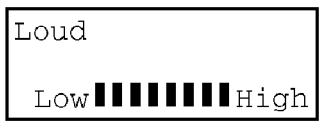

To redial the last number dialed on the base unit

Press DIGITAL SP-PHONE and press REDIAL/PAUSE.

To put a call on hold

Press HOLD/RINGER.

- The DIGITAL SP-PHONE indicator flashes.

To release the hold

From the base unit, press DIGITAL SP-PHONE.

From the handset, press TALK or lift the handset off the base unit.

- If another phone is connected on the same line, you can also release the hold by lifting its handset.

5.2. Answering Calls

When a call is received, the unit rings, "Incoming call" is displayed and the CALLER ID indicator flashes quickly.
If you subscribe to a Caller ID service, the calling party information will be displayed after the first ring. In order to view the Caller ID information, please wait until the second ring to answer a call.

With the Handset

If the handset is off the base unit, press TALK.

- You can also answer a call by pressing any dialing button 0 to 9, * or # (—**Any Key Talk**).

Auto Talk

If you set the Auto Talk feature to ON, you can answer a call by lifting the handset off the base unit without pressing TALK.

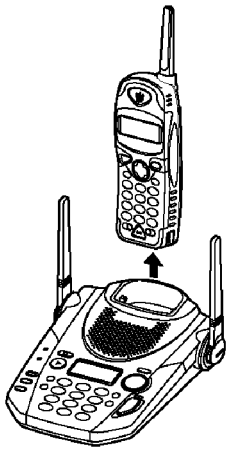

With the Base Unit (Digital Duplex Speakerphone)

1. Press DIGITAL SP-PHONE.
2. Talk into the **MIC**.
3. To hang up, press DIGITAL SP-PHONE.

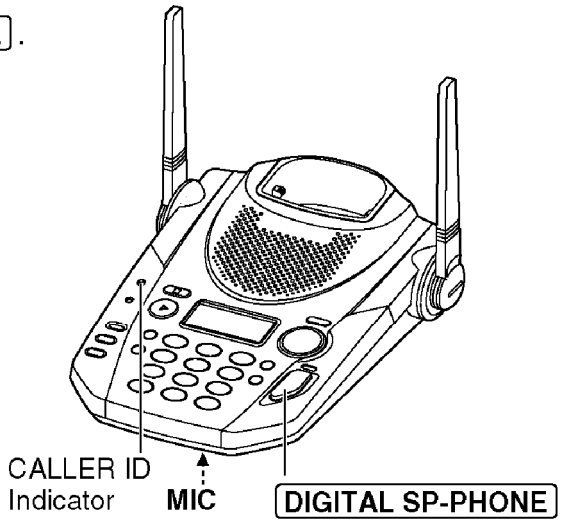

5.3. Flash Button

Pressing [FLASH/CALL WAIT/PLAYBACK] or [FLASH/CALL WAIT] allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional) such as call waiting.

Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times: "700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)". Your phone comes from the factory set to "700 ms". **Make sure the unit is in the standby mode initially.**

1 Press [FUNCTION/EXIT/CH].

2 Press [▼] or [▲] repeatedly until the arrow points to "Program", and press FWD/EDIT [▶] (Yes key).

3 Press [▼] or [▲] repeatedly until the arrow points to "Set flash time", and press FWD/EDIT [▶] (Yes key).

```
 Save DIRECT#
▶Set flash time
▼▲          ▶=Yes
```

4 Press [▼] or [▲] repeatedly until the desired time is displayed, and press FWD/EDIT [▶] (Save key).
- A beep sounds.
- To return to the standby mode, press [FUNCTION/EXIT/CH].

```
 Flash time
          :700ms
▼▲          ▶=Save
```

- You can exit the programming mode any time by pressing [FUNCTION/EXIT/CH].
- If you are connected via a PBX, a longer flash time may be necessary to use PBX functions (transferring a call etc.). Consult your PBX supplier for the correct setting.

5.4. Listening to Message

You can see the total number of recorded messages on the base unit display. If the ANSWER ON indicator flashes, new messages have been recorded.

Listening to only new messages

Press [NEW MESSAGE] briefly.

- The unit announces the number of new messages and plays them back.

Listening to all recorded messages

Press and hold [NEW MESSAGE] until playback starts.

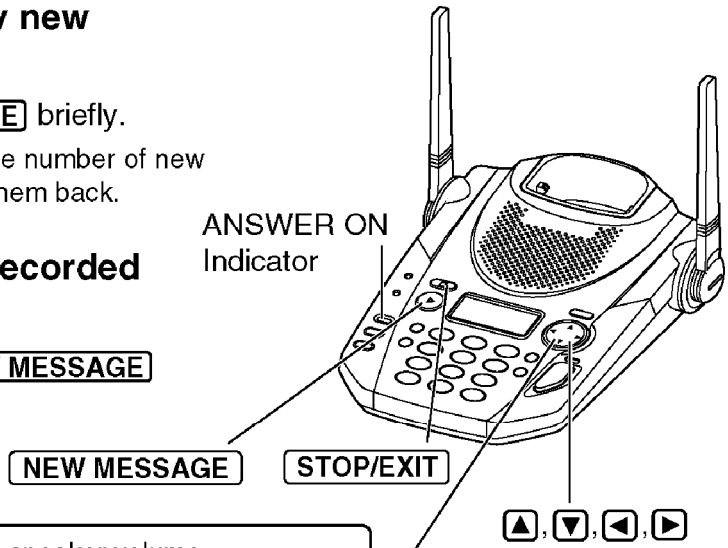

To adjust the speaker volume:
9 levels (0-8) are available while using the answering system. To increase, press [▲]. To decrease, press [▼].

- During each message playback, the message number is displayed. (Ex. While the first message is being played back, "-Message 1-" is displayed.)
- At the end of the last message, "End of final message" is heard. The unit will announce the remaining recording time if it is less than 5 minutes.

During playback

To **repeat** message	**To repeat from the beginning of the message** Press [◀]. •If you press within 5 seconds of playback, the previous message will be played.
To **skip** message	**To skip to the next message** Press [▶].
To **stop** operation	Press [STOP/EXIT]. •To resume playback, press [NEW MESSAGE]. •If you do not press any button for 60 seconds or if you press [STOP/EXIT] again, the unit will return to the standby mode.

For Caller ID service users

During playback, the base unit display will show the name and/or number of the caller whose message is being played.

```
JACK SMITH
1-222-333-4444
 - Message 3 -
```

To call back the displayed number:
During playback, lift the handset and press **TALK** within 10 seconds, or press **DIGITAL SP-PHONE**.

- The unit stops playback and automatically dials the displayed phone number.
- After listening to new incoming messages, "√" will be added to the call entries in the Caller ID Caller List.

From the Handset

If someone else is in the room and you want to listen to the recorded messages privately, you can use the handset.

1 Handset:
Press **FLASH/CALL WAIT/PLAYBACK**.
- The number of new messages is heard on the handset.

2 Base unit:
To listen to new messages, press **NEW MESSAGE** briefly. To listen to all messages, press and hold **NEW MESSAGE** until playback starts.
- The messages will be heard on the handset.
- ◄, ► and **STOP/EXIT** can also be used during playback.

3 When finished, press **FLASH/CALL WAIT/PLAYBACK** or place the handset on the base unit.

5.5. Caller ID Service

This unit is compatible with a Caller ID service offered by your telephone company. If you subscribe to a Caller ID service, the calling party's information will be shown on the handset and base unit displays after the first ring.
The unit can record information of up to 50 different callers in the Caller List. The Caller List information is sorted by the most recent to the oldest call. When the 51st call is received, the first call is deleted.
Using the list, you can automatically call back a caller. You can store the caller's names and

numbers from the Caller List into the directory.
If you subscribe to both Caller ID and Call Waiting services, when a second call is received while talking, the new caller's name and phone number will be displayed.

5.5.1. How caller information is displayed when a call is received

The handset and base unit displays show the caller's name and number after the first ring.

- After you answer the call, the display will show the length of the call.

- Caller information cannot be displayed in the following cases:
  - —If the caller dialed from an area which does not provide a Caller ID service, the display will show "Out of area".
  - —If the caller has requested not to display his/her information, the display will show "Private caller".
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.
- The name display service may not be available in some areas. For further information, please contact your telephone company.

5.5.2. To check the number of new calls

When new calls have been received, the CALLER ID indicator flashes slowly on the base unit. The handset and base unit displays show the number of new calls.

Ex. You have received 10 new calls.

While the handset is on the base unit:

Handset display

```
10 new calls
```

Base unit display

```
 SUN 12:00AM
10 new calls
 0 message
```

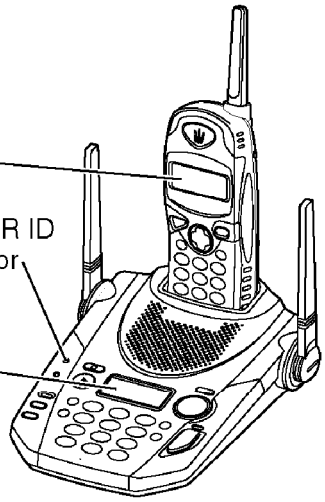

While the handset is off the base unit:

Press ▼ or ▲ to turn the display on.

```
10 new calls
▼▲   ▶=Directory
```

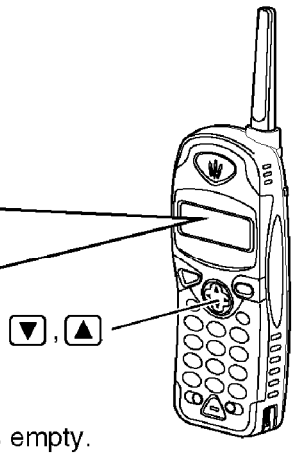

• If "No items stored" is displayed, the Caller List is empty.

5.5.3. Viewing the caller list

You can view the caller list with the handset or the base unit. Caller List information includes the caller's name and phone number, the time and date the call was received, and the number of times that caller called.
Make sure the unit is in the standby mode initially.

With the handset

1 Press ▼ or ▲ to enter the Caller List.

- The display will show, for example, the following.

```
  2 new calls
▼▲    ▶=Directory
```

- You can go to the directory list by pressing **FWD/EDIT** ▶.

2 To search from the most recent call, press ▼.
To search from the oldest call, press ▲.

- To scroll between callers, press ▼ or ▲.

```
JACK SMITH
1-222-333-4444
 3:10P JUN.10
```

3 To exit the list, press **FUNCTION/EXIT/CH**.

- The handset will return to the standby mode.

With the base unit

1 Press ▼ or ▲ to enter the Caller List.

- The display will show, for example, the following.

```
  2 new calls
▼▲    ▶=Directory
```

- You can go to the directory list by pressing ▶.

2 To search from the most recent call, press ▼.
To search from the oldest call, press ▲.

- To scroll between callers, press ▼ or ▲.

```
JACK SMITH
1-222-333-4444
 3:10P JUN.10
```

3 To exit the list, press **STOP/EXIT**.

- The base unit will return to the standby mode.

- If "No items stored" is displayed, the Caller List is empty.
- If there is no name information for a caller, the display will only show the phone number.
- While you are viewing the Caller List with the handset, another person cannot access the list using the base unit, and vice versa.

What "√" means

When the display shows "√", you have already viewed this calling information, answered the call, called back the caller or played back the message. If the same caller calls again, the call entry with "√" will be replaced with the new call entry.

```
JACK SMITH
1-222-333-4444
 3:10P JUN.10 √
```

If a caller calls more than once

The number of times the same caller called is displayed (×2 to ×9). The date and time of the most recent call will be recorded. After checking, ×2 to ×9 will be replaced with "√".

```
JACK SMITH
1-222-333-4444
 3:10P JUN.10 ×3
```

5.5.4. Calling back from the caller list

With the handset

1 Press ▼ or ▲ to enter the Caller List.



2 Press ▼ or ▲ repeatedly to find the desired caller.



3 Press **TALK**.

- The displayed phone number is dialed automatically.



With the base unit

1 Press ▼ or ▲ to enter the Caller List.



2 Press ▼ or ▲ repeatedly to find the desired caller.



3 Press **DIGITAL SP-PHONE**.

- The displayed phone number is dialed automatically.



- In some cases, you may have to edit the number before dialing. (Ex. You may have to delete "1" and the area code.)
- If a phone number is not displayed in the caller information, you cannot call back that caller.

5.5.5. Editing the caller's phone number

You can edit a phone number into one of 4 patterns using the handset or the base unit.

Make sure the unit is in the standby mode initially.

5.5.5.1. With the handset

1 Press ▼ or ▲ to enter the Caller List.

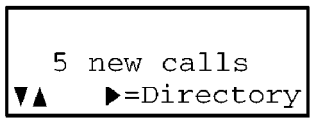

2 Press ▼ or ▲ repeatedly to find the desired caller, and press **FWD/EDIT** ▶.

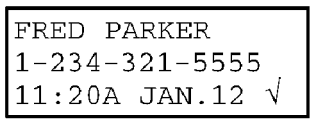

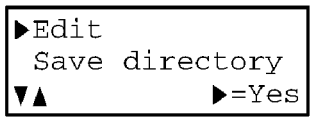

3 While the arrow points to "Edit", press **FWD/EDIT** ▶ (Yes key).

4 Press ▶ (Edit key) to select a pattern.

- Each time you press **FWD/EDIT** ▶ the number is rearranged into one of 4 different patterns.

ⓐ [Phone no.]

ⓑ [Area code] – [Phone no.]

ⓒ 1 – [Phone no.]

ⓓ 1 – [Area code] – [Phone no.]

- The order in which patterns ⓐ – ⓓ are displayed depends on how the telephone number is displayed in step 2.

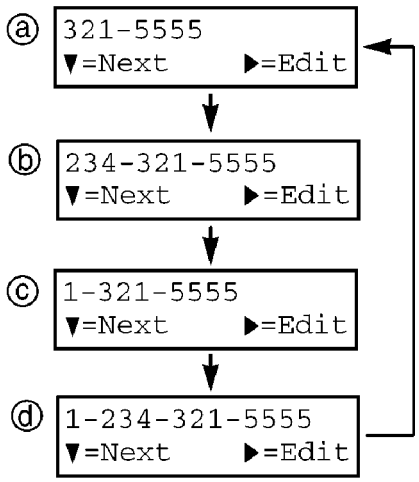

5 After editing the number, you can continue with calling back or storing procedures. To call back, press **TALK**.
To store the number in the directory, press ▼ (Next key), and press **FWD/EDIT** ▶ (Save key).

- The number edited in step 4 will not be maintained in the Caller List.

5.5.5.2. With the base unit

1 Press ▼ or ▲ to enter the Caller List.

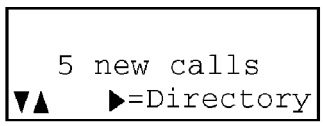

2 Press ▼ or ▲ repeatedly to nd the desired caller.

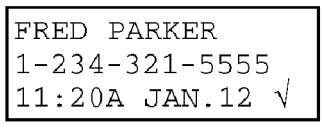

3 Press **GREETING/EDIT** to select a pattern.

- Each time you press **GREETING/EDIT**, the number is rearranged into one of 4 different patterns.

ⓐ Phone no.

ⓑ Area code – Phone no.

ⓒ 1 – Phone no.

ⓓ 1 – Area code – Phone no.

- The order in which patterns ⓐ–ⓓ are displayed depends on how the telephone number is displayed in step 2.

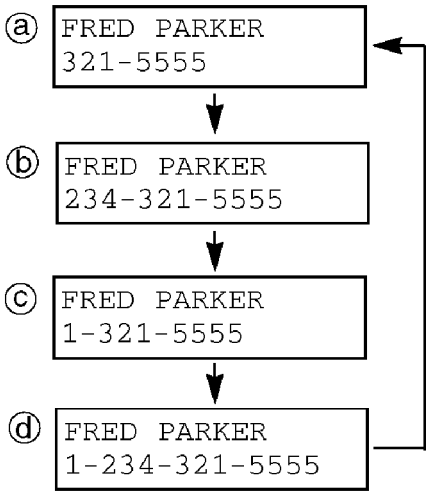

4 After editing the number, you can continue with calling back. Press **DIGITAL SP-PHONE**.

- The number edited in step 3 will not be maintained in the Caller List.

5.5.6. Storing caller list information in the directory

You can store names and phone numbers that are in the Caller List into the directory.

Storing must be carried out with the handset.
Make sure the unit is in the standby mode initially.

1 Press ▼ or ▲ to enter the Caller List.



2 Press ▼ or ▲ repeatedly to find the caller you want to store in the directory, and press **FWD/EDIT** ▶ (`Yes` key).



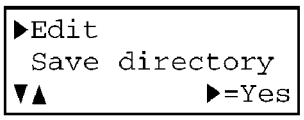

3 Press ▼ or ▲ to select "`Save directory`", and press **FWD/EDIT** ▶ (`Yes` Key).

If there is no name information for the caller, "`Enter name`" will be displayed.

a) If a name is not required, press ▼ (`Next` key) and press **FWD/EDIT** ▶ (`Save` key).

b) If a name is required, enter the name. When finished, press ▼ (`Next` key) and press **FWD/EDIT** ▶ (`Save` key).

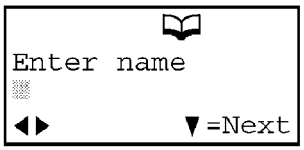

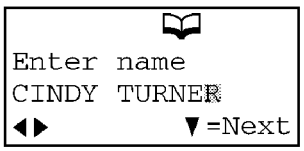

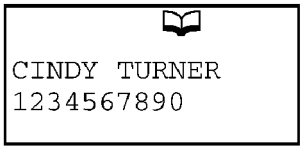

- You can exit the programming mode any time by pressing **FUNCTION/EXIT/CH**.
- If the display shows "`Directory full`" in step 3, press **FUNCTION/EXIT/CH** to exit the list.
  After the maximum of 50 items has been stored "Directory full" is also displayed.
- You cannot store caller information in the directory if a phone number is not displayed.
- If 3 beeps sound and the display shows "`Save error`", move closer to the base unit and start again from step 1.

5.5.7. Erasing caller list information

After checking the Caller List, you can erase some or all of the entries with the handset or the base unit.
Make sure the unit is in the standby mode initially.

To erase a specific caller from the Caller List

With the handset:

1 Press ▼ or ▲ to enter the Caller List.

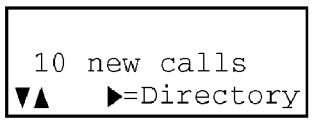

2 Press ▼ or ▲ repeatedly to find the caller you want to erase from the Caller List.

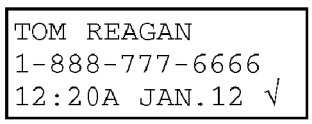

3 Press **INTERCOM/CLEAR**.

- A beep sounds and the information is erased.
- To erase other items, repeat from step 2.
- To return to the standby mode, press **FUNCTION/EXIT/CH**.

With the base unit:

1 Press ▼ or ▲ to enter the Caller List.

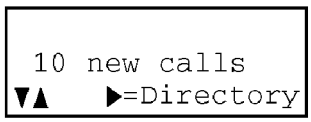

2 Press ▼ or ▲ repeatedly to find the caller you want to erase from the Caller List.

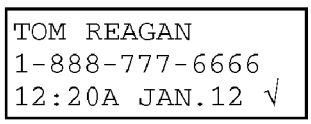

3 Press **ERASE/CLEAR**.

- A beep sounds and the information is erased.
- To erase other items, repeat from step 2.
- To return to the standby mode, press **STOP/EXIT**.

To erase all entries in the Caller List

Before erasing all entries, make sure that "0 new call" is displayed.

With the handset:

1 Press ▼ or ▲ to enter the Caller List.

```
  0 new call
▼▲    ▶=Directory
```

2 Press **INTERCOM/CLEAR**.

```
▶Exit
 All clear
▼▲          ▶=Yes
```

3 Press ▼ or ▲ to select "All clear".

```
 Exit
▶All clear
▼▲          ▶=Yes
```

4 Press **FWD/EDIT** ▶ (Yes key) or **INTERCOM/CLEAR**.

```
All clear
```

•A beep sounds and all entries are erased.

With the base unit:

1 Press ▼ or ▲ to enter the Caller List.

```
  0 new call
▼▲    ▶=Directory
```

2 Press **ERASE/CLEAR**.

```
▶Exit
 All clear
▼▲          ▶=Yes
```

3 Press ▼ or ▲ to select "All clear".

```
 Exit
▶All clear
▼▲          ▶=Yes
```

4 Press ▶ (Yes key) or **ERASE/CLEAR**.

```
All clear
```

•A beep sounds and all entries are erased.

6. DISASSEMBLY INSTRUCTIONS

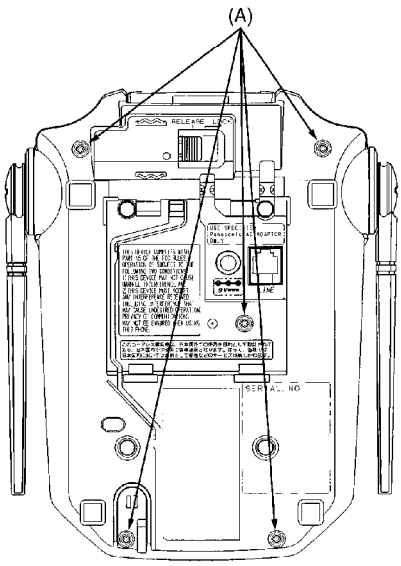

Fig. 1

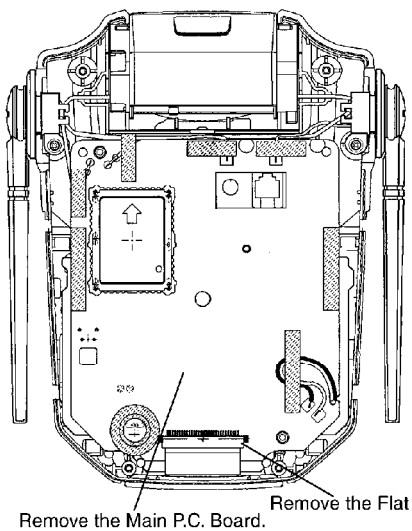

Fig. 2

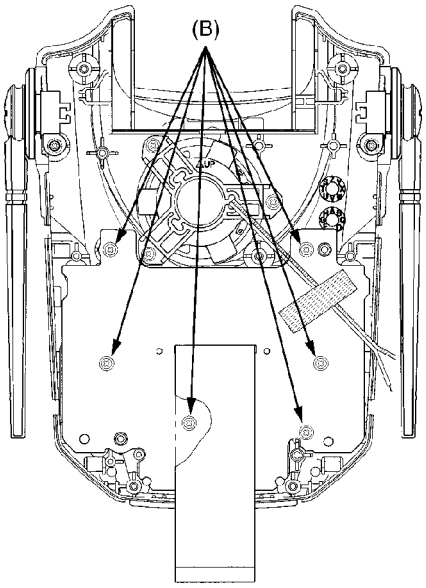

Fig. 3

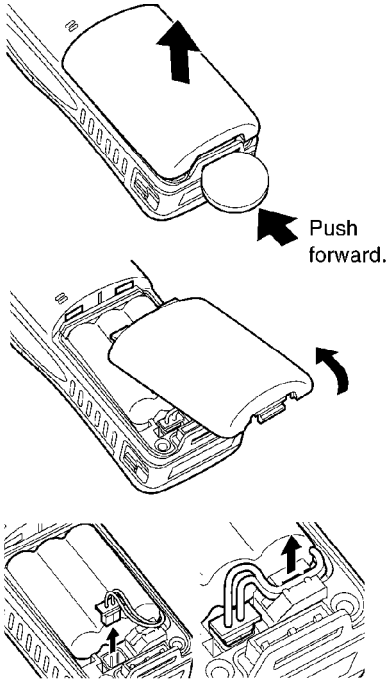

Fig. 4

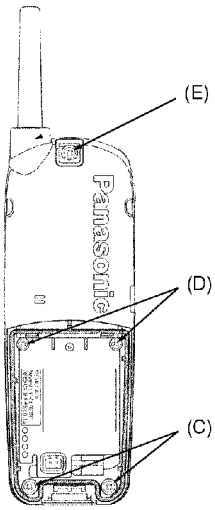

Fig. 5

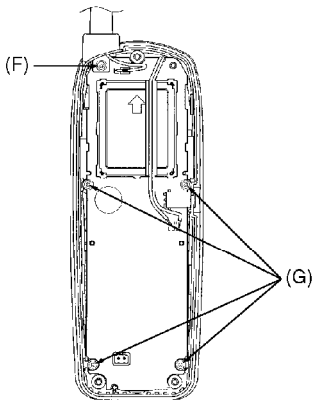

Fig. 6

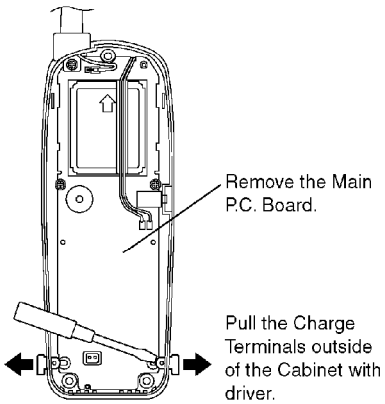

Fig. 7

Ref. No.	Procedure	Shown in Fig -.	To remove -.	Remove -.
1	1	1	Lower Cabinet	Screws (2.6 × 14).....(A) × 5
2	1, 2	2	Main P.C. Board	Remove the Main P.C. Board Remove the Flat Cable
3	1 ~ 3	3	Operation P.C. Board	Screws (2.6 × 8).....(B) × 6
4	4	4	Battery Cover	Remove the Battery Cover
5	4, 5	5	Rear Cabinet	Screws (2.6 × 12).....(C) × 2 Screws (2 × 8).....(D) × 2 Screw (2.6 × 12).....(E) × 1
6	4 ~ 6	6	Antenna	Screw (2.6 × 12).....(F) × 1
			Main P.C. Board	Screws (2 × 8).....(G) × 4
7	4 ~ 7	7	Main P.C. Board	Pull the Charge Terminals outside Remove the Main P.C. Board

7. ASSEMBLY INSTRUCTIONS

7.1. Assembly the LCD to P.C. Board (Base Unit)

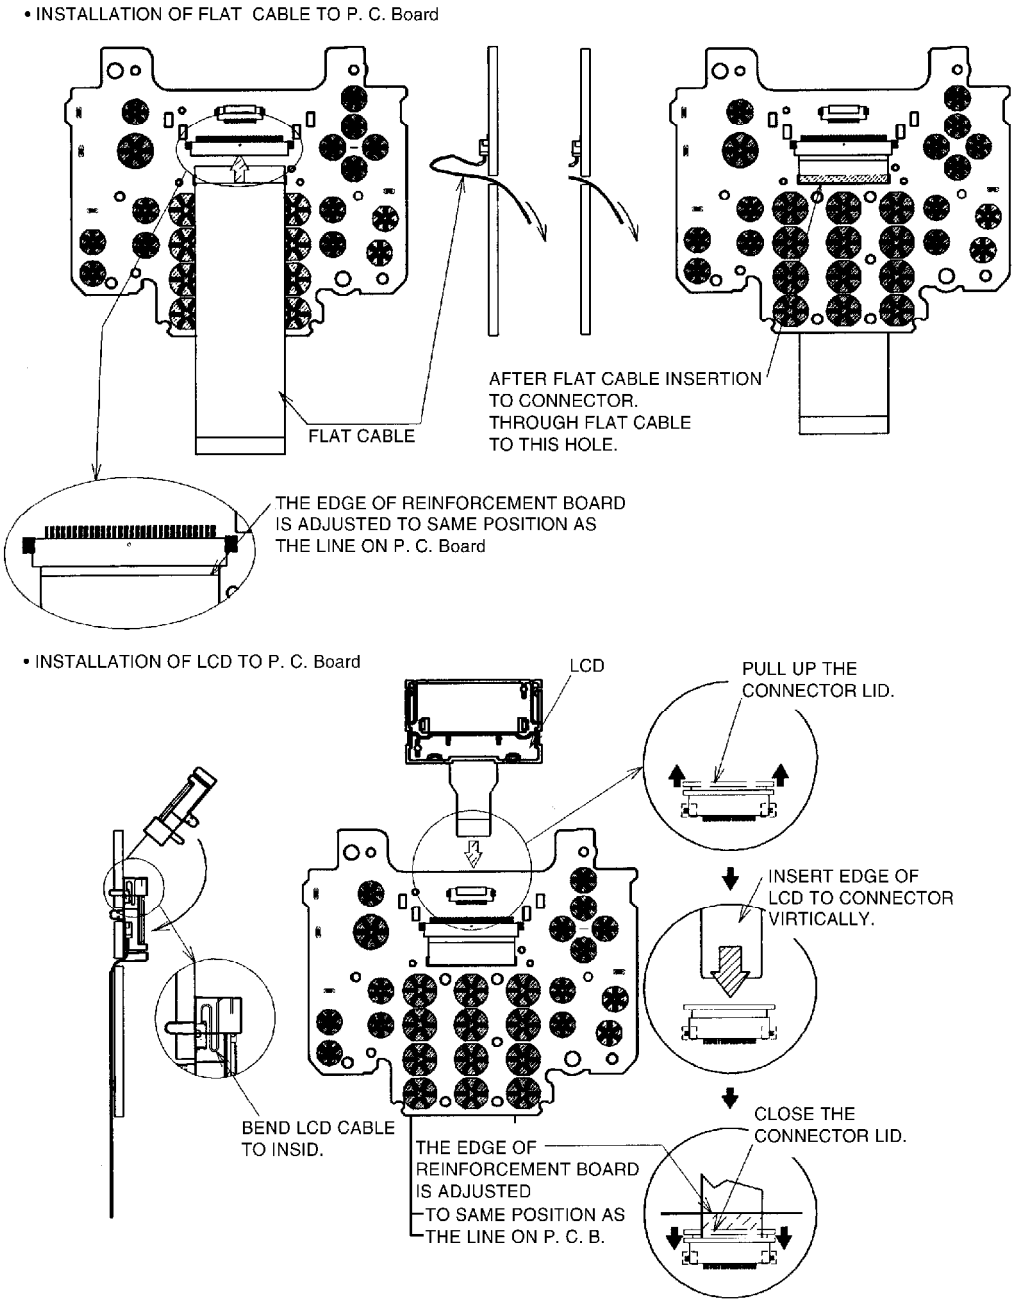

7.2. Asseembly the LCD to P.C. Board (Handset)

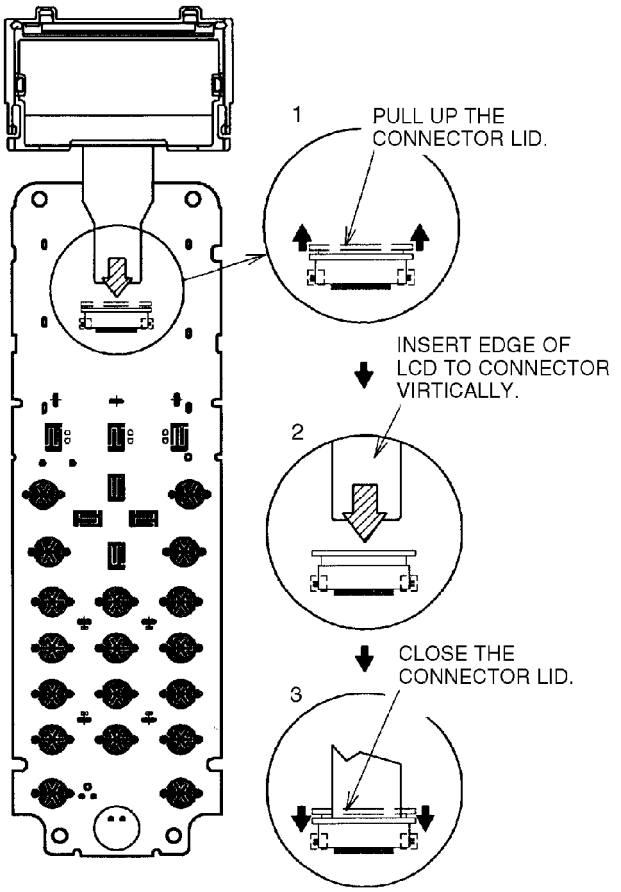

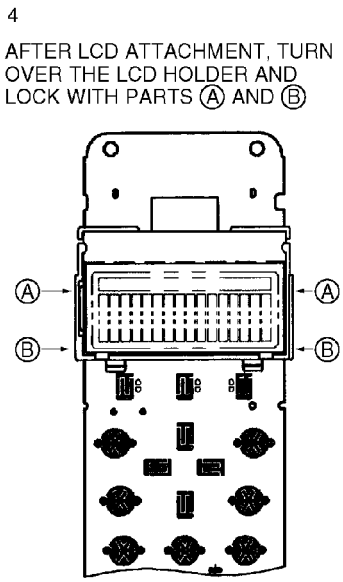

7.3. How To Check Splash Resistance

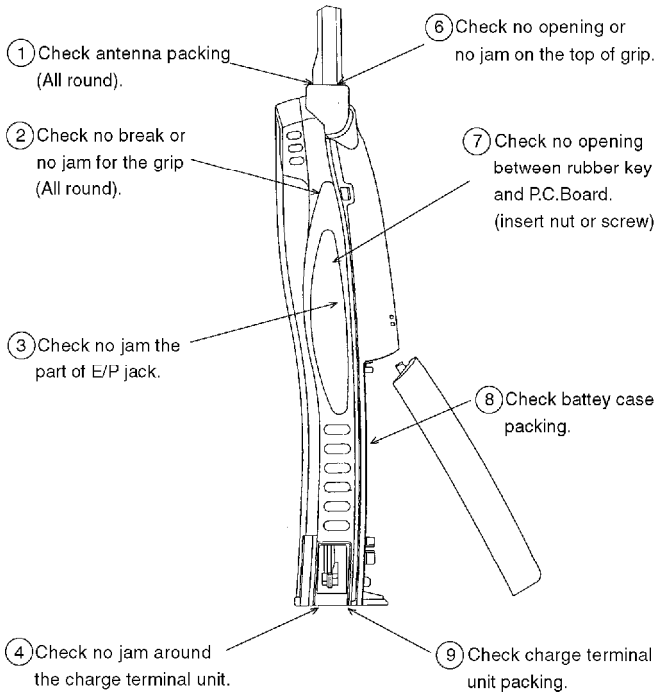
1 Check antenna packing (All round).
2 Check no break or no jam for the grip (All round).
3 Check no jam the part of E/P jack.
4 Check no jam around the charge terminal unit.
6 Check no opening or no jam on the top of grip.
7 Check no opening between rubber key and P.C.Board. (insert nut or screw)
8 Check battey case packing.
9 Check charge terminal unit packing.

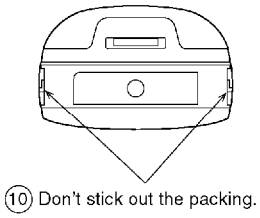

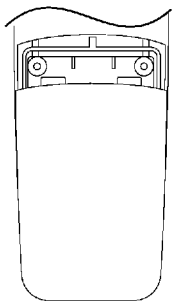

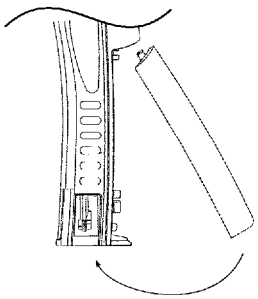

11 Attach carefly not to turn up packing.

7.4. Replace the RF unit

For HS

Follow this procedure below when replacing HS RF unit.

1. **Remove speaker cables of LCD unit on HS main board. And remove LCD unit.**
2. **Remove solder on six legs of RF unit.**
3. **Remove solder on all pads of RF unit.**
4. **Replace defective RF unit with new HS RF unit.**

   NOTE:

   Do not use BU RF unit for HS one.
   HS RF unit is different from BU one.
5. **Solder all pads of RF unit.**

6. Solder six RF legs.

7. Put LCD unit and solder speaker wire.

NOTE:

Speaker wire has polarity.

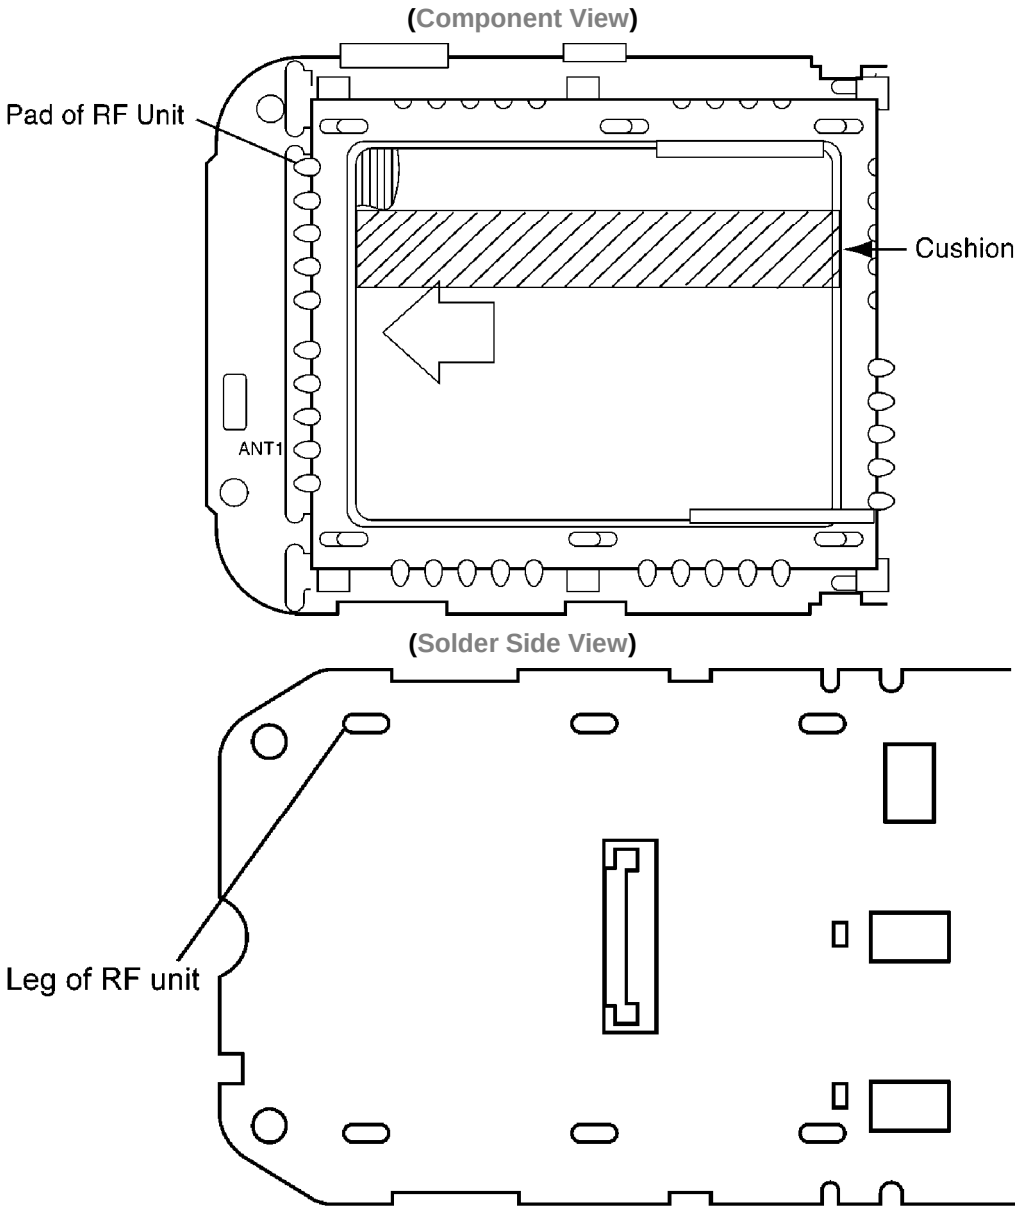

8. TROUBLESHOOTING GUIDE

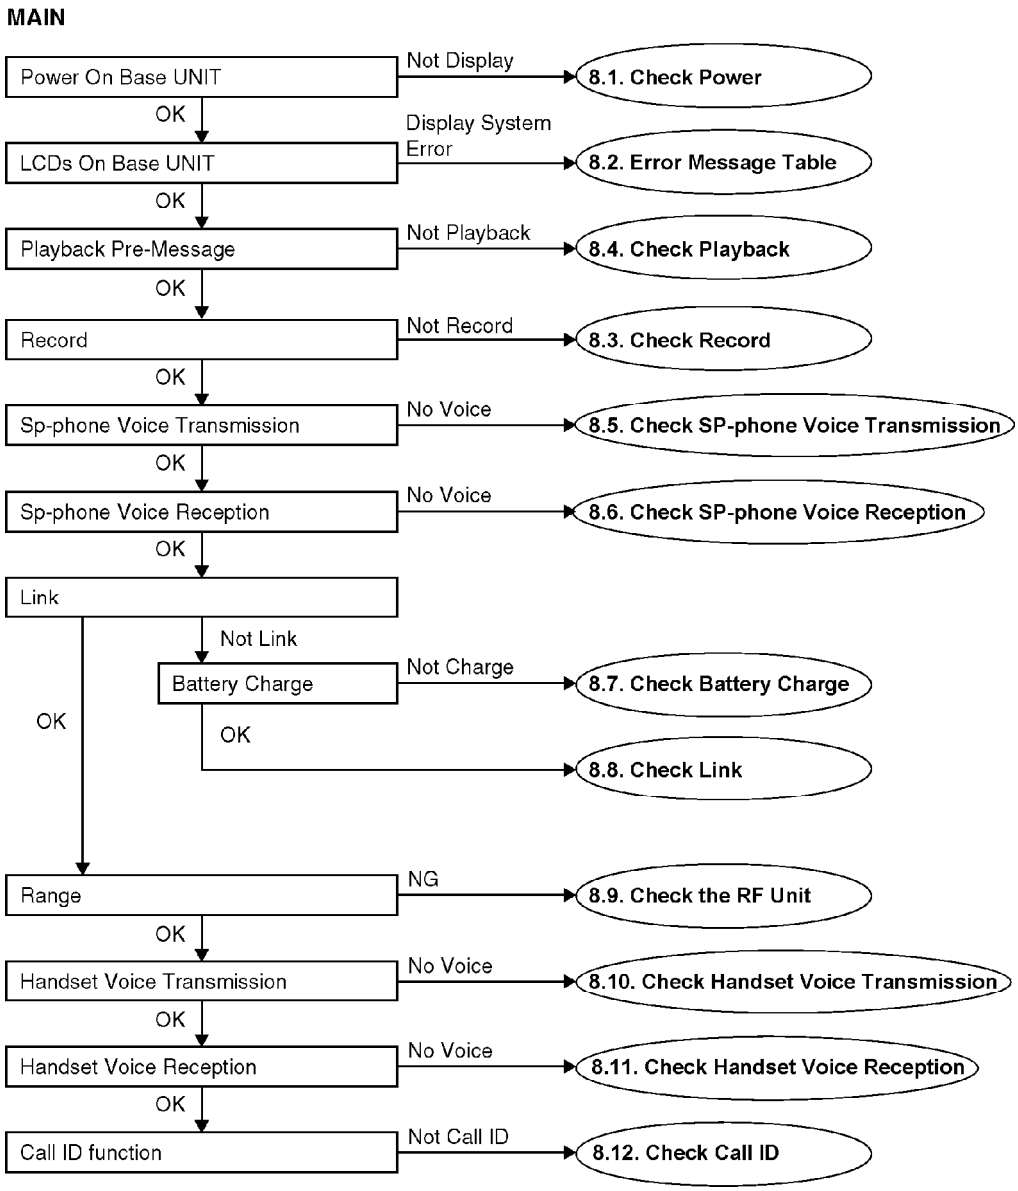

8.1. Check Power

BASE UNIT

Is the AC Adaptor inserted into 120V outlet?

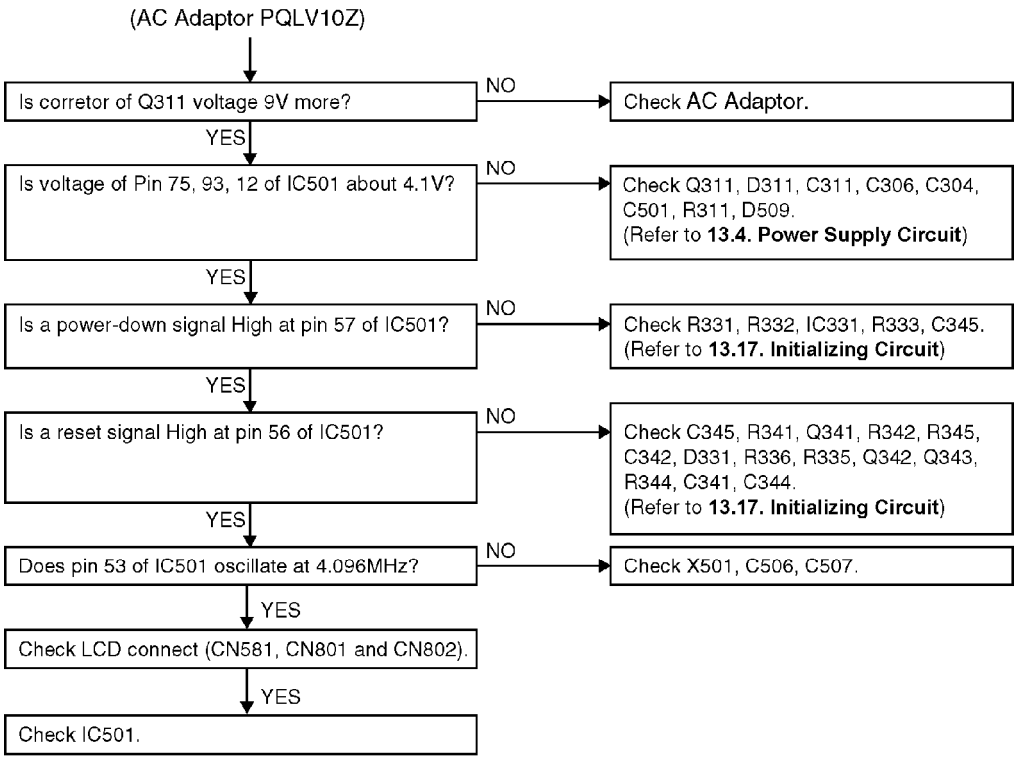
(AC Adaptor PQLV10Z)
Is corretor of Q311 voltage 9V more?
NO
Check AC Adaptor.
YES
Is voltage of Pin 75, 93, 12 of IC501 about 4.1V?
NO
Check Q311, D311, C311, C306, C304, C501, R311, D509. (Refer to 13.4. Power Supply Circuit)
YES
Is a power-down signal High at pin 57 of IC501?
NO
Check R331, R332, IC331, R333, C345. (Refer to 13.17. Initializing Circuit)
YES
Is a reset signal High at pin 56 of IC501?
NO
Check C345, R341, Q341, R342, R345, C342, D331, R336, R335, Q342, Q343, R344, C341, C344. (Refer to 13.17. Initializing Circuit)
YES
Does pin 53 of IC501 oscillate at 4.096MHz?
NO
Check X501, C506, C507.
YES
Check LCD connect (CN581, CN801 and CN802).
YES
Check IC501.

8.2. Error Message Table

Display	Symptom	Remedy
System error 1	The initialization was tried, but it could not be done.	1. Confirm Flash Memory is equipped. 2. Confirm the connection of Flash Memory. 3. Confirm the power supply of Flash Memory. When no error is found in above-mentioned items, Flash Memory has a defect. Replace Flash Memory.
System error 2	The defect of Flash Memory was detected.	When Flash Memory has the fatal detect, replace Flash Memory. This error hardly occurs.
System error 3 System error 9	When the adjustment data was checked, an error was detected. (The adjustment data may not be written.)	1. Confirm Flash Memory is equipped. 2. Confirm the connection of Flash Memory. 3. Confirm the power supply of Flash Memory. When no error is found in above-mentioned items, Flash Memory has a defect. Replace Flash Memory.
System error 4	The defect of DSP was detected. (The chip in DSP may have a defect.)	1. Confirm the connection of DSP. 2. Confirm the oscillation frequency of DSP. When no error is found in above-mentioned items, DSP has a defect. Replace DSP.
System error 5 System error 6	The defect of DSP was detected.	When DSP has the fatal defect, replace DSP. This error hardly occurs.
System error 7	The defect of synthesized voice was detected. (The synthesized voice may not be written.)	1. Confirm Flash Memory is equipped. 2. Confirm the connection of Flash Memory. 3. Confirm the power supply of Flash Memory. When no error is found in above-mentioned items, Flash Memory has a defect. Replace Flash Memory.

NOTE:

Flash memory is IC571. DSP is IC501.

8.3. Check Record

BASE UNIT

Not record Greeting Message

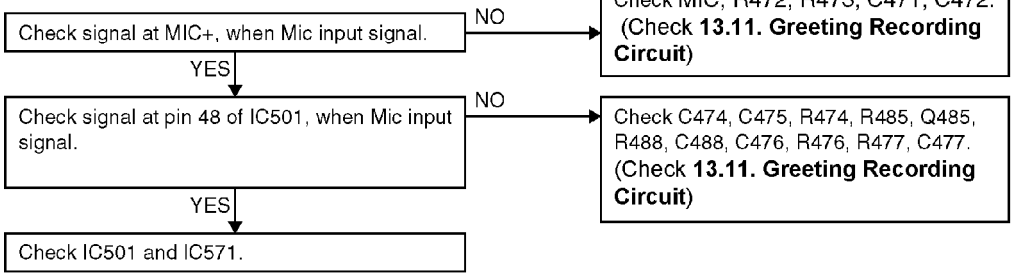
Check signal at MIC+, when Mic input signal.
NO
Check MIC, R472, R473, C471, C472. (Check 13.11. Greeting Recording Circuit)
YES
Check signal at pin 48 of IC501, when Mic input signal.
NO
Check C474, C475, R474, R485, Q485, R488, C488, C476, R476, R477, C477. (Check 13.11. Greeting Recording Circuit)
YES
Check IC501 and IC571.

Not record Incoming Message

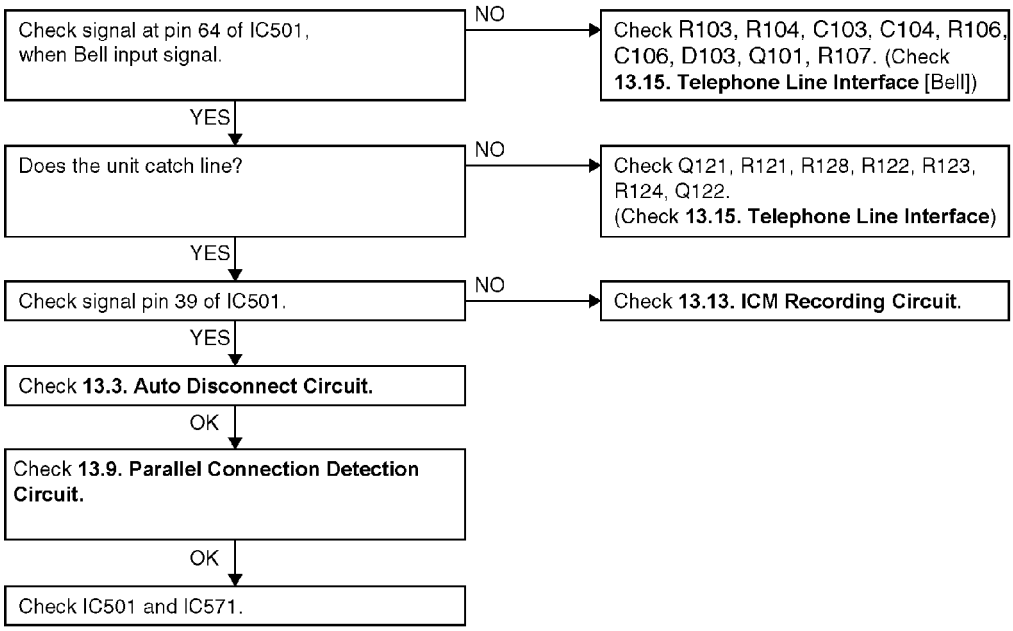
Check signal at pin 64 of IC501, when Bell input signal.
NO
Check R103, R104, C103, C104, R106, C106, D103, Q101, R107. (Check 13.15. Telephone Line Interface [Bell])
YES
Does the unit catch line?
NO
Check Q121, R121, R128, R122, R123, R124, Q122. (Check 13.15. Telephone Line Interface)
YES
Check signal pin 39 of IC501.
NO
Check 13.13. ICM Recording Circuit.
YES
Check 13.3. Auto Disconnect Circuit.
OK
Check 13.9. Parallel Connection Detection Circuit.
OK
Check IC501 and IC571.

8.4. Check Playback

BASE UNIT

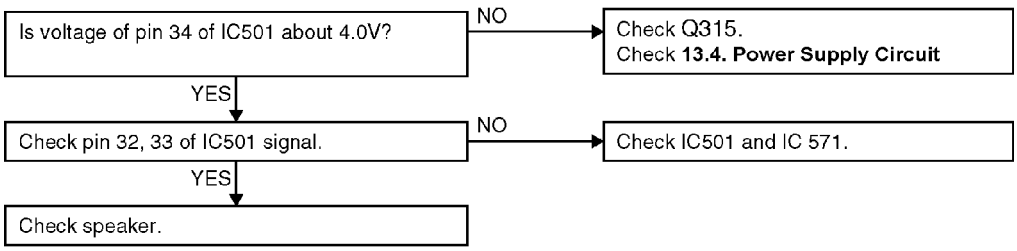

8.5. Check SP-phone Voice Transmission

BASE UNIT

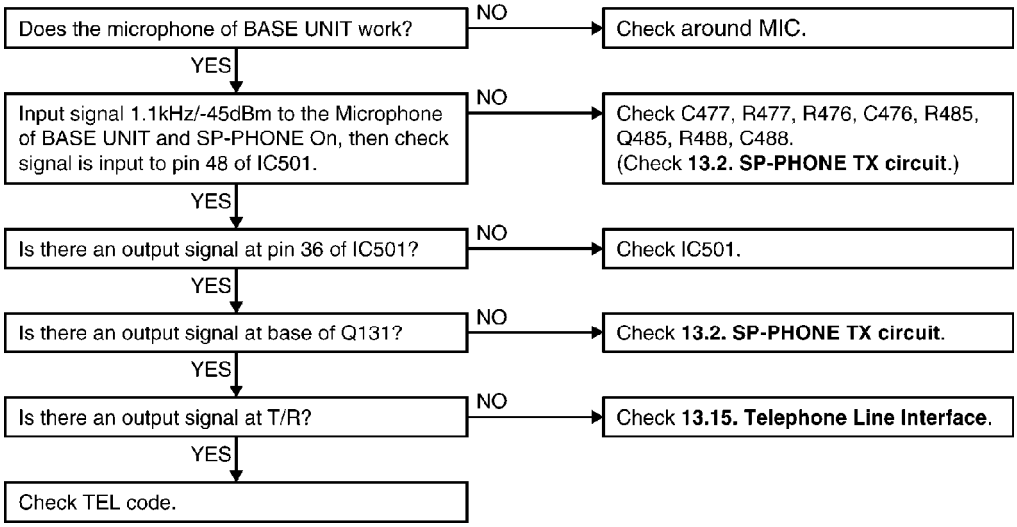
Does the microphone of BASE UNIT work?
NO
Check around MIC.
YES
Input signal 1.1kHz/-45dBm to the Microphone of BASE UNIT and SP-PHONE On, then check signal is input to pin 48 of IC501.
NO
Check C477, R477, R476, C476, R485, Q485, R488, C488.
(Check 13.2. SP-PHONE TX circuit.)
YES
Is there an output signal at pin 36 of IC501?
NO
Check IC501.
YES
Is there an output signal at base of Q131?
NO
Check 13.2. SP-PHONE TX circuit.
YES
Is there an output signal at T/R?
NO
Check 13.15. Telephone Line Interface.
YES
Check TEL code.

8.6. Check SP-phone Voice Reception

BASE UNIT

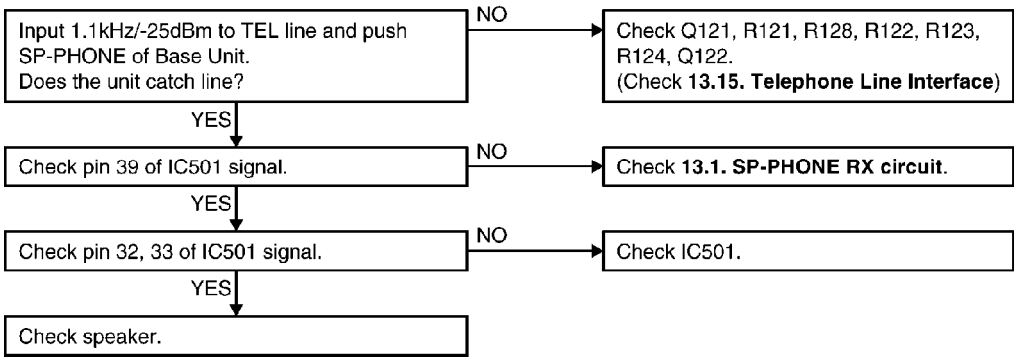

8.7. Check Battery Charge

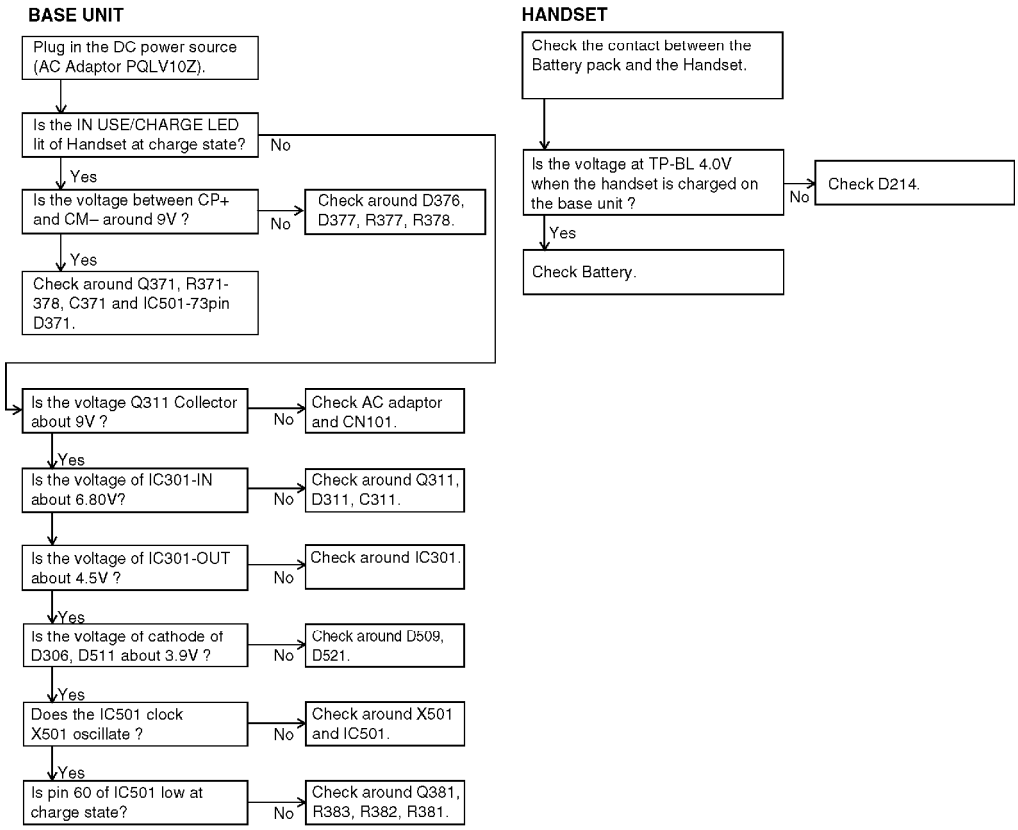
BASE UNIT
Plug in the DC power source (AC Adaptor PQLV10Z).
Is the IN USE/CHARGE LED lit of Handset at charge state?
No
Yes
Is the voltage between CP+ and CM– around 9V ?
No
Check around D376, D377, R377, R378.
Yes
Check around Q371, R371-378, C371 and IC501-73pin D371.
HANDSET
Check the contact between the Battery pack and the Handset.
Is the voltage at TP-BL 4.0V when the handset is charged on the base unit ?
No
Check D214.
Yes
Check Battery.
Is the voltage Q311 Collector about 9V ?
No
Check AC adaptor and CN101.
Yes
Is the voltage of IC301-IN about 6.80V?
No
Check around Q311, D311, C311.
Is the voltage of IC301-OUT about 4.5V ?
No
Check around IC301.
Yes
Is the voltage of cathode of D306, D511 about 3.9V ?
No
Check around D509, D521.
Yes
Does the IC501 clock X501 oscillate ?
No
Check around X501 and IC501.
Yes
Is pin 60 of IC501 low at charge state?
No
Check around Q381, R383, R382, R381.

NOTE:

- CP/CM: Refer to Base Unit Reference Drawing.

- TP-BL: Refer to Handset Reference Drawing.

8.8. Check Link

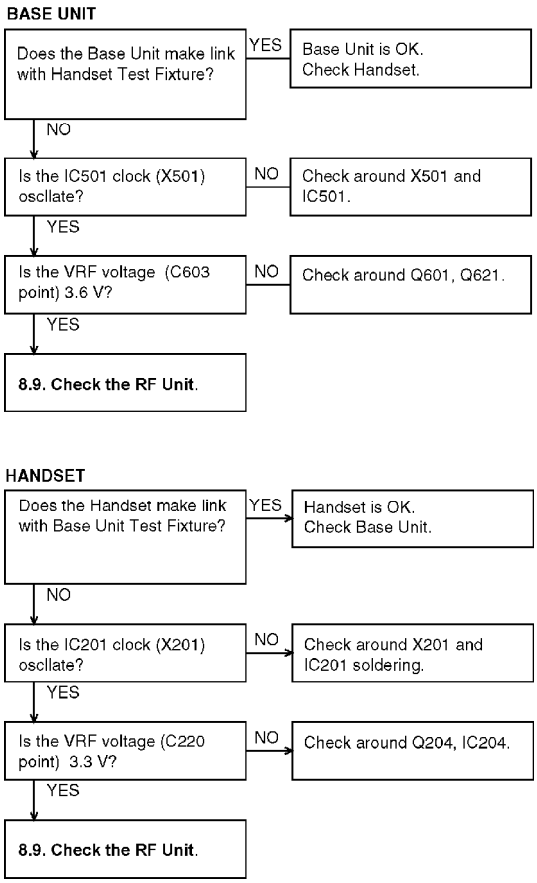

8.9. Check the RF Unit

8.9.1. Finding out the Defective Unit

Prepare HS Test Fixture and BU Test Fixture. Place the HS Test Fixture on the cradle of the base unit for checking, then confirm that they are linked. Place the handset for checking on the cradle of the BU Test Fixture, then confirm that they are linked. How to confirm the link is as follows; press the TALK button and confirm Handset in use' is displayed on BU LCD.

8.9.2. Handset Test Fixture for Base Unit

Test Fixture has two mode.

1. TEST mode: (RF Power Low mode)
The switch of Test Fixture changed with TEST mode side.
Then Test Fixture is in TEST mode.

2. Normal mode: (RF Power Normal mode)
The switch of Test Fixture changed with Normal mode side.
Then Test Fixture is in Normal mode.

NOTE:

Audio is coming from Receiver whether switch is TEST mode or

Normal mode.

This test simulates the handset is at very large distance from the base unit and the TX signal from handset to base is very small.
Procedure: First place handset Test Fixture on base under test to charge (exchange security code); then remove handset from base after you hear a beep; then press TALK to operate. The LCD will show TALK. This means that the base unit sensitivity is OK. If a beep is not heard, Replace the RF unit.

NOTE:
1) Only KX-TG2583/2563/2553/2403 with marks HS Test Fixture can be used for troubleshooting. Regular KX-TG2583/2563/2553/2403 production samples does not have the switch needed for troubleshooting.

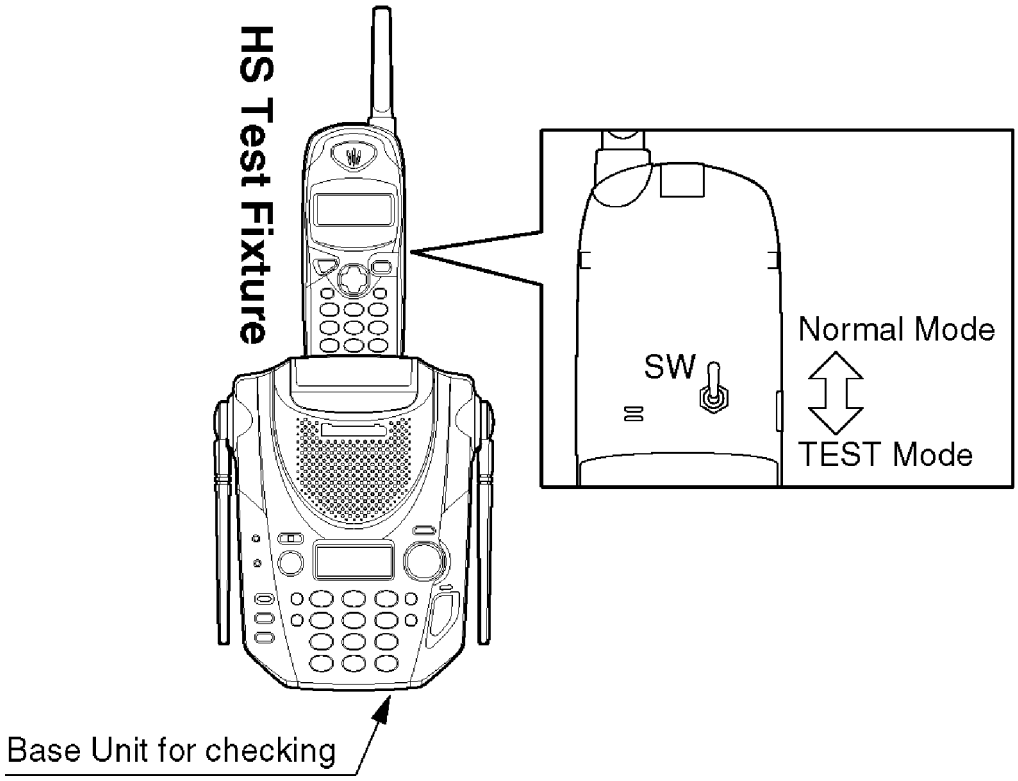

8.9.2.1. Handset Test Fixture Reference Drawing

As for TEST fixture, only the switch as shown in a figure is connected to the mass-production set.

NOTE:

SW: ON (Base Unit: normal)
10 m more: No Link
5 m less: Link

8.9.3. Base Unit Test Fixture for Handset

Switch to control normal mode and test modes on this BU Test Fixture.
Test Fixture has two mode.

1. TEST mode: (RF Power Low mode)
The switch of Test Fixture changed with TEST mode side.
Then Test Fixture is in TEST mode.

2. Normal mode: (RF Power Normal mode)
The switch of Test Fixture changed with TEST mode side.
Then Test Fixture is in Normal mode.

NOTE:

Audio is coming from Receiver whether switch is inserted or not.

This test simulates the handset is at very large distance from the base unit and the TX signal from base to handset is very small.
Procedure: First, place handset under test to charge (exchange security code), then remove handset from base after you hear a beep. Press TALK button on handset and if it links with the base, then this handset sensitivity is OK. If a beep is not heand, Replace the RF unit.

NOTE:
1) Only KX-TG2583/2563/2553/2403 with marks BU Test Fixture can be used for troubleshooting. Regular KX-TG2583/2563/2553/2403 production samples does not have the software needed for troubleshooting.

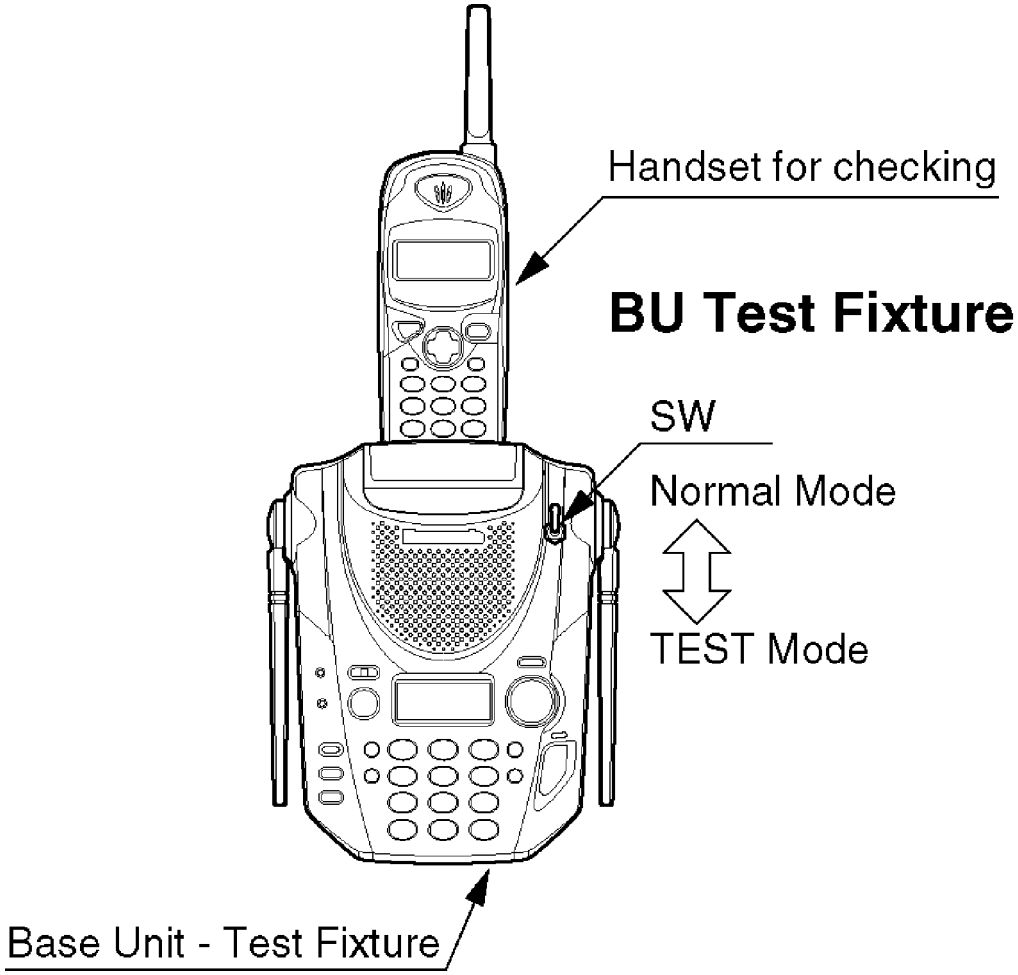

8.9.3.1. Base Unit Test Fixture Reference Drawing

As for TEST fixture, only the switch as shown in a figure is connected to the mass-production set.

Note:
SW : ON (Handset : Nomal)
10m more : No Link
5m less : Link

8.9.4. RF Check Flowchart

Each item (1a ~ 6) of RF Check Flowchart is correspond to Check Table for RF Block. Please refer each item one by one.

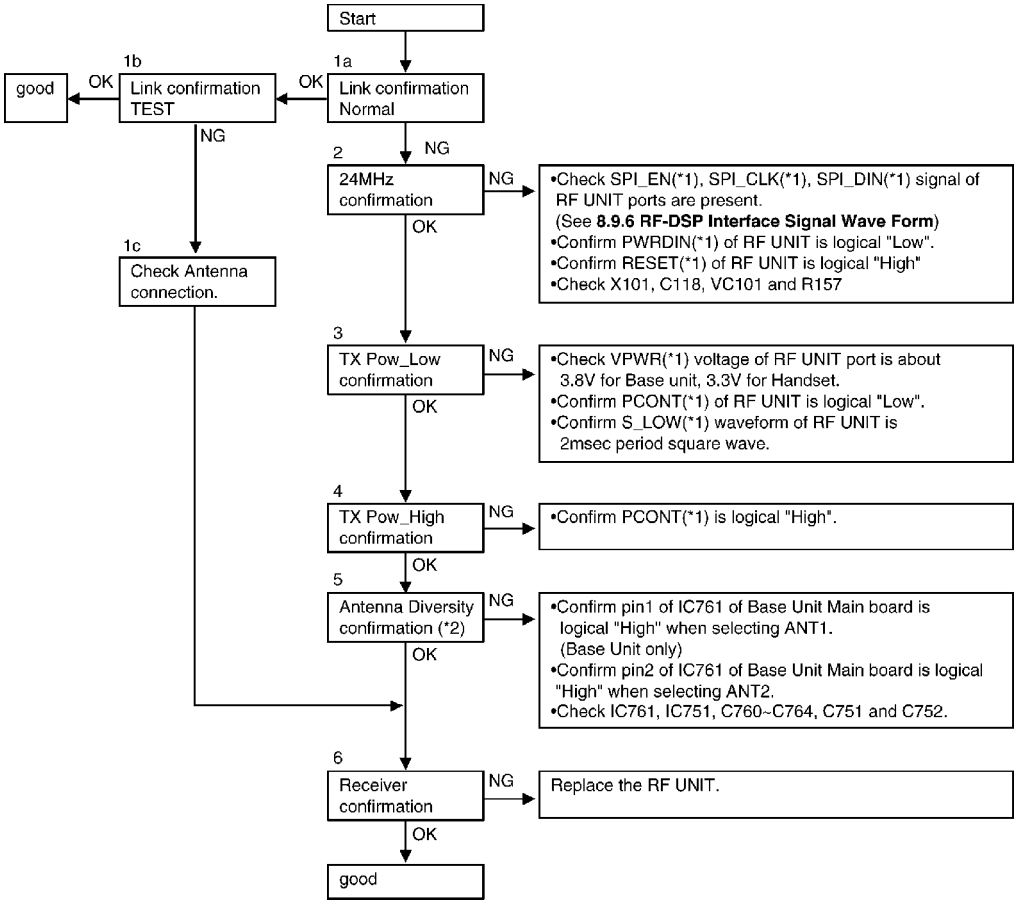

(*1) See RF Unit Reference Drawing (Base Unit and Handset).
(*2) Base unit RF only, refer to Check Table for RF Block.

8.9.5. Check Table for RF Block

No.	Item	BU (Base unit) (*1)	HS (Handset) (*1)
1a	Link confirmation Normal	1. The switch of “HS Test Fixture” is changed to normal mode side, and is charge of "HS Test Fixture". 2. Press [TALK] key of "HS Test Fixture" to establish link about one foot (30cm) away from "Base unit". 3. Confirm to link.	1. The switch of “BU TEST Fi changed to “Normal mode sid is charge of "BU Test Fixture' 2. Press [TALK] key of "Hands establish link about one foot (away from "BU Test Fixture". 3. Confirm to link.
1b	Link confirmation Test	1. The switch of “HS Test Fixture” is changed to TEST mode side, and is charge of "HS Test Fixture". 2. Press [TALK] key of "HS Test Fixture" to establish link about one foot (30cm) away from "Base unit". 3. Confirm to link.	1. The switch of “BU TEST Fi changed to “TEST mode side charge of "BU Test Fixture". 2. Press [TALK] key of "Hands establish link about one foot (away from "BU Test Fixture". 3. Confirm to link
1c	Check Antenna connection	1. Check ANT1(*2) and ANT2(*2) soldering. 2. Check ANT1(*2) and ANT2(*2) points are not shorted to GND.	1. Check Antenna(*3) on HS m board soldering.
2	24MHz Adjustment	1. Set BU to [Test STANDBY] mode (*5) 2. Confirm X101 frequency within 24MHz ± 720Hz at TP_FREQ(*4) of RF Unit. If X101 frequency is spec out than adjust frequency within 24 MHz ±100 Hz by VC101.	1. Set HS to [Test STANDBY] 2. Confirm X101 frequency wi 24MHz ± 720Hz at TP_FREQ(* Unit. If X101 frequency is spec out adjust frequency within 24 MH Hz by VC101.
3	TX Pow_Low confirmation	1. Put low loss high frequency wire to ANT1(*2) and GND(*2) 2. Connect this wire to Spectrum analyzer. 3. Set BU to [Low Power] mode (*5) 4. Confirm TX power level within -5 ~ + 10dBm	1. Remove Antenna on HS ma Put low loss high frequency w ANT(*3) and GND (*3) 2. Connect this wire to Spectr analyzer. 3. Set HS to [Low Power] mod 4. Confirm TX power level wit 10dBm
4	TX Pow_High confirmation	5. Set BU to [High Power] mode (*5) 6. Confirm TX power level within +20± 4dBm	5. Set HS to [High Power] mo 6. Confirm TX power level wit 4dBm
5	Antenna Diversity confirmation	7. Set BU to [Test STANDBY] mode (*5) 8. Put low loss high frequency wire to ANT2 (*2) and GND (*2) 9. Connect this wire to Spectrum analyzer 10. Press [1] key to activate the ANT2. 11. Set BU to [High Power] mode (*5) 12. Confirm TX power level within +20± 4dBm	
6	Receiver confirmation	Same as Item 1b.	Same as Item 1b.

(*1) BU: Base Unit, HS: Handset.
(*2) See Base Unit Reference Drawing.
(*3) See Handset Reference Drawing.
(*4) See RF Unit Reference Drawing (Base Unit and Handset).
(*5) See TEST MODE AND ADJUSTMENT.

8.9.6. RF-DSP Interface Signal Wave Form

(1) Serial control line

<Standby mode>

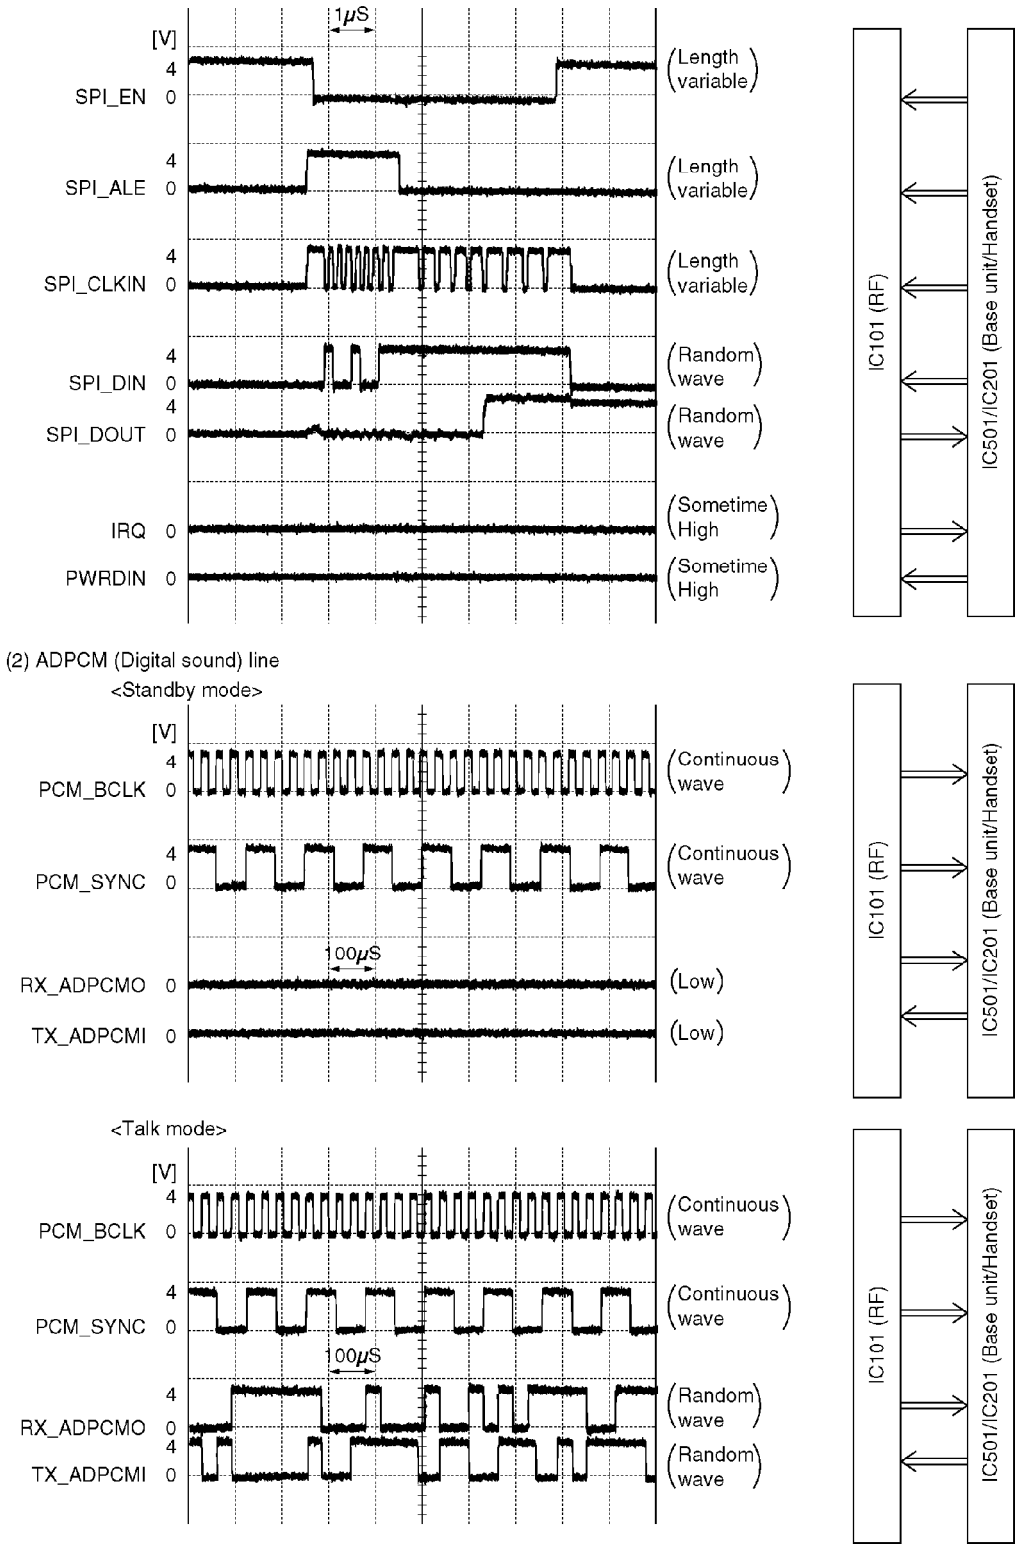

(2) ADPCM (Digital sound) line

<Standby mode>

<Talk mode>

8.10. Check Handset Voice Transmission

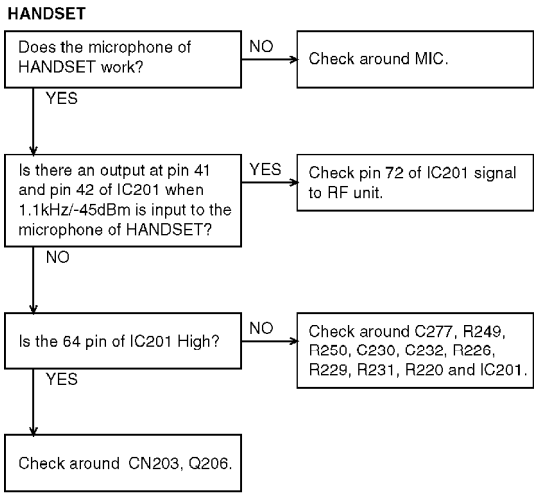
HANDSET
Does the microphone of HANDSET work?
NO
Check around MIC.
YES
Is there an output at pin 41 and pin 42 of IC201 when 1.1kHz/-45dBm is input to the microphone of HANDSET?
YES
Check pin 72 of IC201 signal to RF unit.
NO
Is the 64 pin of IC201 High?
NO
Check around C277, R249, R250, C230, C232, R226, R229, R231, R220 and IC201.
YES
Check around CN203, Q206.

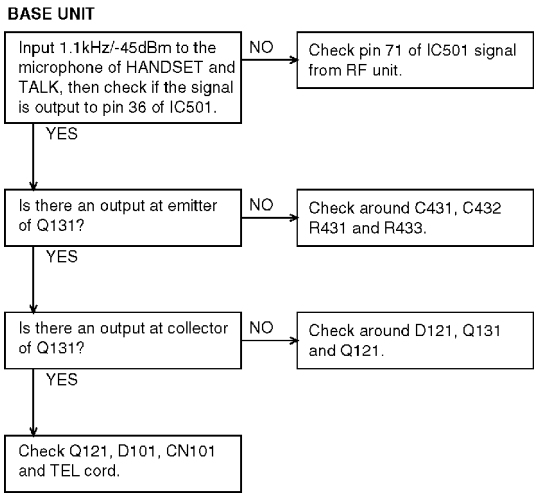
BASE UNIT
Input 1.1kHz/-45dBm to the microphone of HANDSET and TALK, then check if the signal is output to pin 36 of IC501.
NO
Check pin 71 of IC501 signal from RF unit.
YES
Is there an output at emitter of Q131?
NO
Check around C431, C432 R431 and R433.
YES
Is there an output at collector of Q131?
NO
Check around D121, Q131 and Q121.
YES
Check Q121, D101, CN101 and TEL cord.

8.11. Check Handset Voice Reception

BASE UNIT

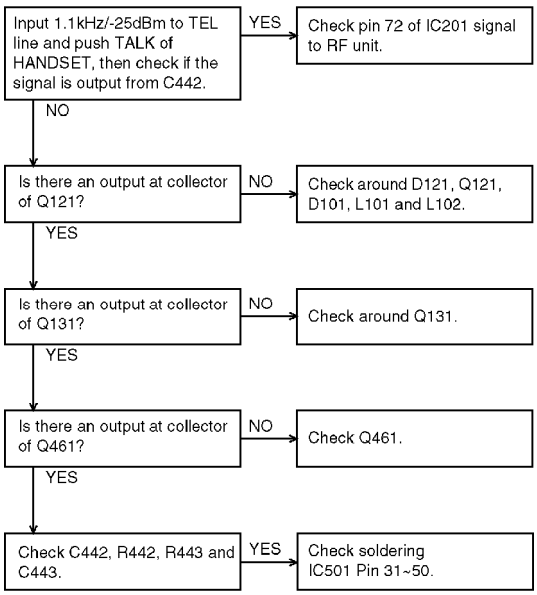
Input 1.1kHz/-25dBm to TEL line and push TALK of HANDSET, then check if the signal is output from C442.
YES
Check pin 72 of IC201 signal to RF unit.
NO
Is there an output at collector of Q121?
NO
Check around D121, Q121, D101, L101 and L102.
YES
Is there an output at collector of Q131?
NO
Check around Q131.
YES
Is there an output at collector of Q461?
NO
Check Q461.
YES
Check C442, R442, R443 and C443.
YES
Check soldering IC501 Pin 31~50.

HANDSET

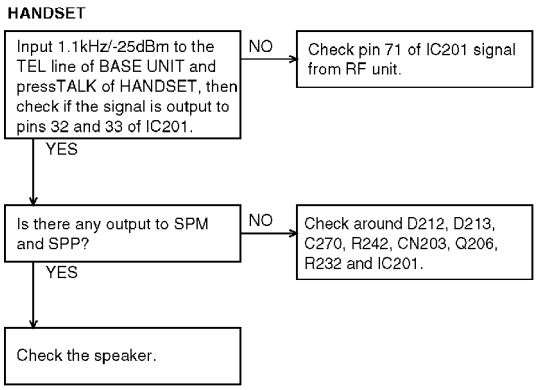
Input 1.1kHz/-25dBm to the TEL line of BASE UNIT and pressTALK of HANDSET, then check if the signal is output to pins 32 and 33 of IC201.
NO
Check pin 71 of IC201 signal from RF unit.
YES
Is there any output to SPM and SPP?
NO
Check around D212, D213, C270, R242, CN203, Q206, R232 and IC201.
YES
Check the speaker.

8.12. Check Call ID

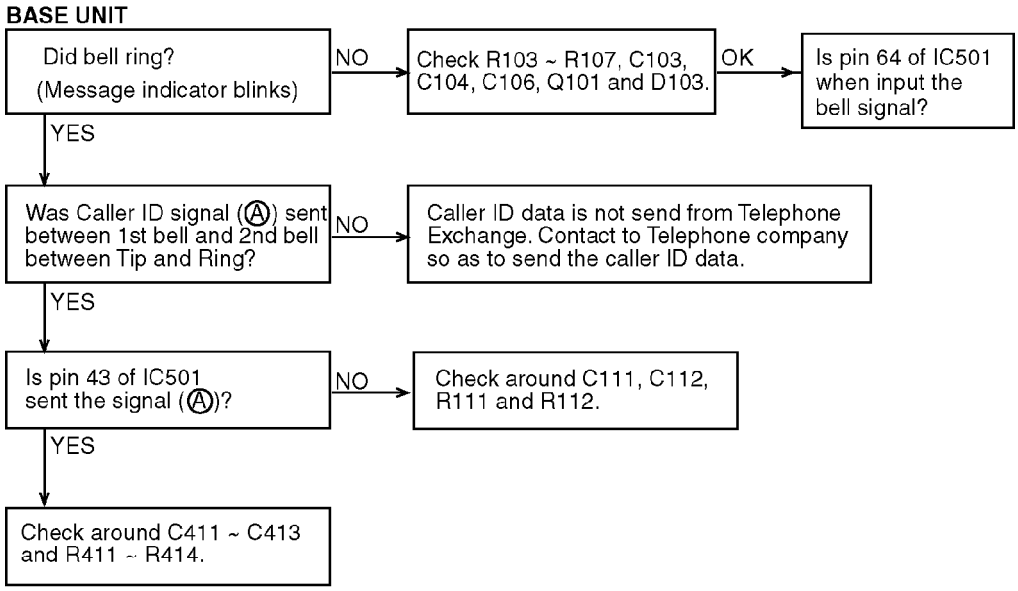
BASE UNIT
Did bell ring?
(Message indicator blinks)
NO
Check R103 ~ R107, C103, C104, C106, Q101 and D103.
OK
Is pin 64 of IC501 when input the bell signal?
YES
Was Caller ID signal (Ⓐ) sent between 1st bell and 2nd bell between Tip and Ring?
NO
Caller ID data is not send from Telephone Exchange. Contact to Telephone company so as to send the caller ID data.
YES
Is pin 43 of IC501 sent the signal (Ⓐ)?
NO
Check around C111, C112, R111 and R112.
YES
Check around C411 ~ C413 and R411 ~ R414.

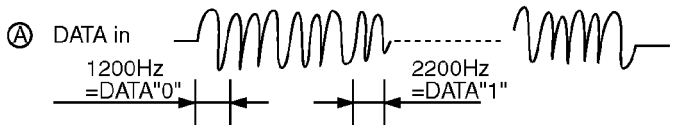

9. TEST MODE AND ADJUSTMENT

9.1. Test Mode Flow Chart for Base Unit

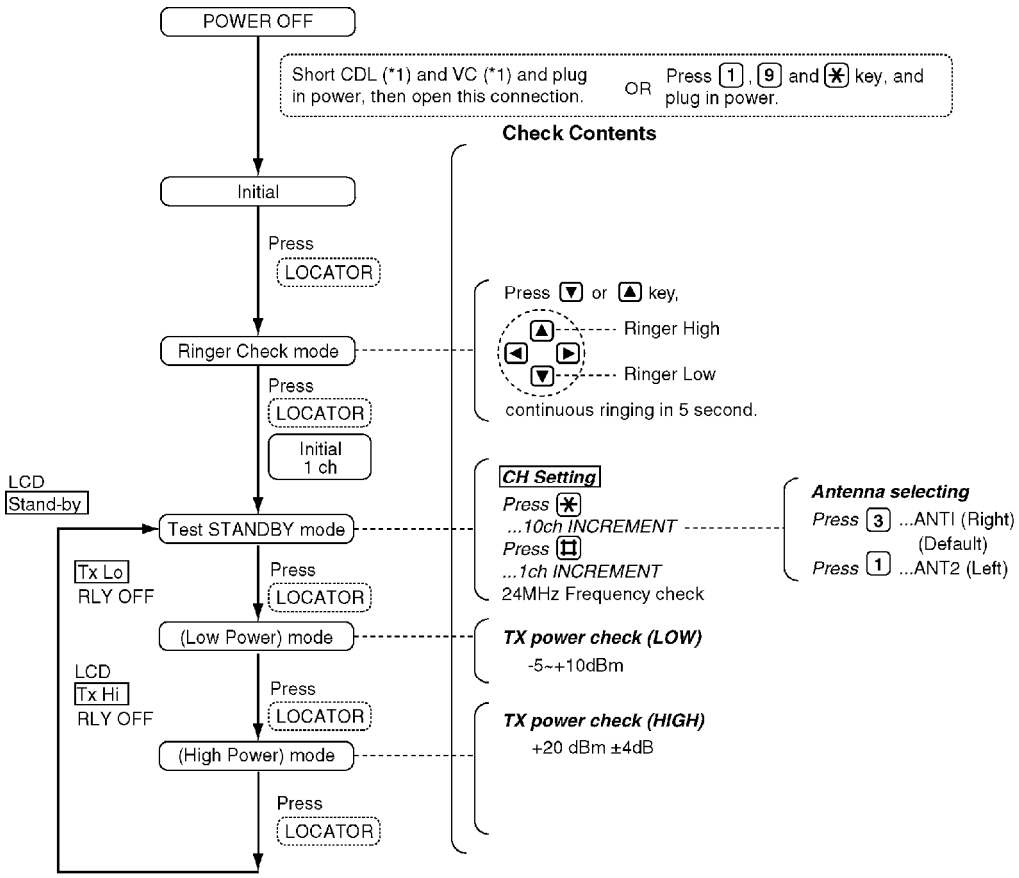

(*1) See Base Unit Reference Drawing.

(*2) Special check method for Base Unit individually.

9.2. Key Check Mode

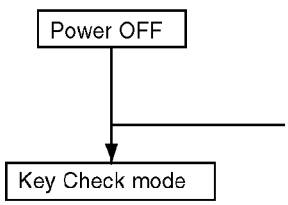

Short a TAM (*1) SW and Plug in power, then open TAM SW.
or
Press 3, 7 and # key, simultaneously and plug in power.

When pressing each key, a short beep rings. This means each key is OK.

Press all key without "LOCATOR" and press "LOCATOR" at the end.
Then, long beep is rung. This means all keys are OK.
If not, three beep (pi pi pi) is rung. This means to mistake to press keys or some key is wrong.

(*1) See Base Unit Reference Drawing.

9.3. Test Mode Flow Chart for Handset

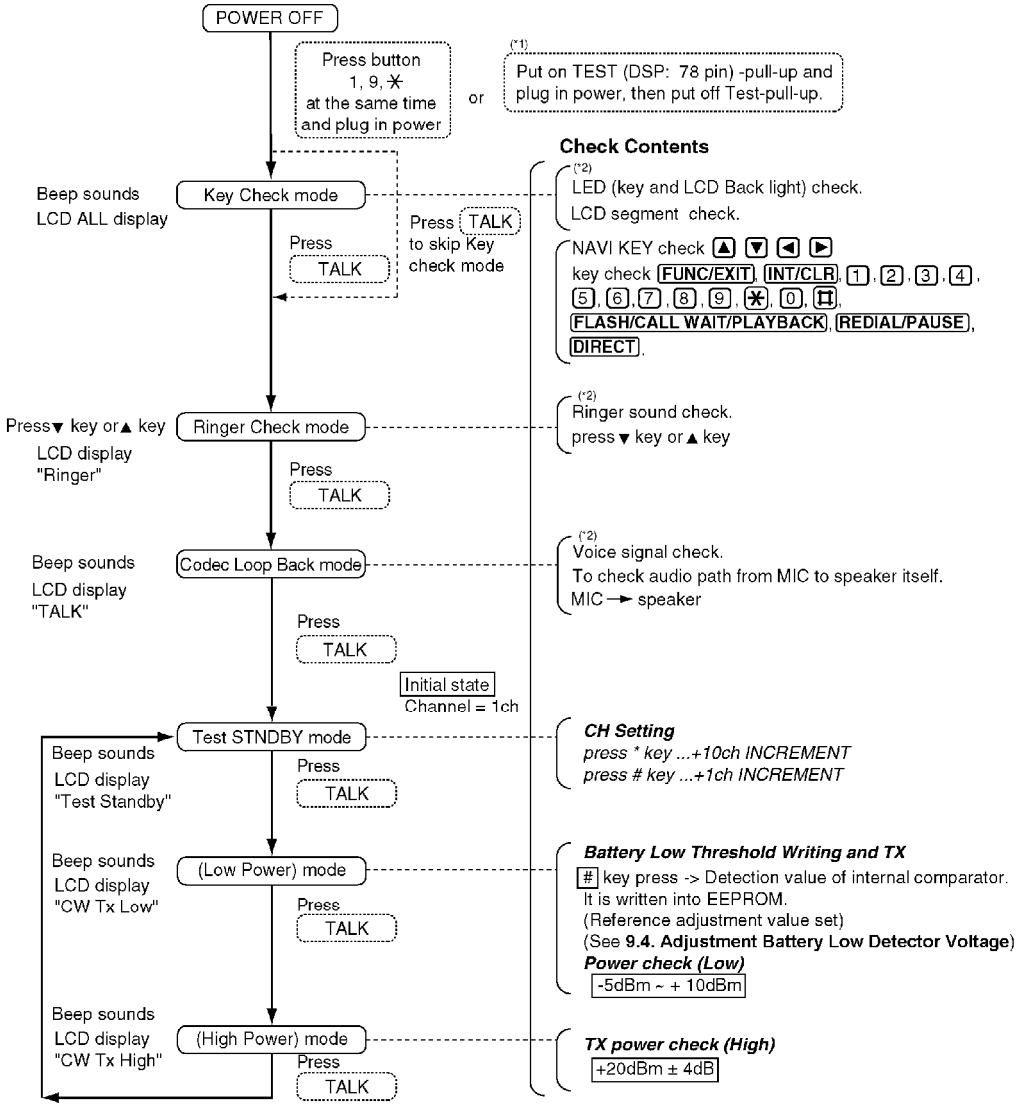
POWER OFF
Press button 1, 9, ✳ at the same time and plug in power
or
(*1)
Put on TEST (DSP: 78 pin) -pull-up and plug in power, then put off Test-pull-up.
Check Contents
Beep sounds
LCD ALL display
Key Check mode
Press TALK
Press TALK to skip Key check mode
(*2)
LED (key and LCD Back light) check.
LCD segment check.
NAVI KEY check ▲ ▼ ◀ ▶
key check FUNC/EXIT, INT/CLR, 1, 2, 3, 4, 5, 6, 7, 8, 9, ✳, 0, #, FLASH/CALL WAIT/PLAYBACK, REDIAL/PAUSE, DIRECT.
Press▼ key or▲ key
LCD display "Ringer"
Ringer Check mode
Press TALK
(*2)
Ringer sound check.
press▼ key or▲ key
Beep sounds
LCD display "TALK"
Codec Loop Back mode
Press TALK
(*2)
Voice signal check.
To check audio path from MIC to speaker itself.
MIC → speaker
Initial state
Channel = 1ch
Beep sounds
LCD display "Test Standby"
Test STNDBY mode
Press TALK
CH Setting
press * key ...+10ch INCREMENT
press # key ...+1ch INCREMENT
Beep sounds
LCD display "CW Tx Low"
(Low Power) mode
Press TALK
Battery Low Threshold Writing and TX
key press -> Detection value of internal comparator.
It is written into EEPROM.
(Reference adjustment value set)
(See 9.4. Adjustment Battery Low Detector Voltage)
Power check (Low)
-5dBm ~ + 10dBm
Beep sounds
LCD display "CW Tx High"
(High Power) mode
Press TALK
TX power check (High)
+20dBm ± 4dB

(*1) See Handset Reference Drawing.
(*2) Special check method for Handset individually.

9.4. Adjustment Battery Low Detector Voltage

After replacing handset's DSP (IC201) and EEPROM, Re-writing Battery Low voltage to EEPROM is required.
Following Test mode flow chart (Refer to Test Mode Flow Chart for Handset),
DC power supply and Battery connector are required in this adjustment.
1. Set 3.9V for DC power supply.
2. Place handset in test mode.
3. Press "TALK" key 4 times to TX-Low mode. (CW Tx Low is displayed on LCD)
4. Set 3.51V for DC power supply.
*** Check voltage at battery connector, because some voltage drop is happened, using long or thin cable.**
5. Press "#"key to write voltage value in EEPROM.
6. Turn power off. Then this value is available.

NOTE:

Refer to Handset Reference Drawing for connection of DC power source and voltmeter.

9.5. Base Unit Reference Drawing

9.6. Handset Reference Drawing

9.7. Frequency Table

(TDD: time division duplex)

Channel	TX/RX Frequency (GHz)	Channel	TX/RX Frequency (GHz)
1	2.4015	13	2.4375
2	2.4045	14	2.4405
3	2.4075	15	2.4435
4	2.4105	16	2.4465
5	2.4135	17	2.4495
6	2.4165	18	2.4525
7	2.4195	19	2.4555
8	2.4225	20	2.4585
9	2.4255	21	2.4615
10	2.4285	22	2.4645
11	2.4315	23	2.4675
12	2.4345	24	2.4705

10. DESCRIPTION

10.1. Frequency

The frequency range of 2.4015 GHz ~ 2.4705 GHz is used. Transmitting and receiving channel between base unit and handset is same frequency. Refer to the Frequency Table.

10.2. Time Division Duplex (TDD) operation

Transmission/reception between the base unit and handset is performed by time-sharing as shown in Fig. 7. 1 slot time of transmission and reception is 1mS.Same frequency is used in transmitting and receiving. The figure shows an example; the frequency of 1ch is used in transmitting between the base unit and handset.

Fig. 7

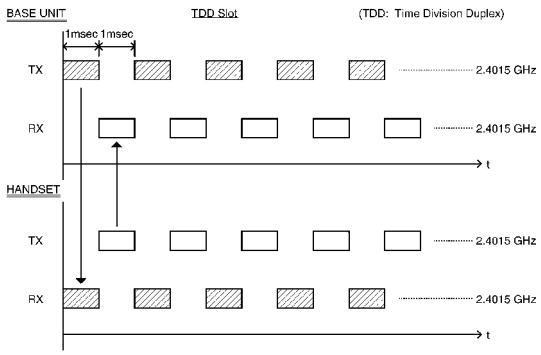

10.2.1. TDD Frame Format

The TDD frame is 2mS in length, and is composed of two symmetrical 960 μS TX and RX subframes. Each subframe contains 96 bits of 10 μS duration, with 40 μS guard times between both TX and RX subframes.
Each subframe consists of the following five fields:

- **A 12-bit Preamble field**
- **An 8-bit Data Channel field**
- **An 8-bit Sync Word**
- **A 64-bit ADPCM Payload**
- **A 4-bit Post-amble**

Both the 8-bit sync word and 8-bit data channel are programmable via the DSP interface. In addition, the 64-bit payload can be filled either with ADPCM voice data, or can be used by the host DSP as a fast data channel between base and handset.

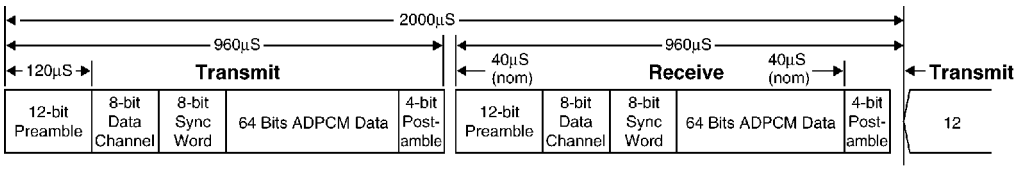

10.3. Spread Spectrum

Transmission and reception are operated using the spread spectrum method.
DSS (Digital Spread Spectrum)
Mixing the original signal with the pseudo random noise code (PN code) works the spread spectrum. In this system PN code is 15 chip. Although the band width is spread fifteen times, the power level per channel becomes lower.

Fig. 8

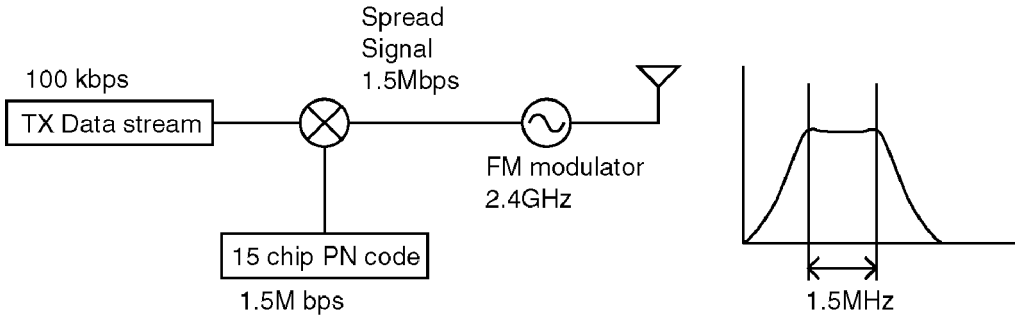

10.4. Signal Flowchart in the Whole System

Reception

CN101 of the base unit is connected to the TEL line, and the signal is input through the bridge diode D101. While talking the relay (Q121) is turned ON and amplified at the amplifiers Q461, then led to DSP (IC501). DSP generates ADPCM signal. The ADPCM signal is input to RFIC (IC101) of RF UNIT, and is mixed with pseudo random noise code (PN code) to spread the spectrum. RFIC outputs FSK modulated RF signal. The RF signal is passed through the balun (T101) and filter (L107) to the T/R switch (IC109). And the RF signal amplifies by the power amplifier (IC105) and fed into T/R switch (IC110) and passes through filter (L106) to Diversity ANTENNA. As for the handset, RF signal from the antenna passes through filter (L106) and switch by T/R switch (IC110) to LNA (IC106). The RF signal is amplified by LNA (IC106) and switched by T/R switch (IC109) and input to RFIC passing through filter (L107) and the balun (T101) to perform the de-spread, then input to DSP (IC201). DSP performs ADPCM decoding to convert the signal into the voice signal, then it is output to the speaker.

Transmission

The voice signal input from the microphone is led to DSP (IC201). The DSP generates ADPCM signal. As well as the reception, it is converted into the RF signal by RFIC (IC101). Passing through the balun (T101) and filter (L107), to the T/R switch (IC109). And the RF signal amplifies by the power amprifier (IC105) and fed into T/R switch (IC110) and passes through filter (L106) to ANTENNA. As for the base unit, RF signal from the Diversity antenna passes through filter (L106) and switch by T/R switch (IC110) to LNA (IC106). The RF signal is amplified by LNA (IC106) and switched by T/R switch (IC109) and is input to RFIC (IC101) passing through filter (L107) and the balum (T101) to perform the de-spread, then input to DSP (IC201). DSP performs ADPCM decoding to convert the signal into the voice signal. The voice signal is amplified at the TX amplifier (Q131), then output to the TEL line (CN101) through the relay (Q121) and bridge (D101).

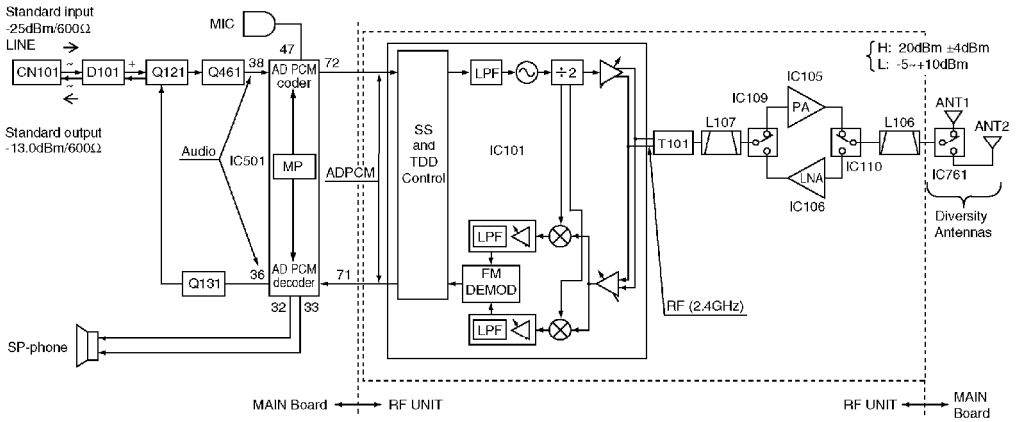

Fig. 9-1 BASE UNIT

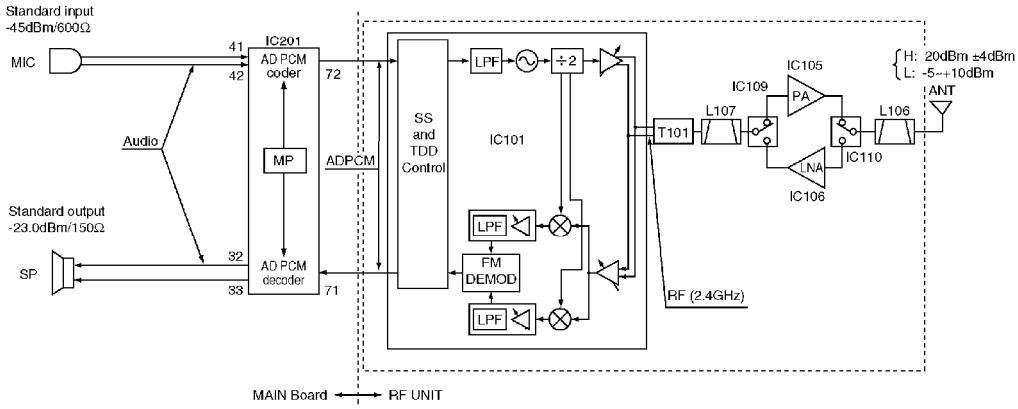

Fig. 9-2 HANDSET

10.5. EXPLANATION OF DSP DATA COMMUNICATION

10.5.1. Calling

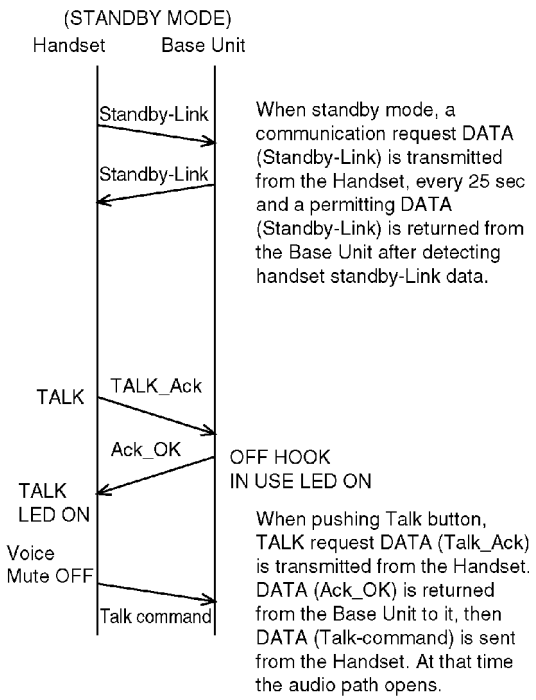
(STANDBY MODE)
Handset
Base Unit
Standby-Link
Standby-Link
When standby mode, a communication request DATA (Standby-Link) is transmitted from the Handset, every 25 sec and a permitting DATA (Standby-Link) is returned from the Base Unit after detecting handset standby-Link data.
TALK
TALK_Ack
Ack_OK
OFF HOOK
IN USE LED ON
TALK
LED ON
Voice
Mute OFF
When pushing Talk button, TALK request DATA (Talk_Ack) is transmitted from the Handset. DATA (Ack_OK) is returned from the Base Unit to it, then DATA (Talk-command) is sent from the Handset. At that time the audio path opens.
Talk command

10.5.2. To Terminate Communication

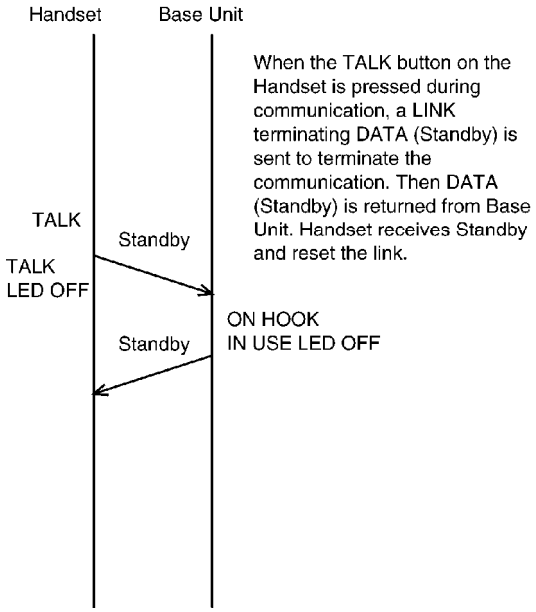
Handset
Base Unit
When the TALK button on the Handset is pressed during communication, a LINK terminating DATA (Standby) is sent to terminate the communication. Then DATA (Standby) is returned from Base Unit. Handset receives Standby and reset the link.
TALK
Standby
TALK
LED OFF
ON HOOK
IN USE LED OFF
Standby

10.5.3. Ringing

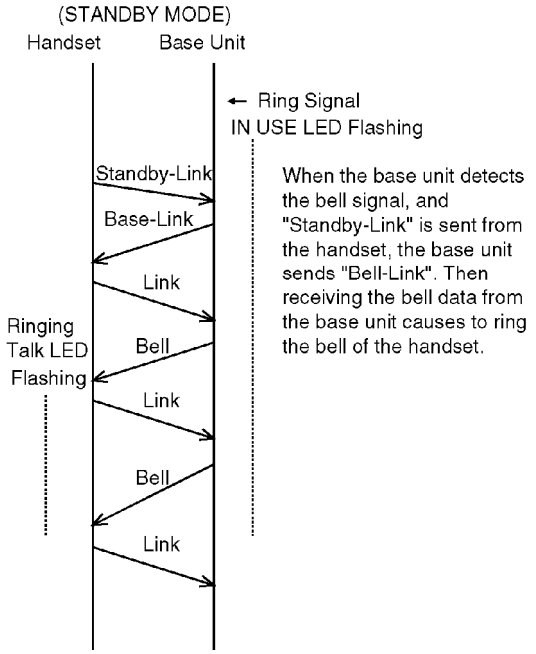

10.5.4. ID CHANGE

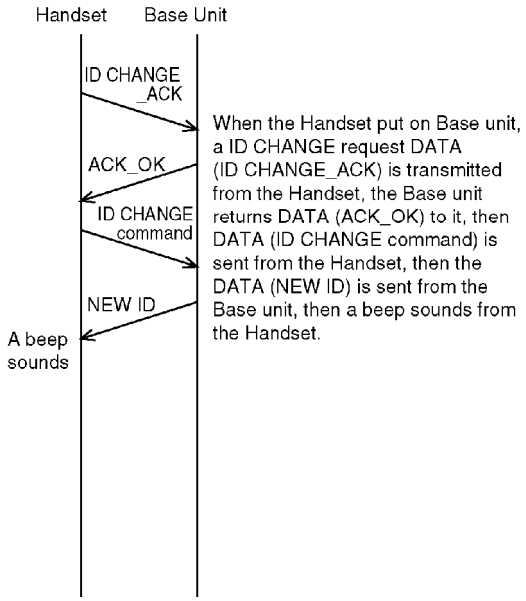
Handset
Base Unit
ID CHANGE _ACK
ACK_OK
ID CHANGE command
NEW ID
A beep sounds
When the Handset put on Base unit, a ID CHANGE request DATA (ID CHANGE_ACK) is transmitted from the Handset, the Base unit returns DATA (ACK_OK) to it, then DATA (ID CHANGE command) is sent from the Handset, then the DATA (NEW ID) is sent from the Base unit, then a beep sounds from the Handset.

11. TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

11.1. Base Unit

 PQVDRLZ2R0 PQVDRLZ20A	 C2HBBJ000006	 MA153	2SD1758Q	 UN5213 2SD1819A	PQVIXCF4502P PQVITC7W74U
 2SC2120 PQVT2N6517CA 2SA1625	 2SD2136	PQVDS1ZB60F1	 PQVDHRU0203A, PQVTDTC123JU MA8047, MA8043, MA8082, MA111 MA8051, MA8036H, MA8220, MA8075		 2SD2137
 PQVDSML310MT PQVDBR1111C	 PQWITG2583BH	 2SD1994A	PQVIPS3432UT	 PQVITC7S08FU	 PQVISPM3204T

11.2. Handset

 C2HBBH000015	 PQVTD123T146, PQVTDTC143E PQVDTA143TU, 2SD1819A,UN521	 PQVD1SR154 MA2ZD1400 MA8150, MA111	 PQVDSML310MT	PQWITG2583BR
2SA1797Q	PQVIXCP03302M	PQVIC62FP33M	PQVIC61CN32N	

12. BLOCK DIAGRAM (Base Unit)

13. CIRCUIT OPERATION (Base Unit)

13.1. SP-PHONE RX Circuit

Circuit Operation:

Telephone Line (T/R) → R139/R140 → C139 → C449 → R448 → C441 → Q461 → C442 → R442 → pin 38 of IC501 → pins 32 and 33 of IC501 → Speaker

Circuit Diagram

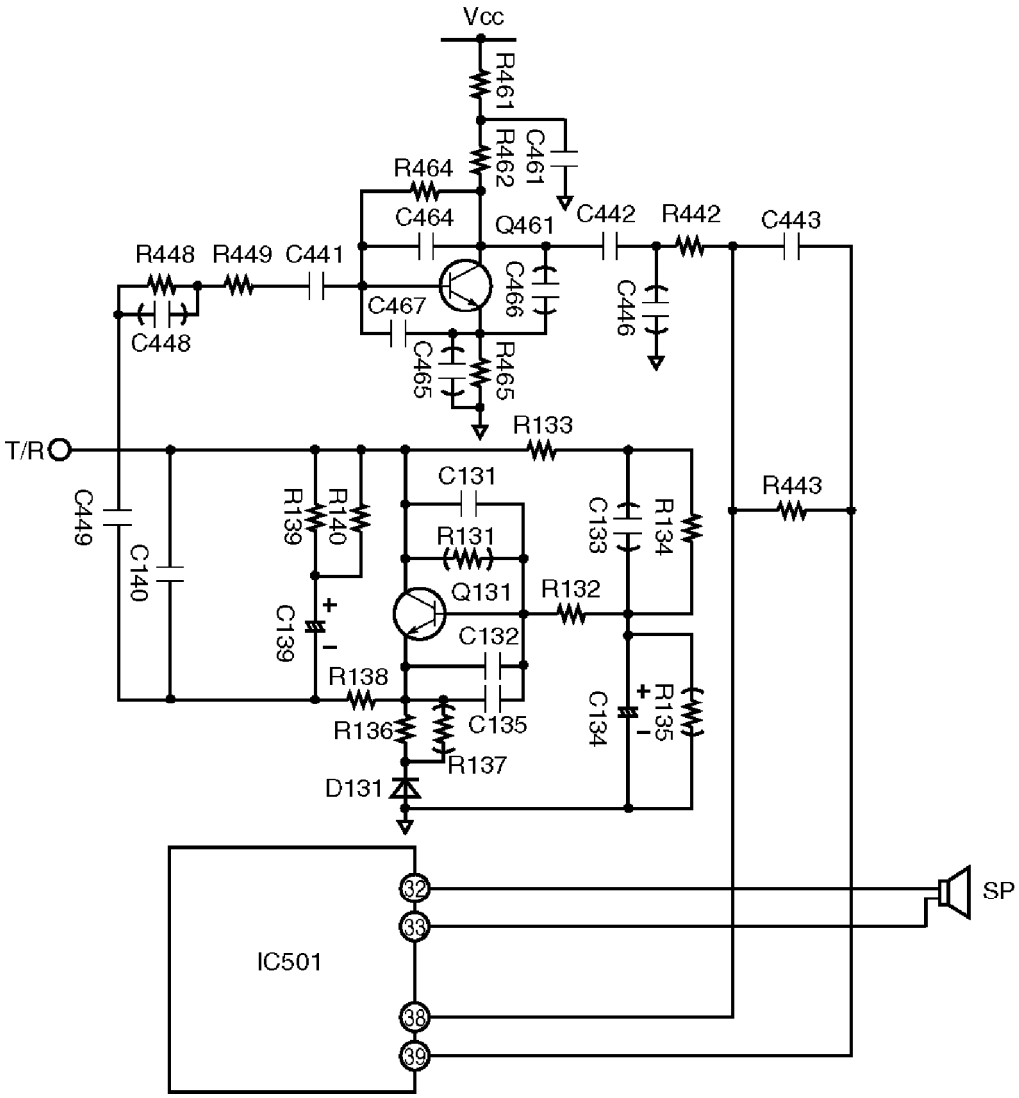

13.2. SP-PHONE TX Circuit

Circuit Operation:

MIC → C474 → C475 → C476 → R476 → pin 47 of IC501 → pin 36 of IC501 → R431 → C432 → C433 → Telephone Line

Circuit Diagram

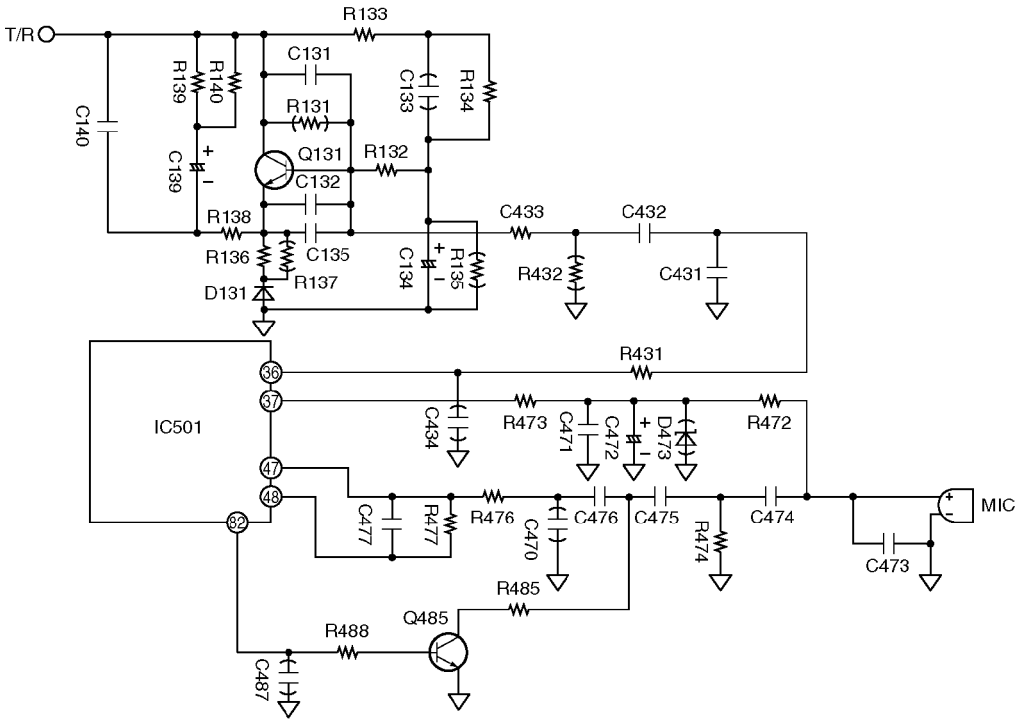

13.3. Auto Disconnect Circuit

Function:

This circuit is used to detect the fact that another telephone connected to the same line is OFF-HOOK while the unit is in a receiving status or OGM transmitting status.

Circuit Operation:

The voltage pin 40 of IC501 is monitored. If a parallel-connected telephone is put into an OFF HOOK status, the presence/absence of a parallel connection is determined when the voltage changes by 0.2V or more.

When the set detects the parallel-connected telephone is OFF HOOK status, the line is disconnected.

Circuit Diagram

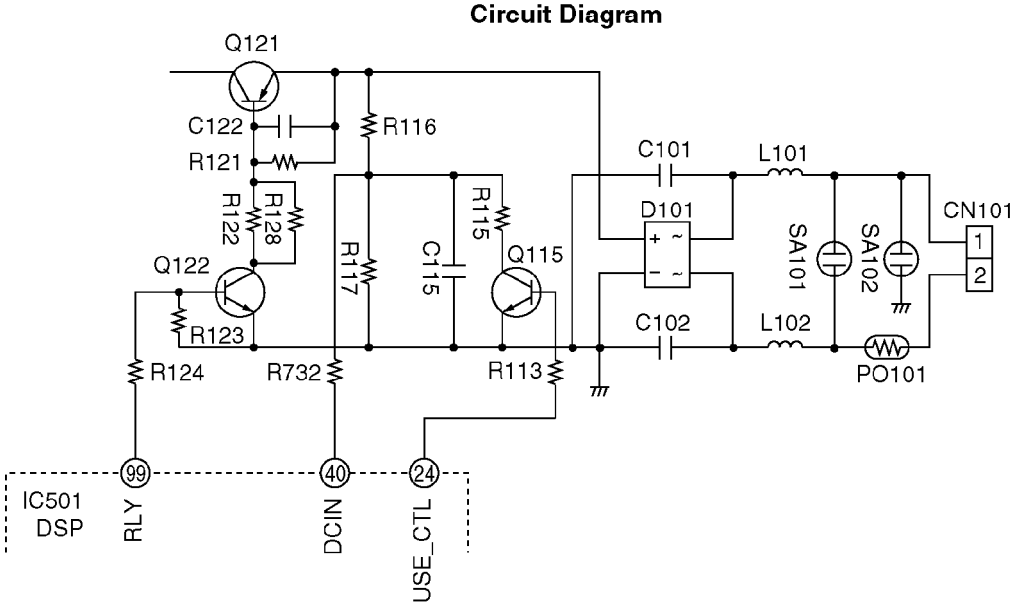

13.4. Power Supply Circuit

Function:

Power from the AC adaptor passes through a regulating consisting of IC301.

Circuit Operation:

IC301 is a regulated power supply. The voltage at point A is regulated to 4.5 V by IC301.
The voltage at point B is dropped by D509 to 4.1 V.
The voltage at point C is dropped by D521 to 3.8 V.
The voltage at point D is dropped by Q315 to 4.0V
The voltage at point E is dropped by Q601 to 3.6V

Circuit Diagram

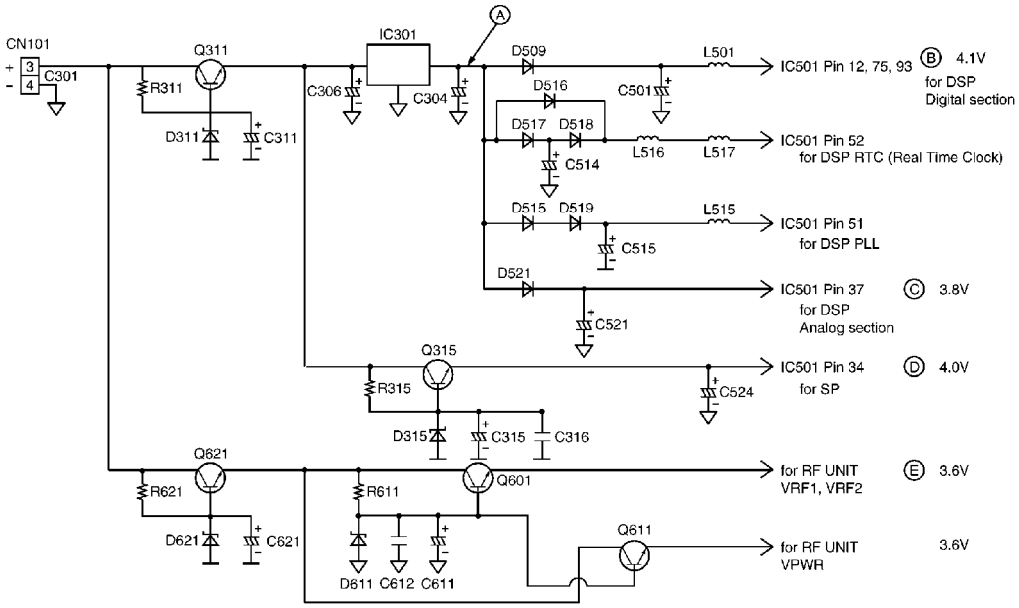

13.5. DTMF Signal

When the DTMF data from the Handset is received, the DTMF signal is output from pin 36 of IC501 and sent to the line through Q131.

13.6. Line Sending Signal

The coded signal input from the RF unit is decoded by IC501.
The audio signal output from IC501-36 and is input to telephone line.

Circuit Diagram

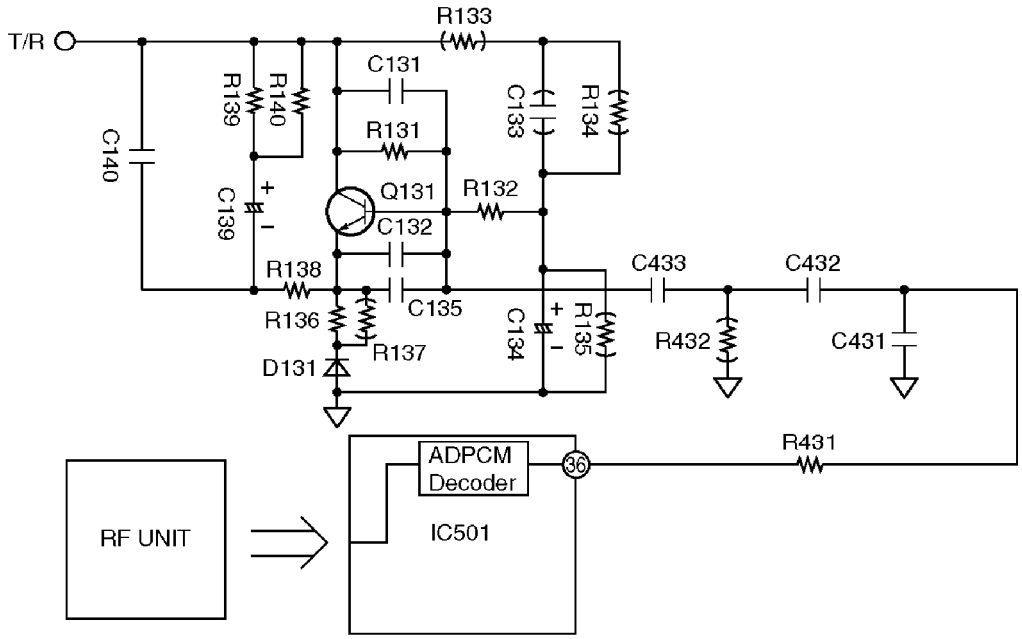

13.7. Line Receiving Signal

The audio signal from line passes through Q131 and Q461 to pin38 and 39 of IC501(DSP). IC501 modulates this input audio signal to output to the RF unit.

Circuit Diagram

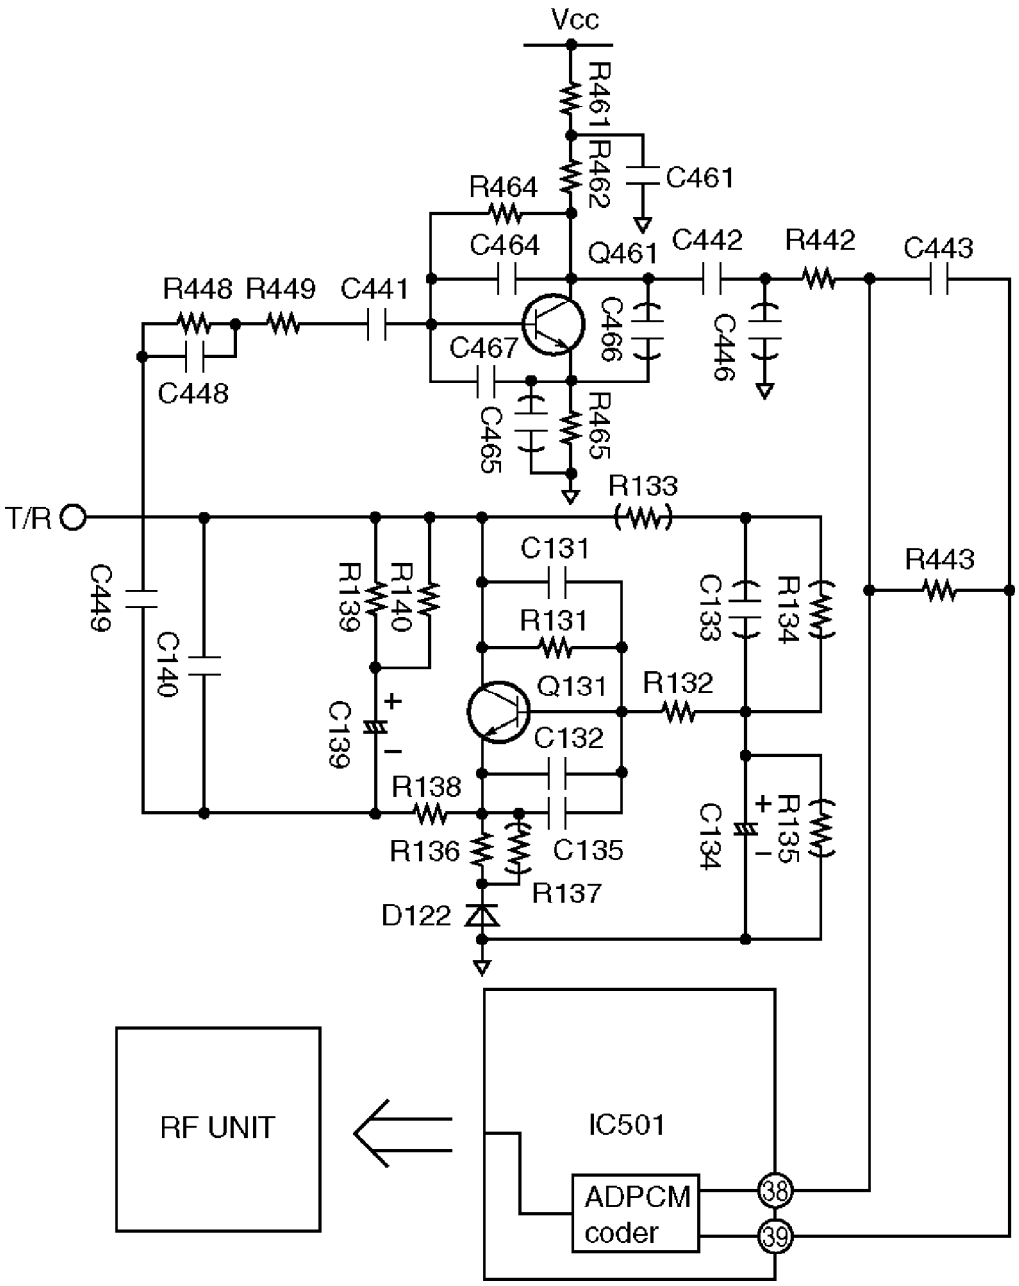

13.8. Calling Line Identification Circuit (Caller ID)

Function:

The caller ID is a chargeable ID which the user of a telephone circuit obtains by entering a contract with the telephone company to utilize a caller ID service. For this reason, the operation of this circuit assumes that a caller ID service contract has been entered for the circuit being used.

The data for the caller ID from the telephone exchange is sent during the interval between the first and second rings of the bell signal. The data from the telephone exchange is a modem signal which is modulated in an FSK (Frequency Shift Keying) format. Data "0" is a 1200 Hz sine wave, and data 1 a 2200 Hz sine wave.

There are two type of the message format which can be received: i.e. the single message format

and plural message format. The plural message format allows to transmit the name and data code information in addition to the time and telephone number data.

● Single message format

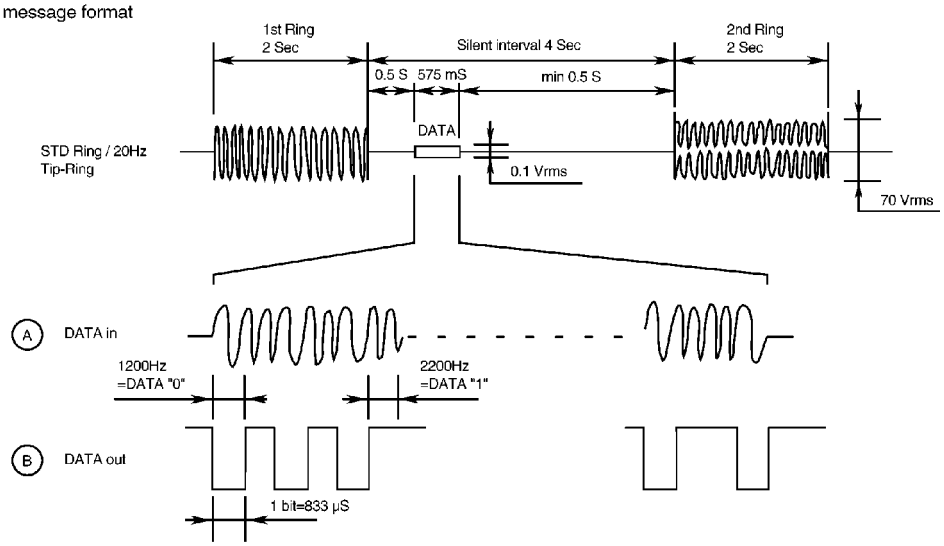

month		day		hour		minute		number
04	-	15	-	16	-	35	-	2013487000

● Plural message format

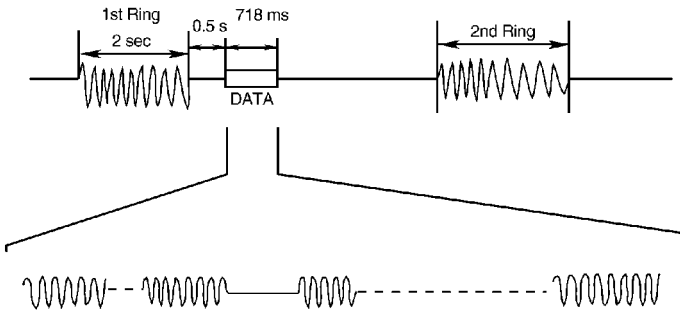

DATA CODE	NAME
201	John Smith

month		day		hour		minute		number
04	-	16	-	16	-	35	-	2013487000

Call Waiting

Calling Identity Delivery on Call Waiting (CIDCW) is a CLASS service that allows a customer, while off-hook on an existing call, to receive information about a calling party on a waited call. The transmission of the calling information takes place almost immediately after the customer is alerted to the new call so he/she can use this information to decide whether to take the new call.

Function:

The CAS signal flows from T/R → R111, R112 → C111, C112 → IC501 pins 41~43 and the ACK (DTMF signal) is returned to the telephone exchange. The telephone exchange that received the ACK can send the data in the same manner as the caller ID. If the unit deems that a telephone connected in parallel is in use, ACK is not returned even if CAS is received, and the information for the second and subsequent callers is not displayed on the portable handset display.

Call Waiting Format

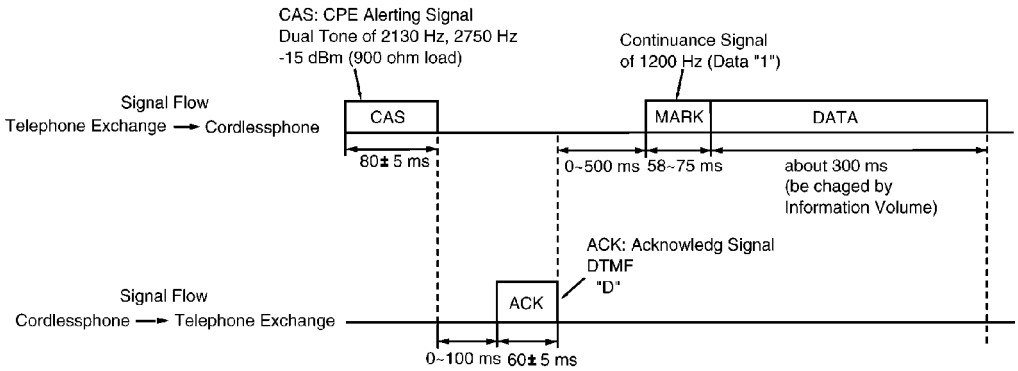

Circuit Diagram

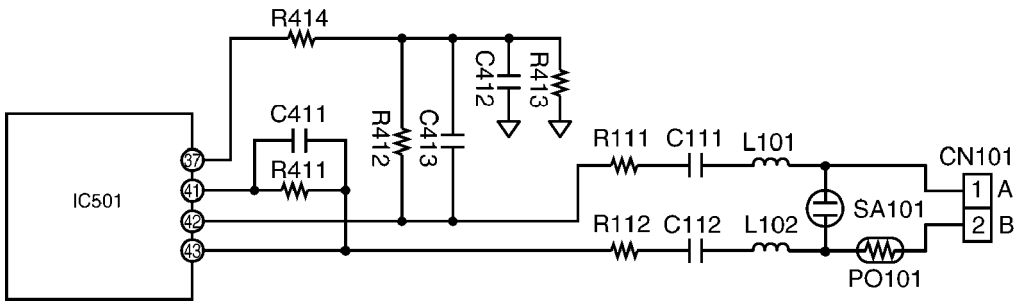

13.9. Parallel Connection Detection Circuit

Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.

Circuit Operation:

Parallel connection detection when on hook:

When on hook Q115 is ON, the voltage is monitored pin 40 of IC501. There is no parallel connection if the voltage is 1.65 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook Q115 is OFF, the voltage is monitored pin 40 of IC501; the presence/absence of a parallel connection is determined when the voltage changes by 0.2 V or more.

Circuit Diagram

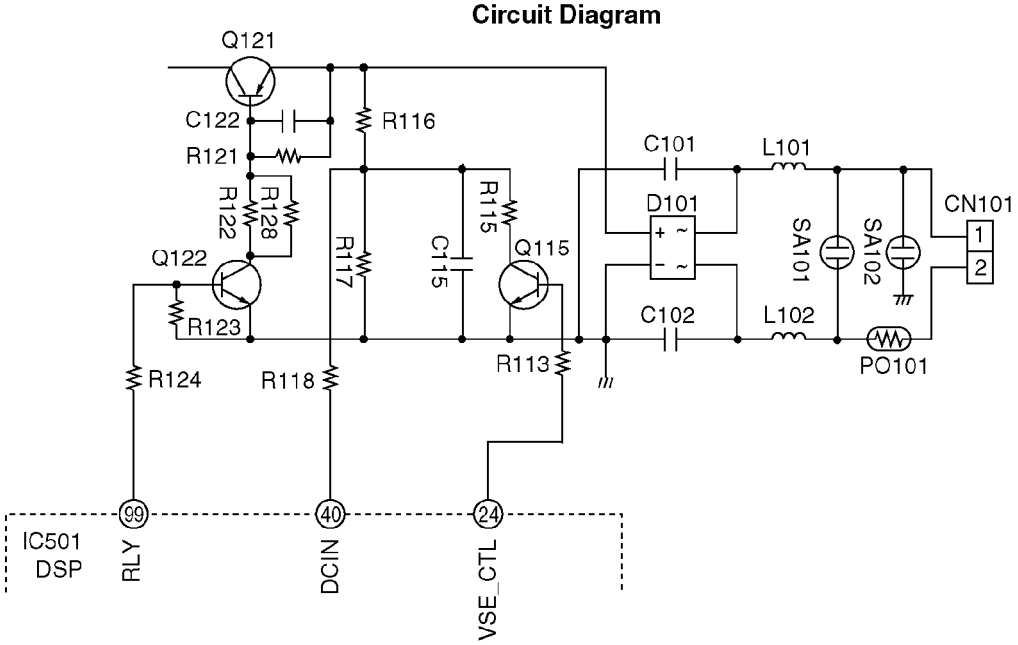

13.10. DSP (Digital Speech/Signal Processing) Circuit

General Description:

(IC501, IC571) is a digital speakerphone/speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The DSP system is fully controlled by a host processor IC501. The host processor provides activation and control of all that functions, such as speech Recording, Playback, Tone detecting and Line monitoring.

The DSP system comprises of following.

— a Host Processor.

— a Digital Signal Processor which includes the firmware implemented functions.

— a FLASH MEMORY (IC571), which is used for stored voice messages and synthesized voice.

Circuit Diagram

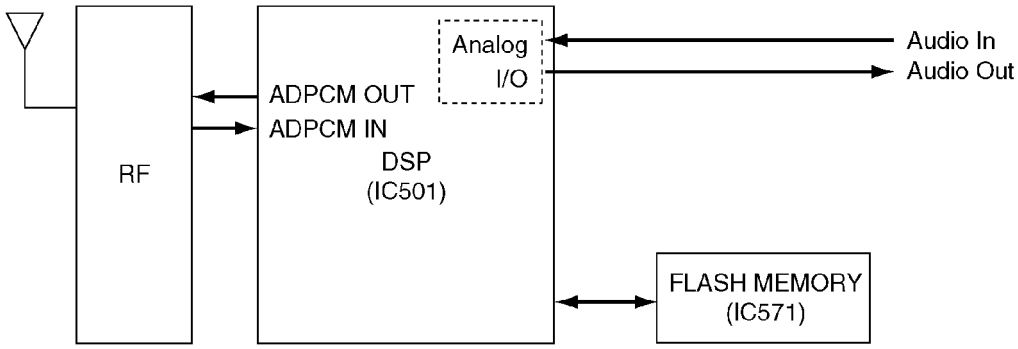

- Voice Message Recording

The DSP system use a proprietary speech compression technique to record and store voice message in FLASH MEMORY (IC571). An error correction algorithm is used to enable playback of these messages from the FLASH MEMORY (IC571).

- DTMF Detection

The DTMF detection is implemented by the DSP system in software. The DTMF detection is performed during Record, Playback, and Line Monitoring modes of operation.

- Synthesized Voice

The DSP implements synthesized Voice, utilizing the built in speech detector and an FLASH MEMORY (IC571), which stored the vocabulary.

- Caller ID and Call Waiting CID demodulation

The DSP implements monitor and demodulate the FSK signals that provide CID information from the Central Office.

- Transmit and Receive ADPCM Data

This DSP implement ADPCM.

13.11. Greeting Recording Circuit

Circuit Operation:

MIC → C474 → C475 → C476 → R476 → pin 47 of IC501.

When Pin82 of IC501 is "Low" Greeting recording.

Circuit Diagram

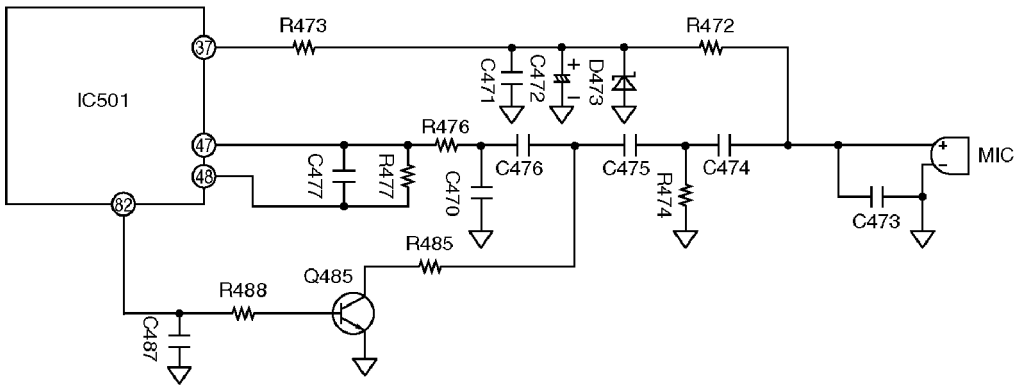

13.12. Greeting Play Back Circuit

Circuit Operation:

pin36 of IC501 → R431 → C432 → C433 → Telephone Line.

Circuit Diagram

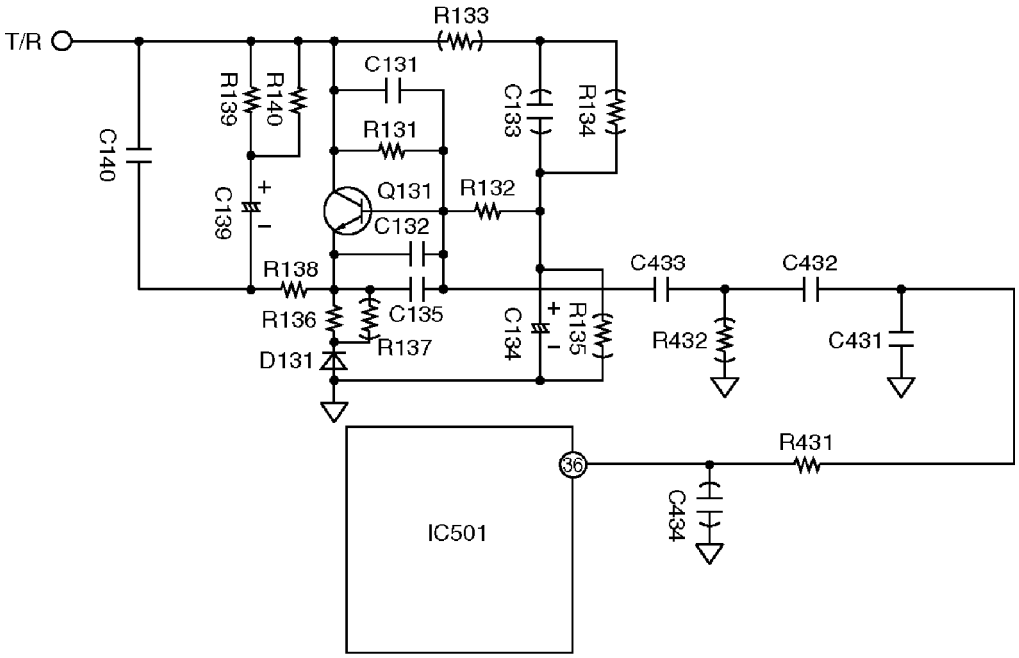

13.13. ICM Recording Circuit

Circuit Operation:

Telephone Line → Q131 → C463 → R448 → C442 → R464 → C441 → pin 38 and 39 of IC501.

Circuit Diagram

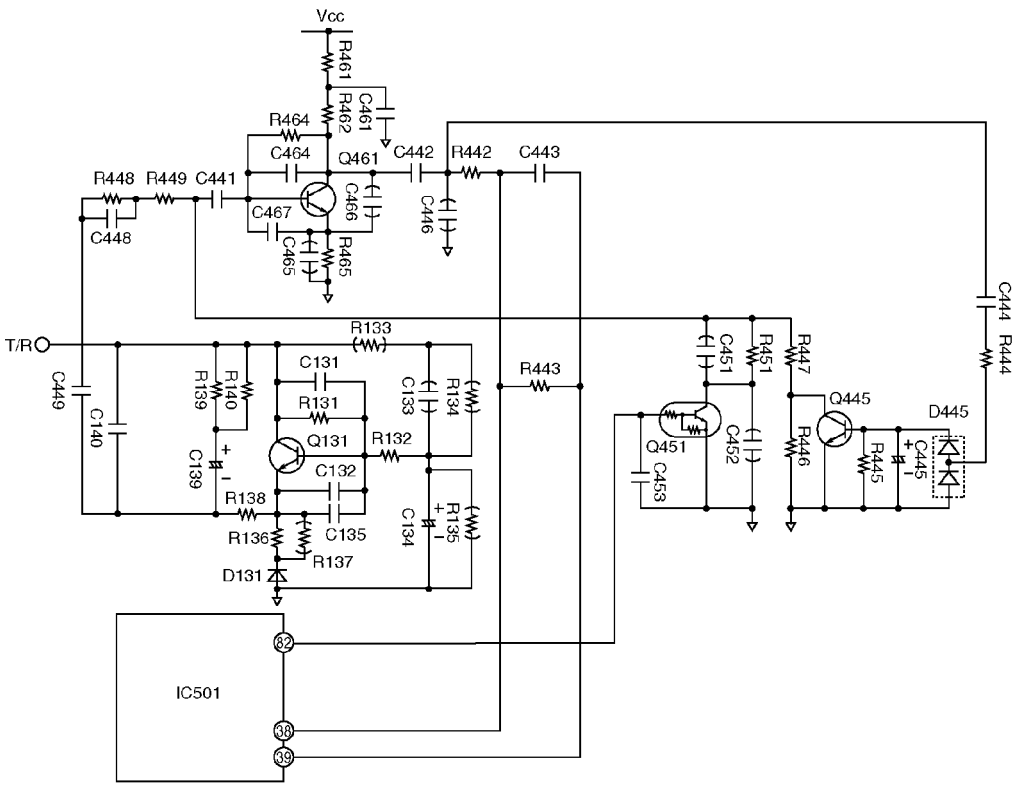

13.14. ICM Play Circuit

Circuit Operation:

pins 32 and 33 of IC501 → Speaker.

Circuit Diagram

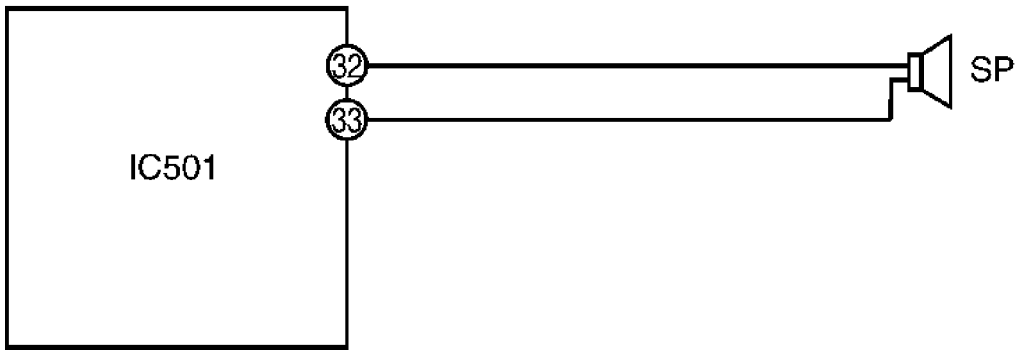

13.15. Telephone Line Interface

Circuit Operation:

- ANSWER

In the idle mode, Q121 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

T → L101 → R103 → C103 → Q101 → IC501 pin 64.

When the CPU (DSP) detects a ring signal, Q121 turns on, thus providing an off-hook condition (active DC current flow through the circuit) and the following signal flow is for the voice signal.

T → D101 → Q121 → Q131 → R139/R140 → C139 → RX

- ON HOOK

Q121 is open, Q121 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

- SPECIFICATIONS

In the on-hook state (idle), the current flows between the telephone line and the unit is as follows:

T → L101 → R103 → C103 → R106 → C104 → R104 → L102 → PO101 → R.

The DC component is blocked by C103, C104: thereby providing an on-hook condition.

The AC interface impedance is over 47 kΩ ; thus, satisfying the

telephone company requirements.

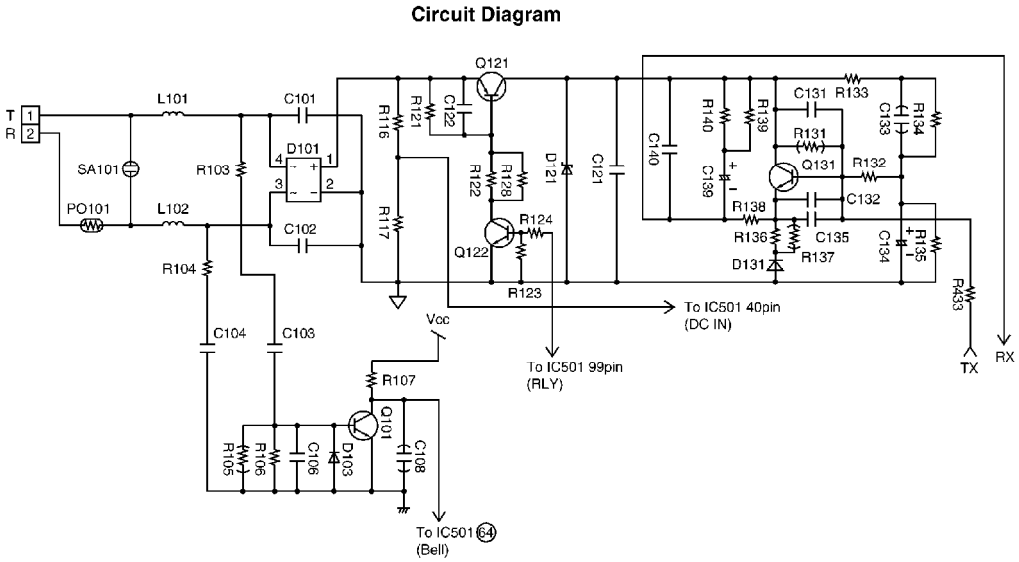

13.16. Intercom Mode

1. **When the base unit LOCATOR/INTERCOM button is pressed, a call monitor signal (intercom sound) is output from pins 32 and 33 of IC501. Thus a monitor tone is heard from the speaker.**
2. **“Paging” is displayed on LCD. This status is called “Intercom stand-by”.**
3. **The receiving signal flows:**
   RF → pin 32 and 33 of IC501 → SP
4. **The transmission signal flows:**
   MIC → C474 → C475 → C476 → R476 → pin 47 of IC501 → RF

13.17. Initializing Circuit

Function:

This circuit is used for to initialize the microcomputer when it incorporates an AC adaptor.

Circuit Operation:

When the AC Adaptor is inserted into the unit, then the voltage is shifted by IC301, D509 and power is supplied to the DSP.

The set can operate beyond point A in the circuit voltage diagram.

Circuit Diagram

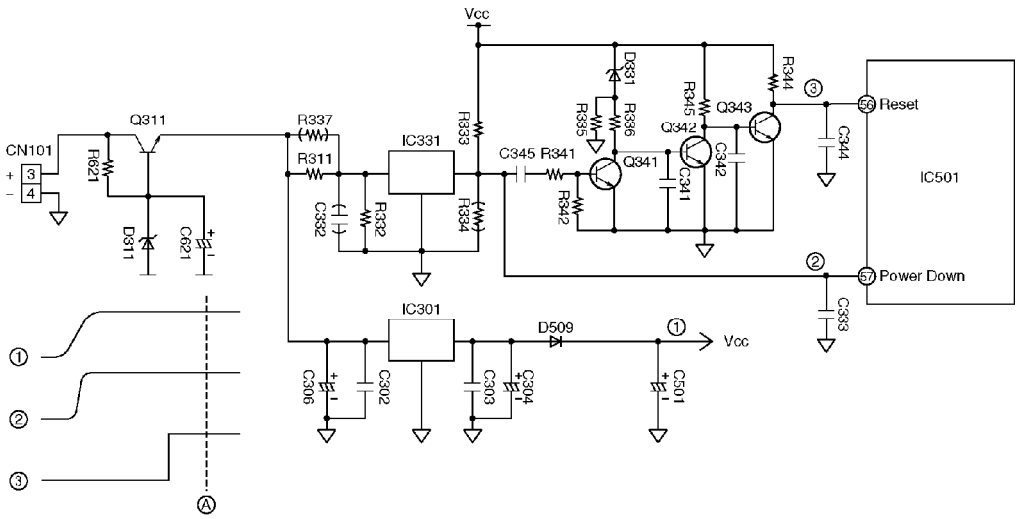

13.18. Antenna Diversity

Antenna Diversity improve conversation quality. This means to reduce some noise during conversation. RF unit send LQA (Link Quality Alarm) signal to IC751 when increase Error Bit's. Then IC751 control RF switch IC761 to switch another Antenna.
Antenna selection control by IC501 is available only in test mode.

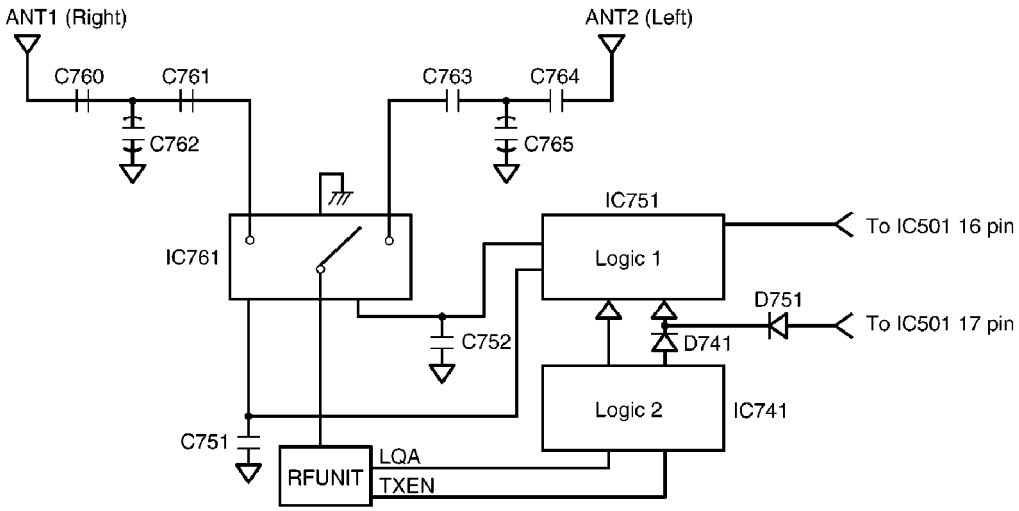

14. BLOCK DIAGRAM (Handset)

15. CIRCUIT OPERATION (Handset)

15.1. Power Supply Circuit

Voltage is supplied separately to each block.

15.2. Charge Circuit

Ni-cd battery is connected to CN202. When the handset is put on the cradle of the base unit, the power is supplied from CHARGE1 and CHARGE2 terminals to charge the battery. Q207 detects

the voltage of CHARGE1 and CHARGE2 terminals, then the handset makes ID code setting (*) with the base unit.

15.3. Ringer Circuit

If the ringer volume is set to low and an alarm tone is output from 39 pin, IC201 DSP and input to Q209. Then Q208 is turned off. If the ringer volume is set to high, Q208 turns on and results in a louder beep tone.

Circuit Diagram

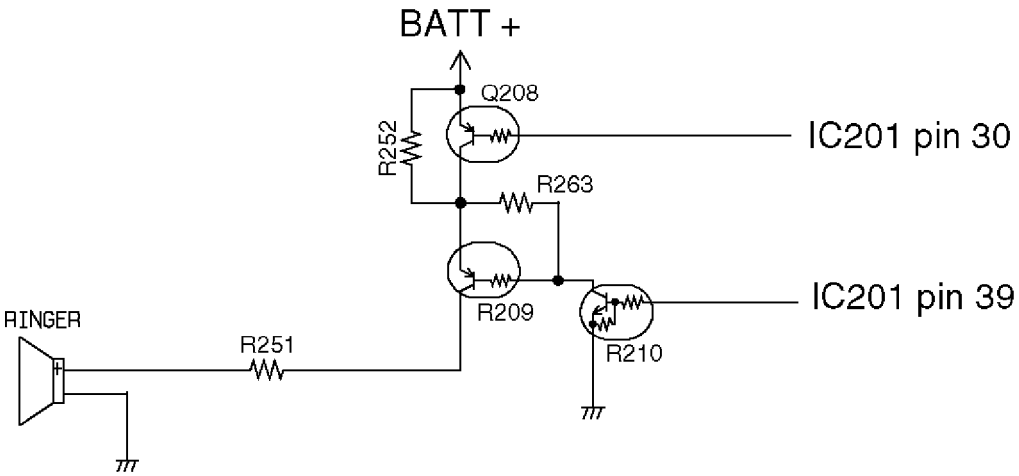

15.4. Sending Signal

The voice signal from the microphone input to pin 42 (CIDIP) and pin 41(CIDIN) of IC201 (DSP). CN203 is the headphone jack. When the headphone is connected, the Q206 detect it. The input from the microphone of the handset (CIDIN, CIDIP) is cut and the microphone signal from the headphone is input to pin 47 of IC201 (HMIN). Also the power for the microphone is supplied from Q211, and the power is turned OFF on standby.

Circuit Diagram

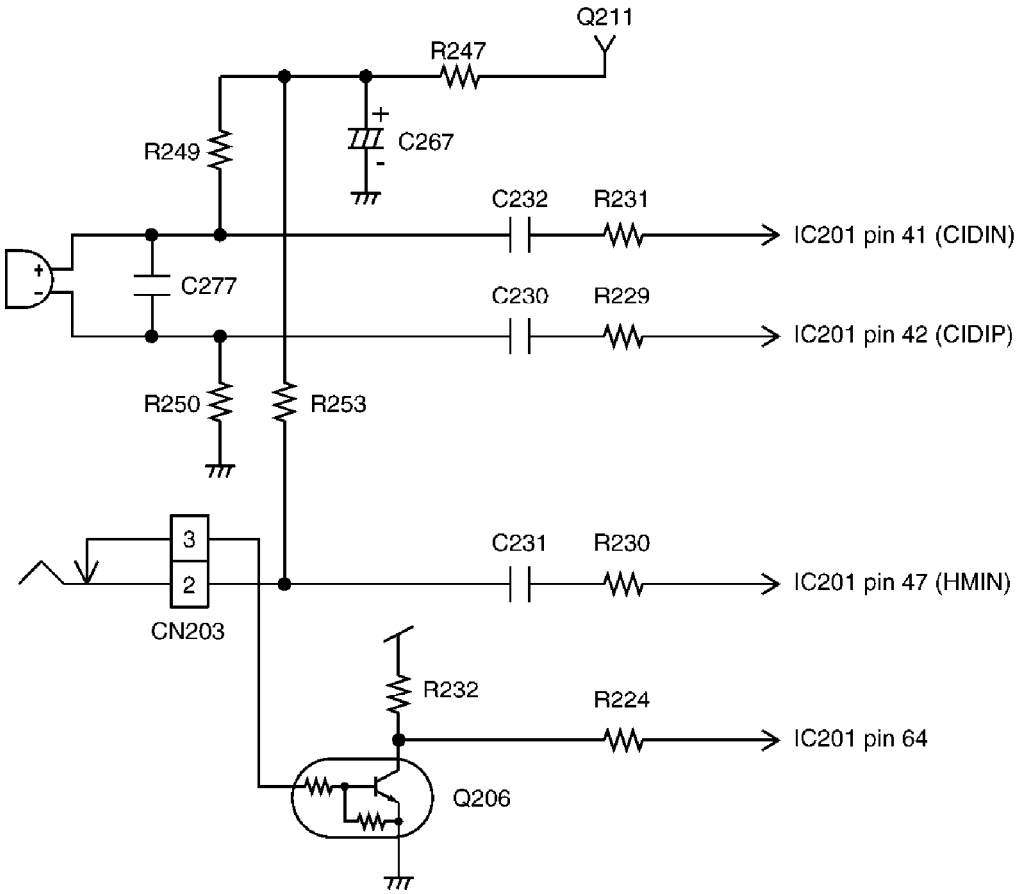

15.5. Reception Signal Circuit

The received signal from the base unit is output from pins 33 (SPN) and 32 (SPP) of IC201 (DSP) as the voice signal. SPN is the inverse output of SPP, and the speaker is driven by SPN and SPP. CN203 is the headphone jack. When the headphone is connected to this jack, the output to the speaker of the handset (SPN,SPP) is cut and the voice signal is output to the headphone (HSOUT) only.

Circuit Diagram

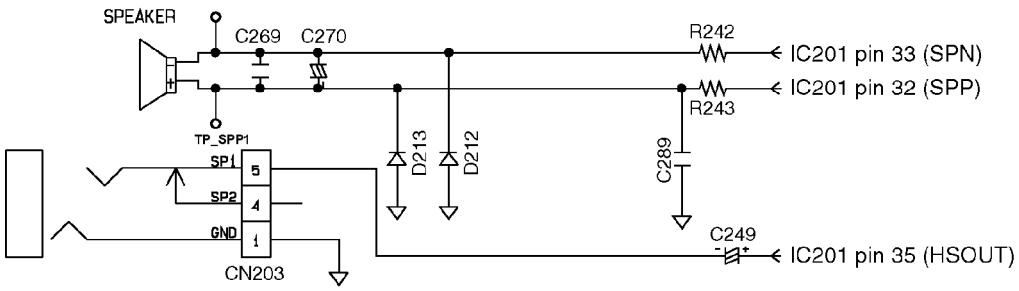

16. CPU DATA (Base Unit)

16.1. IC501

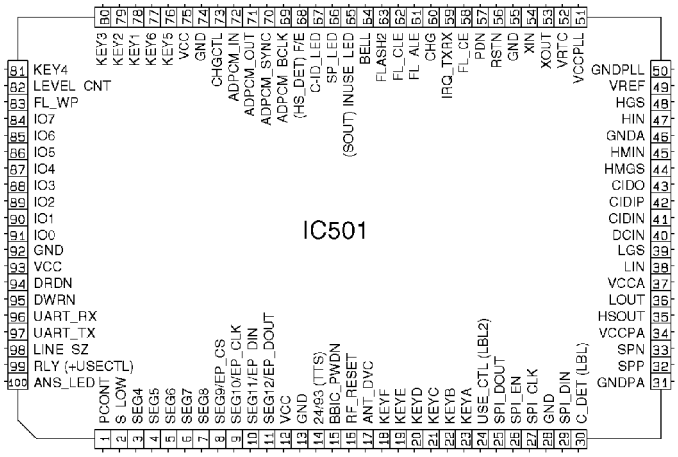

Pin	Description	I/O	High	Hi-z	Low
1	PCONT	D.O	pin2=H->High Power pin2=L->Super Low Power	-	pin2=HiZ->Low Power pin2=L->Super Low Power
2	S_LOW	D.O	-	pin1=H->High Power pin1=L->Low Power	pin1=H->High Power pin1=L->Super Low Power
3	SEG4	D.O	Normal	-	Reset
4	SEG5	D.O	Not	-	Active
5	SEG6	D.O	Data	-	Instruct
6	SEG7	D.O	Read	-	Write
7	SEG8	D.O	Active	-	Not
8	SEG9/EP_CS	D.O	High	-	Low
9	SEG10/EP_CLK	D.O	High	-	Low
10	SEG11/EP_DIN	D.O	High	-	Low
11	SEG12/EP_DOUT	D.O	High	-	Low
12	VCC	VCC	Vcc	-	-
13	GND	GND	-	-	GND
14	24/93 (TTS)	D.O	-	-	Normal
15	BBIC_PWDN	D.O	Not	-	Active
16	RF_RESET	D.O	Normal	-	Reset
17	ANT_DVC	D.O	High	-	Low
18	KEYF	D.O	Active	Not	-
19	KEYE	D.O	Active	Not	-
20	KEYD	D.O	Active	Not	-
21	KEYC	D.O	Active	Not	-
22	KEYB	D.O	Active	Not	-
23	KEYA	D.O	Active	Not	-
24	USE_CTL (LBL2)	D.O	RLY Off	-	RLY On
25	SPI_DOUT	D.I	High	-	Low
26	SPI_EN	D.O	Not	-	Active
27	SPI_CLK	D.O	High	-	Low
28	GND	GND	-	-	GND
29	SPI_DIN	D.O	High	-	Low
30	C_DET (LBL)	D.O	-	-	Normal
31	GNDPA	GND	-	-	GND
32	SPP	A.O	-	-	-
33	SPN	A.O	-	-	-
34	VCCPA	VCC	VCC	-	-
35	HSOUT	A.O	-	-	Recording
36	LOUT	A.O	-	-	-
37	VCCA	VCC	VCC	-	-
38	LIN	A.I	-	-	-
39	LGS	A.O	-	-	-
40	DCIN	A.I	-	-	-
41	CIDIN	A.I	-	-	-
42	CIDIP	A.I	-	-	-
43	CIDO	A.O	-	-	-
44	HMGS	A.O	-	-	-
45	HMIN	A.I	-	-	-
46	GNDA	GND	-	-	GND
47	HIN	A.I	-	-	-
48	HGS	A.O	-	-	-
49	VREF	A.O	-	-	-
50	GNDPLL	GND	-	-	GND

Pin	Description	I/O	High	Hi-z	Low
51	VCCPLL	VCC	VCC	-	-
52	VRTC	VCC	VCC	-	-
53	XOUT	A.O	-	-	-
54	XIN	A.I	-	-	-
55	GND	GND	-	-	GND
56	RSTN	D.I	Normal	-	Reset
57	PDN	D.I	Power On	-	Power Down
58	FL_CE	D.O	Not	-	Active
59	IRQ_TXRX	D.I	Normal	-	Interrupt
60	CHG	D.I	Off charge	-	On Charge
61	FL_ALE	D.O	Latch	-	Not
62	FL_CLE	D.O	Latch	-	Not
63	FLASH2	D.O	-	-	Normal
64	BELL	D.I	High	-	Low
65	(SOUT) INUSE_LED	D.O	Off	-	On
66	SP_LED	D.O	Off	-	On
67	C-ID_LED	D.O	Off	-	On
68	(HS_DET) F/E	D.I	E2PROM	-	FLASH
69	ADPCM_BCLK	D.I	High	-	Low
70	ADPCM_SYNC	D.I	High	-	Low
71	ADPCM_OUT	D.I	High	-	Low
72	ADPCM_IN	D.O	High	-	Low
73	CHGCTL	D.O	-	Charge	Non Charge
74	GND	GND	-	-	GND
75	VCC	VCC	VCC	-	-
76	KEY5	D.I	Key In	-	Non
77	KEY6	D.I	Key In	-	Non
78	KEY1	D.I	Key In	-	Non
79	KEY2	D.I	Key In	-	Non
80	KEY3	D.I	Key In	-	Non
81	KEY4	D.I	Key In	-	Non
82	LEVEL_CNT	D.O	Not	-	Recording
83	FL_WP	D.O	Off	-	On
84	IO7	D.O	High	-	Low
85	IO6	D.O	High	-	Low
86	IO5	D.O	High	-	Low
87	IO4	D.O	High	-	Low
88	IO3	D.O	High	-	Low
89	IO2	D.O	High	-	Low
90	IO1	D.O	High	-	Low
91	IO0	D.O	High	-	Low
92	GND	GND	-	-	GND
93	VCC	VCC	VCC	-	-
94	DRDN	D.O	Active	-	Not
95	DWRN	D.O	Active	-	Not
96	UART_RX	D.I	High	-	Low
97	UART_TX	D.O	High	-	Low
98	LINE_SZ	D.O	On	-	Off
99	RLY (+USECTL)	D.O	On	-	Off
100	ANS_LED	D.O	Off	-	On

17. CPU DATA (Handset)

17.1. IC201

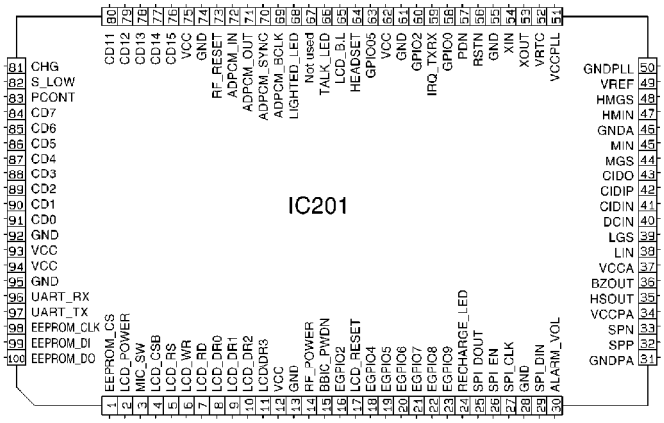

Pin	Description	I/O	High	Hi-z	Low
1	EEPROM_CS	D.O	Active	-	Not
2	LCD_POWER	D.O	Off	-	On
3	MIC_SW	D.O	Bias Off	-	Bias On
4	LCD_CSB	D.O	Not	-	Active
5	LCD_RS	D.O	Data	-	Instruct
6	LCD_WR	D.O	Read	-	Write
7	LCD_RD	D.O	Active	-	Not
8	LCD_DR0	D.O	High	-	Low
9	LCD_DR1	D.O	High	-	Low
10	LCD_DR2	D.O	High	-	Low
11	LCDDR3	D.O	High	-	Low
12	VCC	VCC	Vcc	-	-
13	GND	GND	-	-	GND
14	RF_POWER	D.O	Off	-	On
15	BBIC_PWDN	D.O	Not	-	Active
16	EGPIO2	D.O	Active	Not	-
17	LCD_RESET	D.O	Not	-	Reset
18	EGPIO4	D.O	Active	Not	-
19	EGPIO5	D.O	Active	Not	-
20	EGPIO6	D.O	Active	Not	-
21	EGPIO7	D.O	Active	Not	-
22	EGPIO8	D.O	Active	Not	-
23	EGPIO9	D.O	Active	Not	-
24	RECHARGE_LED	D.O	-	-	Normal
25	SPI_DOUT	D.I	High	-	Low
26	SPI_EN	D.O	Not	-	Active
27	SPI_CLK	D.O	High	-	Low
28	GND	-	-	-	GND
29	SPI_DIN	D.O	High	-	Low
30	ALARM_VOL	D.O	Off	-	On
31	GNDPA	GND	-	-	GND
32	SPP	A.O	-	-	-
33	SPN	A.O	-	-	-
34	VCCPA	VCC	VCC	-	-
35	HSOUT	A.O	-	-	-
36	BZOUT	A.O	-	-	-
37	VCCA	VCC	VCC	-	-
38	LIN	A.I	-	-	-
39	LGS	A.O	-	-	-
40	DCIN	A.I	-	-	-
41	CIDIN	A.I	-	-	-
42	CIDIP	A.I	-	-	-
43	CIDO	A.O	-	-	-
44	MGS	A.O	-	-	-
45	MIN	A.I	-	-	-
46	GNDA	GND	-	-	GND
47	HMIN	A.I	-	-	-
48	HMGS	A.O	-	-	-
49	VREF	A.O	-	-	-
50	GNDPLL	GND	-	-	GND

Pin	Description	I/O	High	Hi-z	Low
51	VCCPLL	VCC	VCC	-	-
52	VRTC	VCC	VCC	-	-
53	XOUT	A.O	-	-	-
54	XIN	A.I	-	-	-
55	GND	GND	-	-	GND
56	RSTN	D.I	Normal	-	Reset
57	PDN	D.I	Power On	-	Power Down
58	GPIO0	D.O	-	-	Normal
59	IRQ_TXRX	D.I	Normal	-	Interrupt
60	GPIO2	D.O	-	-	Normal
61	GND	D.O	-	-	Normal
62	VCC	D.O	-	-	Normal
63	GPIO05	D.O	-	-	Normal
64	HEADSET	D.I	Headset In	-	Non
65	LCD_B.L	D.O	On	-	Off
66	TALK_LED	D.O	-	-	Normal
67	Not used	D.O	-	-	Normal
68	LIGHTED_LED	D.O	On	-	Off
69	ADPCM_BCLK	D.I	High	-	Low
70	ADPCM_SYNC	D.I	High	-	Low
71	ADPCM_OUT	D.I	High	-	Low
72	ADPCM_IN	D.O	High	-	Low
73	RF_RESET	D.O	Normal	-	Reset
74	GND	GND	-	-	GND
75	VCC	VCC	VCC	-	-
76	CD15	D.I	Key In	-	Non
77	CD14	D.I	Key In	-	Non
78	CD13	D.I	Key In	-	Non
79	CD12	D.I	Key In	-	Non
80	CD11	D.O	-	-	Normal
81	CHG	D.I	Off Charge	-	On Charge
82	S_LOW	D.O	-	Pin 83 = H: High Power Pin 83 = L: Low Power	Super Low Power
83	PCONT	D.O	Pin 82 = Hiz High Power Pin 82 = L: Super Low Power	-	Pin 82 = Hiz Low Power Pin 82 = L: Super Low Power
84	CD7	D.O	-	-	Normal
85	CD6	D.O	-	-	Normal
86	CD5	D.O	-	-	Normal
87	CD4	D.O	-	-	Normal
88	CD3	D.O	-	-	Normal
89	CD2	D.O	-	-	Normal
90	CD1	D.O	-	-	Normal
91	CD0	D.O	-	-	Normal
92	GND	GND	-	-	GND
93	VCC	VCC	VCC	-	-
94	VCC	VCC	VCC	-	-
95	GND	GND	-	-	GND
96	UART_RX	D.I	High	-	Low
97	UART_TX	D.O	High	-	Low
98	EEPROM_CLK	D.O	High	-	Low
99	EEPROM_DI	D.O	High	-	Low
100	EEPROM_DO	D.I	High	-	Low

18. EXPLANATION OF IC TERMINALS (RF Unit, Base Unit)

18.1. IC101

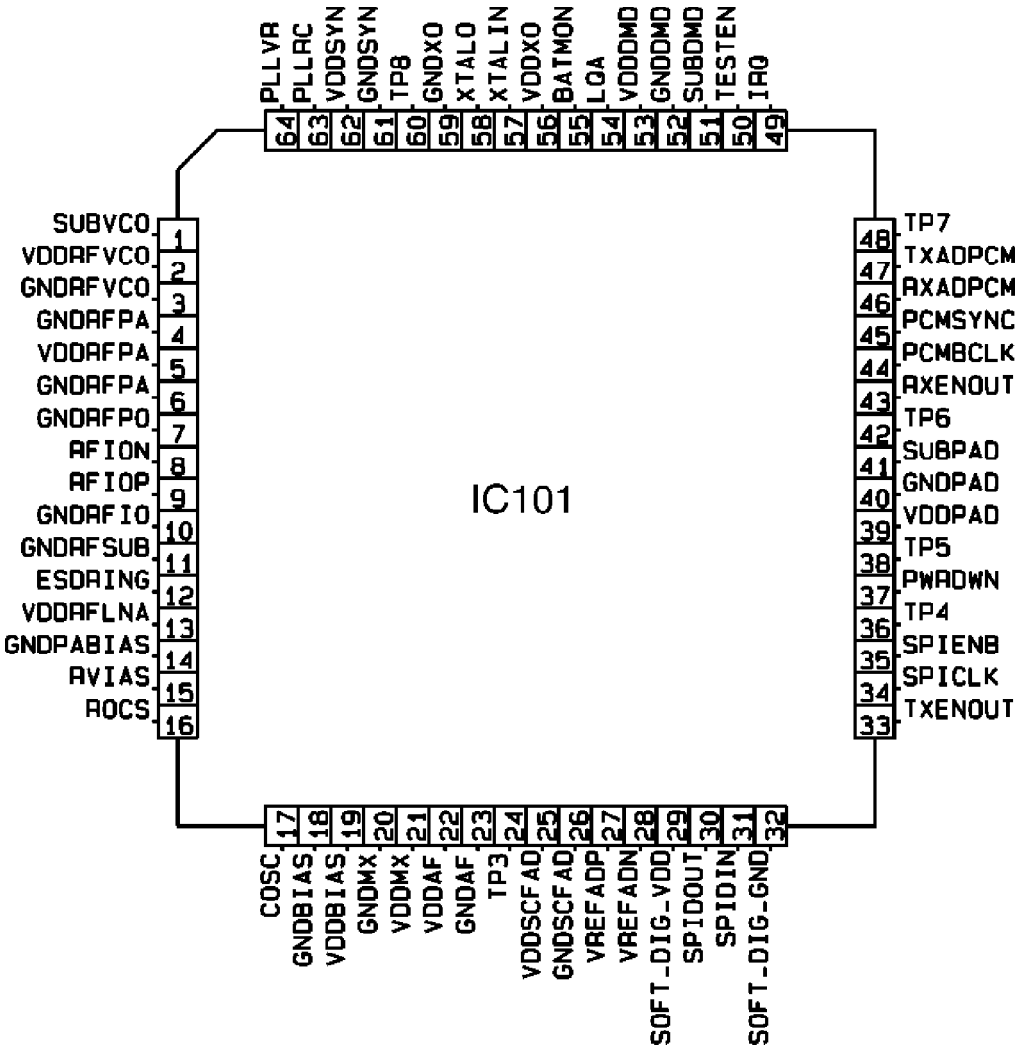
IC101
SUBVCO 1
VDDRFVCO 2
GNDRFVCO 3
GNDRFPA 4
VDDRFPA 5
GNDRFPA 6
GNDRFPO 7
RFION 8
RFIOP 9
GNDRFIO 10
GNDRFSUB 11
ESDRING 12
VDDRFLNA 13
GNDPABIAS 14
RVIAS 15
ROCS 16
PLLVR 64
PLLRC 63
VDDSYN 62
GNDSYN 61
TP8 60
GNDXO 59
XTALO 58
XTALIN 57
VDDXO 56
BATMON 55
LQA 54
VDDDMD 53
GNDDMD 52
SUBDMD 51
TESTEN 50
IRQ 49
TP7 48
TXADPCM 47
RXADPCM 46
PCMSYNC 45
PCMBCLK 44
RXENOUT 43
TP6 42
SUBPAD 41
GNDPAD 40
VDDPAD 39
TP5 38
PWRDWN 37
TP4 36
SPIENB 35
SPICLK 34
TXENOUT 33
COSC 17
GNDBIAS 18
VDDBIAS 19
GNDMX 20
VDDMX 21
VDDAF 22
GNDAF 23
TP3 24
VDDSCFAD 25
GNDSCFAD 26
VREFADP 27
VREFADN 28
SOFT_DIG_VDD 29
SPIDOUT 30
SPIDIN 31
SOFT_DIG_GND 32

Pin	Description	I/O
1	SUBVCO	GND
2	VDDRFVCO	VCC
3	GNDRFVCO	GND
4	GNDRFPA	GND
5	VDDRFPA	VCC
6	GNDRFPA	GND
7	GNDRFPO	GND
8	RF ION	I/O
9	RF IOP	I/O
10	GNDRFIO	GND
11	GNDRFSUB	GND
12	ESDRING	GND
13	VDDRFLNA	VCC
14	GNDPABIAS	GND
15	RBIAS	I
16	ROCS	I
17	COSC	I
18	GNDBIAS	GND
19	VDDBIAS	VCC
20	GNDMX	GND
21	VDDMX	VCC
22	VDDAF	VCC
23	GNDAF	GND
24	TP3	O
25	VDDSCFAD	VCC
26	GNDSCFAD	GND
27	VREFADP	VCC
28	VREFADN	I
29	SOFT_DIG_VDD	VCC
30	SPIDOUT	D.O
31	SPIDIN	D.I
32	SOFT_DIG_GND	GND

Pin	Description	I/O
33	TXENOUT	D.O
34	SPICLK	D.I
35	SPIENB	D.I
36	RESET	D.I
37	PWRDWN	D.I
38	MCLKOUT	O
39	VDDPAD	VCC
40	GNDPAD	GND
41	SUBPAD	GND
42	TP6	D.O
43	RXENOUT	D.O
44	PCMBCLK	D.O
45	PCMSYNC	D.O
46	RXADPCM	D.O
47	TXADPCM	D.I
48	TP7	D.O
49	IRQ	D.O
50	TESTEN	D.I
51	XUBDMD	GND
52	GNDDMD	GND
53	VDDDMD	VCC
54	LQA	D.O
55	BATMON	I
56	VDDXO	VDD
57	XTALIN	I
58	XTALO	O
59	GNDXO	GND
60	TP8	D.I
61	GNDSYN	GND
62	VDDSYN	VCC
63	PLLRC	O
64	PLLVR	I

19. HOW TO REPLACE FLAT PACKAGE IC

19.1. Preparation

- SOLDER

Sparkle Solder 115A-1, 115B-1 or Almit Solder KR-19, KR-19RMA

- Soldering iron

Recommended power consumption will be between 30 W to 40 W.
Temperature of Copper Rod 662 ± 50°F (350 ± 10°C)
(An expert may handle between 60 W to 80 W iron, but beginner might damage foil by overheating.)

- Flux

HI115 Specific gravity 0.863
(Original flux will be replaced daily.)

19.2. Procedure

1. Temporary fix FLAT PACKAGE IC by soldering on two marked 2 pins.

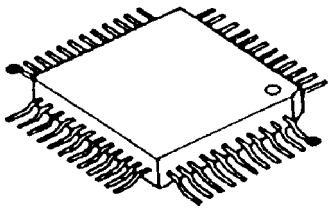

● - - - - - - Temporary soldering point.

***Most important matter is accurate setting of IC to the corresponding soldering foil.**

2. Apply flux for all pins of FLAT PACKAGE IC.

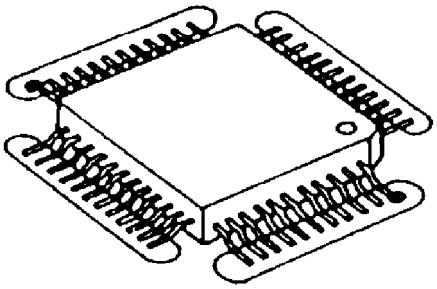

Flux

3. Solder employing specified solder to direction of arrow, as sliding the soldering iron.

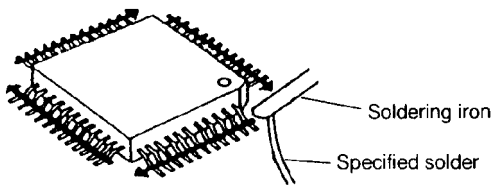

19.3. Modification Procedure of Bridge

1. **Re-solder slightly on bridged portion.**
2. **Remove remained solder along pins employing soldering iron as shown in below figure.**

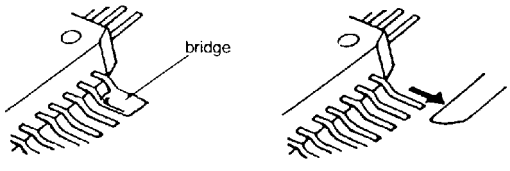

20. CABINET AND ELECTRICAL PARTS (Base Unit)

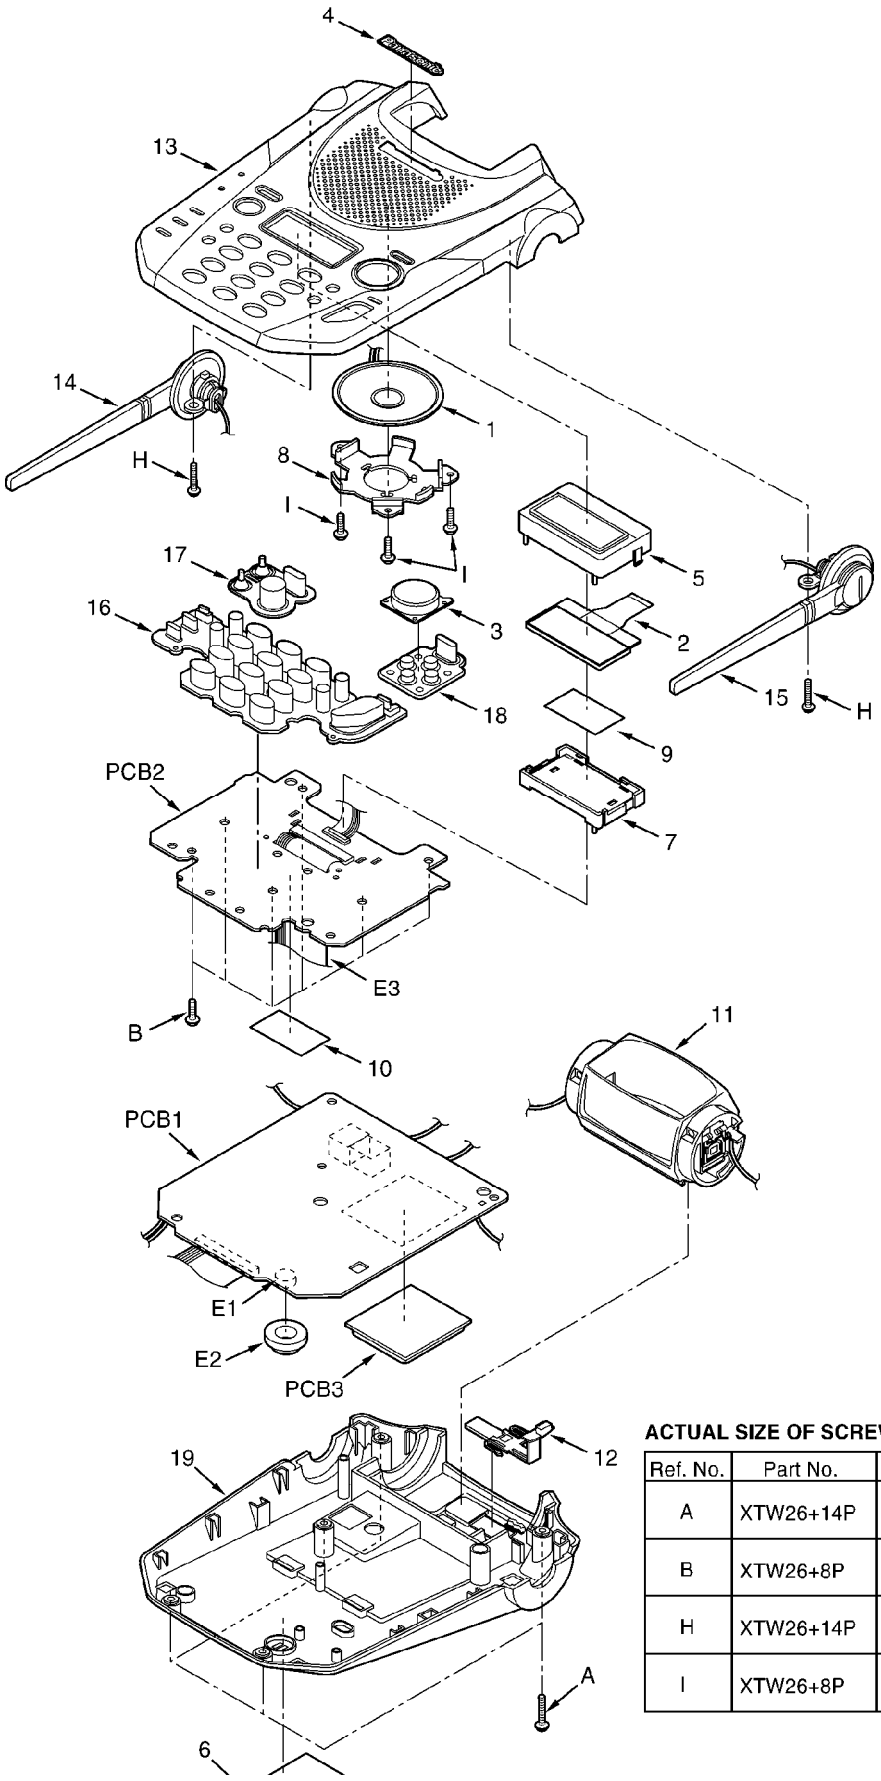

ACTUAL SIZE OF SCREWS

Ref. No.	Part No.	Screw
A	XTW26+14P	
B	XTW26+8P	
H	XTW26+14P	
I	XTW26+8P	

21. CABINET AND ELECTRICAL PARTS (Handset)

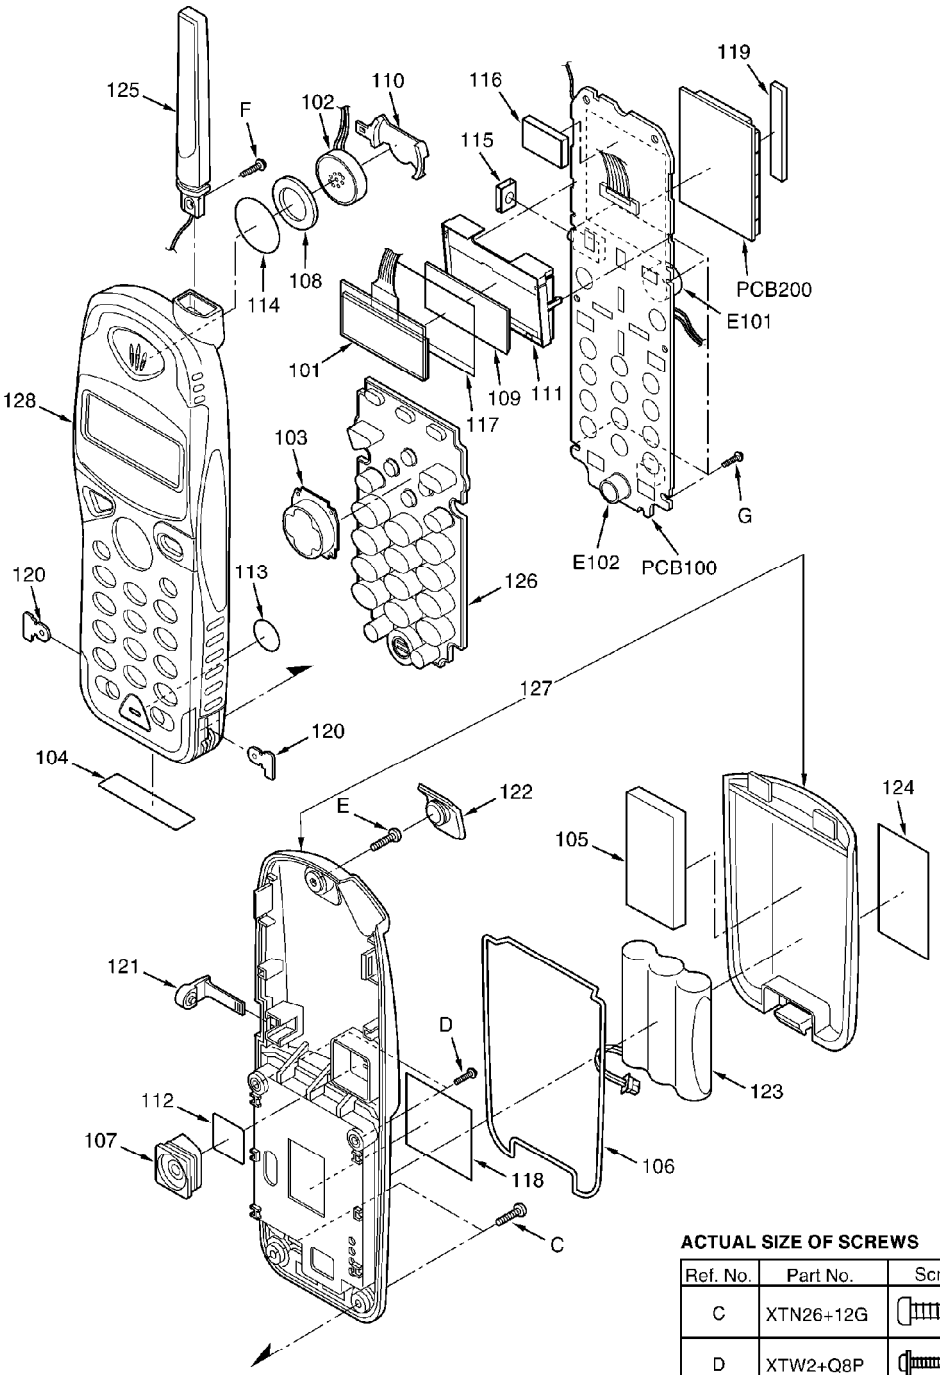

ACTUAL SIZE OF SCREWS

Ref. No.	Part No.	Screw
C	XTN26+12G	
D	XTW2+Q8P	
E	XTN26+12G	
F	XTW26+12P	
G	XTW2+Q8P	

22. ACCESSORIES AND PACKING MATERIALS

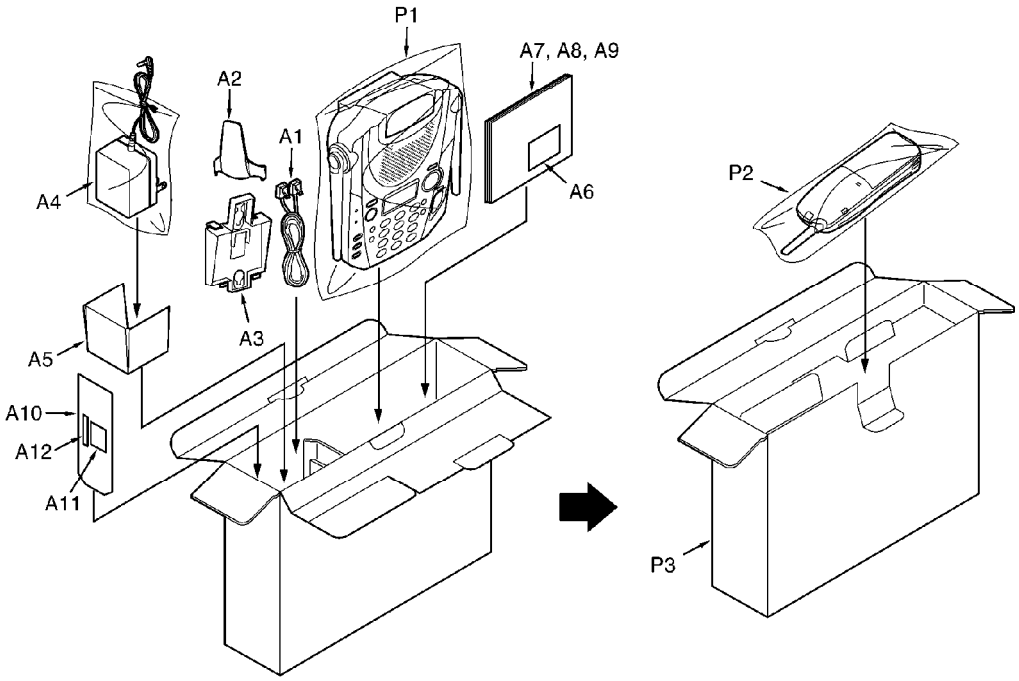

23. REPLACEMENT PARTS LIST

This replacement parts list are U.S.A. version only.
Note:

1. **RTL (Retention Time Limited)**
   The marking (RTL) indicates that the Retention Time is limited for this item.
   After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention.
   After the end of this period, the assembly will no longer be available.
2. **Important safety notice**
   Components identified by a ⚠ mark special characteristics important for safety. When replacing any of these components, use only manufacture's specified parts.
3. **The S mark indicates service standard parts and may differ from production parts.**

4. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) K=1000 Ω , M=1000k Ω

All capacitors are in MICRO FARADS (μ F) P= μ μ F

***Type & Wattage of Resistor**

Type

ERC:Solid ERD:Carbon PQRD:Carbon	ERX:Metal Film ERG:Metal Oxide ER0:Metal Film	PQ4R:Carbon ERS:Fusible Resistor ERF:Cement Resistor

Wattege

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W

*Type & Voltage of Capacitor

Type

ECFD:Semi-Conductor ECQS:Styrol PQCUV:Chip ECQMS:Mica	ECCD,ECKD,ECBT,PQCBC:Ceramic ECQE,ECQV,ECQG:Polyester ECEA,ECSZ:Electlytic ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others	
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J :6.3V 1A :10V 1C :16V 1E,25:25V	1V :35V 50,1H:50V 1J :63V 2A :100V

23.1. Base Unit

23.1.1. CABINET AND ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
1	L0AA05A00011	SPEAKER	
2	PQADGP0831GN	LIQUID CRYSTAL DISPLAY	S
3	PQBC10334Z1	BUTTON, NAVIGATOR KEY	S
4	PQGB7Y	BADGE	
5	PQGP10180Z1	LCD PANEL	S
6	PQGT14557Z	NAME PLATE (for KX-TG2583B)	
6	PQGT14506Z	NAME PLATE (for KX-TG2583S)	
6	PQGT14646Z	NAME PLATE (for KX-TG2583W)	
7	PQHR10848Z	LCD HOLDER	
8	PQHR10849Z	SPEAKER HOLDER	
9	PQHS10475Z	LCD TAPE	
10	PQHS10476Z	DOUBLE SIDE TAPE	
11	PQZHTG2583BH	CHARGE CASE ASS'Y (for KX-TG2583B) (for KX-TG2583S)	
11	PQZHTG2583WH	CHARGE CASE ASS'Y (for KX-TG2583W)	
12	PQKE10333Z1	HOOK LEVER (for KX-TG2583B) (for KX-TG2583S)	S
12	PQKE10333Z2	HOOK LEVER (for KX-TG2583W)	S
13	PQYM10112Z1	UPPER CABINET (for KX-TG2583B)	S
13	PQYM10112Z2	UPPER CABINET (for KX-TG2583S)	S
13	PQYM10112Z4	UPPER CABINET (for KX-TG2583W)	S
14	PQSA10109Y	ANTENNA (for KX-TG2583B) (for KX-TG2583S)	
14	PQSA10109X	ANTENNA (for KX-TG2583W)	
15	PQSA10110Y	ANTENNA (for KX-TG2583B) (for KX-TG2583S)	
15	PQSA10110X	ANTENNA (for KX-TG2583W)	
16	PQSX10168Z	RUBBER SWITCH, DIAL (for KX-TG2583B) (for KX-TG2583S)	
16	PQSX10168Y	RUBBER SWITCH, DIAL (for KX-TG2583W)	
17	PQSX10169Y	RUBBER SWITCH, TAM (for KX-TG2583B)	
17	PQSX10169Z	RUBBER SWITCH, TAM (for KX-TG2583S)	

Ref. No.	Part No.	Part Name & Description	Remarks
17	PQSX10169X	RUBBER SWITCH, TAM (for KX-TG2583W)	
18	PQSX10170Y	RUBBER SWITCH, NAVI (for KX-TG2583B)	
18	PQSX10170Z	RUBBER SWITCH, NAVI (for KX-TG2583S)	
18	PQSX10170W	RUBBER SWITCH, NAVI (for KX-TG2583W)	
19	PQYF10195Z1	LOWER CABINET(for KX-TG2583B) (for KX-TG2583S)	S
19	PQYF10195Z2	LOWER CABINET (for KX-TG2583W)	S

23.1.2. MAIN P.C. BOARD PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB1	PQWP1G2583BH	MAIN P.C.BOARD ASS'Y (RTL)	
		(ICS)	
IC301	PQVIXCF4502P	IC	S
IC331	PQVIPS3432UT	IC	S
IC501	C2HBBJ000006	IC	
IC571	PQWITG2583BH	IC	
IC741	PQVITC7S08FU	IC	S
IC751	PQVITC7W74U	IC	S
IC761	PQVISPM3204T	IC	S
		(TRANSISTORS)	
Q101	2SD1819A	TRANSISTOR(SI)	
Q115	2SD1819A	TRANSISTOR(SI)	
Q121	2SA1625	TRANSISTOR(SI)	S
Q122	PQVT2N6517CA	TRANSISTOR(SI)	S
Q131	2SC2120	TRANSISTOR(SI)	S
Q311	2SD2136	TRANSISTOR(SI)	
Q315	2SD1758Q	TRANSISTOR(SI)	S
Q321	2SD1819A	TRANSISTOR(SI)	
Q341	2SD1819A	TRANSISTOR(SI)	
Q342	2SD1819A	TRANSISTOR(SI)	
Q343	2SD1819A	TRANSISTOR(SI)	
Q371	2SD2136	TRANSISTOR(SI)	
Q381	2SD1819A	TRANSISTOR(SI)	
Q445	2SD1819A	TRANSISTOR(SI)	
Q451	PQVTDTC123JU	TRANSISTOR(SI)	S
Q461	2SD1819A	TRANSISTOR(SI)	
Q485	2SD1819A	TRANSISTOR(SI)	
Q577	UN5213	TRANSISTOR(SI)	S
Q601	2SD1994A	TRANSISTOR(SI)	
Q611	2SD1994A	TRANSISTOR(SI)	
Q621	2SD2137	TRANSISTOR(SI)	
		(DIODES)	
D101	PQVDS1ZB60F1	DIODE(SI)	S
D103	MA111	DIODE(SI)	
D117	MA111	DIODE(SI)	
D118	MA111	DIODE(SI)	
D121	PQVDRLZ20A	DIODE(SI)	S
D131	PQVDRLZ2R0	DIODE(SI)	S
D311	MA8075	DIODE(SI)	
D315	MA8047	DIODE(SI)	
D321	MA111	DIODE(SI)	
D331	MA8036H	DIODE(SI)	
D371	MA111	DIODE(SI)	
D376	MA8220	DIODE(SI)	
D377	MA8220	DIODE(SI)	
D445	MA153	DIODE(SI)	
D481	MA8051	DIODE(SI)	
D482	MA8051	DIODE(SI)	
D509	PQVDHRU0203A	DIODE(SI)	S
D515	MA111	DIODE(SI)	
D516	MA111	DIODE(SI)	
D517	MA111	DIODE(SI)	
D518	MA111	DIODE(SI)	
D519	MA111	DIODE(SI)	

Ref. No.	Part No.	Part Name & Description	Remarks
D521	PQVDHRU0203A	DIODE(SI)	S
D611	MA8043	DIODE(SI)	
D621	MA8082	DIODE(SI)	
D741	MA111	DIODE(SI)	
D751	MA111	DIODE(SI)	
		(CONNECTORS)	
CN101	PQJJ2H003Z	DC-TEL	S
CN581	PQJS30B37Z	CONNECTOR SOCKET	S
		(COILS)	
L101	PQLQXF330K	COIL	S
L102	PQLQXF330K	COIL	S
L481	PSLQR2T100K	COIL	S
L482	PSLQR2T100K	COIL	S
L501	PFVF2P221SG	COIL	
L515	PQLQR2K1A102	COIL	
L516	PQLQR2K1A102	COIL	
		(RESISTOR ARRAYS)	
RA581	EXRV8V221JV	RESISTOR ARRAY	
RA582	EXRV8V472JV	RESISTOR ARRAY	S
RA584	EXRV8V472JV	RESISTOR ARRAY	S
		(SURGE ABSORBERS)	
SA101	PQVDDSS301L	SURGE ABSORBER	
SA102	PQVDDSS301L	SURGE ABSORBER	
		(OTHERS)	
X501	PQVCK4096N9Z	CRYSTAL OSCILLATOR	S
E1	PQJM146Y	MICROPHONE	
E2	PQMG10025Z	CUSHION RUBBER, MIC	
E3	PQJE10113Z	FFC	
P101	PQRPAR390N	POSISTOR	S
G601	PQJT10152Z	CHARGE TERMINAL	
G602	PQJT10152Z	CHARGE TERMINAL	
G603	PQJT10152Z	CHARGE TERMINAL	
G604	PQJT10152Z	CHARGE TERMINAL	
G605	PQJT10152Z	CHARGE TERMINAL	
G606	PQJT10152Z	CHARGE TERMINAL	
		(RESISTORS)	
R103	ERJ3GEYJ104	100k	
R104	ERJ3GEYJ104	100k	
R106	ERJ3GEYJ472	4.7k	
R107	ERJ3GEYJ473	47k	
R111	ERJ3GEYJ394	390k	
R112	ERJ3GEYJ394	390k	
R113	ERJ3GEYJ472	4.7k	
R115	ERJ3GEYJ125	1.2M	
R116	ERDS1VJ106	10M	
R117	ERJ3GEYJ335	3.3M	
R118	ERJ3GEYJ102	1k	
R121	ERJ3GEYJ104	100k	
R122	ERJ3GEYJ103	10k	
R123	ERJ3GEYJ153	15k	
R124	ERJ3GEYJ473	47k	
R128	ERJ3GEYJ103	10k	
R132	ERJ3GEYJ393	39k	
R133	ERJ3GEYJ102	1k	

Ref. No.	Part No.	Part Name & Description	Remarks
R134	ERJ3GEY0R00	0	
R136	ERDS1TJ330	33	S
R138	ERJ3GEYJ470	47	
R139	ERJ3GEYJ122	1.2k	
R140	ERJ3GEYJ821	820	
R311	ERD25TJ221	220	S
R315	ERJ3GEYJ221	220	
R331	ERJ3GEYJ273	27k	
R332	ERJ3GEYJ683	68k	
R333	ERJ3GEYJ103	10k	
R335	ERJ3GEYJ561	560	
R336	ERJ3GEYJ563	56k	
R341	ERJ3GEYJ473	47k	
R342	ERJ3GEYJ224	220k	
R344	ERJ3GEYJ104	100k	
R345	ERJ3GEYJ224	220k	
R371	ERJ3GEYJ121	120	
R372	ERJ3GEYJ561	560	
R373	ERJ3GEYJ390	39	
R374	ERJ3GEYJ220	22	
R375	ERJ3GEYJ220	22	
R376	ERJ3GEYJ220	22	
R377	ERDS1TJ221	220	S
R378	ERDS1TJ221	220	S
R381	ERJ3GEYJ563	56k	
R382	ERJ3GEYJ563	56k	
R383	ERJ3GEYJ103	10k	
R384	ERJ3GEYJ104	100k	
R411	ERJ3GEYJ394	390k	
R412	ERJ3GEYJ394	390k	
R413	ERJ3GEYJ103	10k	
R414	ERJ3GEYJ103	10k	
R415	ERJ3GEYJ473	47k	
R431	ERJ3GEYJ222	2.2k	
R433	ERJ3GEYJ393	39k	
R442	ERJ3GEYJ682	6.8k	
R443	ERJ3GEYJ103	10k	
R444	ERJ3GEYJ332	3.3k	
R445	ERJ3GEYJ564	560k	
R446	ERJ3GEYJ105	1M	
R447	ERJ3GEYJ151	150	
R448	ERJ3GEYJ222	2.2k	
R449	ERJ3GEYJ102	1k	
R451	ERJ3GEYJ103	10k	
R461	ERJ3GEYJ150	15	
R462	ERJ3GEYJ392	3.9k	
R464	ERJ3GEYJ474	470k	
R465	ERJ3GEYJ390	39	
R472	ERJ3GEYJ272	2.7k	
R473	ERJ3GEYJ102	1k	
R474	ERJ3GEYJ562	5.6k	
R476	ERJ3GEYJ392	3.9k	
R477	ERJ3GEYJ184	180k	
R485	ERJ3GEYJ102	1k	

Ref. No.	Part No.	Part Name & Description	Remarks
R488	ERJ3GEYJ102	1k	
R541	ERJ3GEYJ151	150	
R542	ERJ3GEYJ331	330	
R543	ERJ3GEYJ331	330	
R544	ERJ3GEYJ331	330	
R571	ERJ3GEYJ104	100k	
R572	ERJ3GEYJ104	100k	
R573	ERJ3GEYJ221	220	
R574	ERJ3GEYJ221	220	
R575	ERJ3GEYJ221	220	
R576	ERJ3GEYJ221	220	
R577	ERJ3GEYJ101	100	
R579	ERJ3GEYJ104	100k	
R585	ERJ3GEYJ221	220	
R586	ERJ3GEYJ472	4.7k	
R587	ERJ3GEYJ472	4.7k	
R593	ERJ3GEYJ472	4.7k	
R611	ERJ3GEYJ221	220	
R621	ERJ3GEYJ471	470	
R658	ERJ3GEYJ180	18	
R659	ERJ3GEYJ221	220	
R660	ERJ3GEYJ821	820	
R664	ERJ3GEYJ180	18	
R666	ERJ3GEYJ180	18	
R751	ERJ3GEYJ103	10k	
R753	ERJ3GEYJ104	100k	
R754	ERJ3GEYJ104	100k	
		(CAPACITORS)	
C101	ECKD2H681KB	680P	S
C102	ECKD2H681KB	680P	S
C103	PQCUV1H154KR	0.15	
C104	PQCUV1H154KR	0.15	
C106	PQCUV1A684KB	0.68	
C111	ECKD2H681KB	680P	S
C112	ECKD2H681KB	680P	S
C115	ECUV1H103KBV	0.01	
C121	ECUV1H103KBV	0.01	
C131	ECUV1H101JCV	100P	
C132	ECUV1H103KBV	0.01	
C134	ECEA1HKS100	10	S
C139	ECEA1CKA100	10	
C140	ECUV1C473KBV	0.047	
C301	ECUV1H103KBV	0.01	
C302	ECUV1C104ZFV	0.1	
C303	ECUV1C104ZFV	0.1	
C304	ECEA1CKA100	10	
C306	ECEA1AU221	220	
C308	ECUV1H103KBV	0.01	
C311	ECEA1CKA100	10	
C315	ECEA1CKA100	10	
C316	ECUV1A105ZFV	1	
C333	ECUV1H103KBV	0.01	
C341	ECUV1H102KBV	0.001	
C342	ECUV1H102KBV	0.001	

Ref. No.	Part No.	Part Name & Description	Remarks
C344	ECUV1C104ZFV	0.1	
C345	ECUV1C104KBV	0.1	
C371	ECUV1C104ZFV	0.1	
C373	ECUV1H103KBV	0.01	
C383	ECUV1H103KBV	0.01	
C411	ECUV1H121JCV	120P	
C412	ECUV1A105ZFV	1	
C413	ECUV1H121JCV	120P	
C414	ECEA1CKA100	10	
C415	ECUV1A105ZFV	1	
C431	ECUV1H272KBV	0.0027	
C432	ECUV1C104KBV	0.1	
C440	ECUV1H100DCV	10P	S
C441	ECUV1A224KBV	0.22	
C442	ECUV1C683KBV	0.068	
C443	ECUV1H101JCV	100P	
C444	ECUV1C104KBV	0.1	
C445	ECEA1CKA100	10	
C448	ECUV1C473KBV	0.047	
C449	ECUV1C104KBV	0.1	
C451	ECUV1C473KBV	0.047	
C453	ECUV1H070CCV	7P	
C461	ECUV1C104ZFV	0.1	
C464	ECUV1H101JCV	100P	
C467	ECUV1H070CCV	7P	
C471	ECUV1A105ZFV	1	
C472	ECST0JY475	4.7	
C474	ECUV1A224KBV	0.22	
C475	PQCUV1H154KR	0.15	
C476	ECUV1A224KBV	0.22	
C477	ECUV1H221JCV	220P	
C481	ECUV1H070CCV	7P	
C482	ECUV1H070CCV	7P	
C483	ECUV1H070CCV	7P	
C488	ECUV1H102KBV	0.001	
C501	ECEA0JU102	1000	
C502	ECUV1C104ZFV	0.1	
C503	ECUV1C104ZFV	0.1	
C504	ECUV1C104ZFV	0.1	
C505	ECUV1C104ZFV	0.1	
C506	ECUV1H080CCV	8P	
C507	ECUV1H050CCV	5P	
C508	ECUV1H332KBV	0.0033	
C511	ECUV1H152KBV	0.0015	
C513	ECUV1C104ZFV	0.1	
C514	EECW5R5D473	0.047	S
C515	ECEA1CKS220	22	S
C516	ECUV1C104ZFV	0.1	
C521	ECEA1AU101	100	S
C522	ECUV1C104ZFV	0.1	
C524	ECEA0JU331	330	
C525	ECUV1C104ZFV	0.1	
C526	ECUV1H332KBV	0.0033	
C571	ECUV1C104ZFV	0.1	

Ref. No.	Part No.	Part Name & Description	Remarks
C572	ECUV1H681JCV	680P	S
C575	ECUV1H681JCV	680P	S
C576	ECUV1H681JCV	680P	S
C577	ECUV1H681JCV	680P	S
C601	ECEA1AU101	100	S
C603	ECUV1C104ZFV	0.1	
C611	ECEA1AU101	100	S
C613	ECEA1AU101	100	S
C614	ECUV1C104ZFV	0.1	
C621	ECEA1EU101	100	S
C631	ECUV1H103KBV	0.01	
C654	ECUV1C104ZFV	0.1	
C657	ECUV1H680JCV	68P	
C663	ECUV1H680JCV	68P	
C665	ECUV1H680JCV	68P	
C741	ECUV1C104ZFV	0.1	
C751	ECUV1H100DCV	10P	S
C752	ECUV1H100DCV	10P	S
C753	ECUV1C104ZFV	0.1	
C760	ECUV1H070CCV	7P	
C761	ECUV1H070CCV	7P	
C763	ECUV1H070CCV	7P	
C764	ECUV1H070CCV	7P	

23.1.3. OPERATIONAL P.C.BOARD PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB2	PQWP2G2583BH	OPERATION P.C.BOARD	
		(LEDS)	
LED841	PQVDBR1111C	LED	S
LED842	PQVDBR1111C	LED	S
LED843	PQVDSML310MT	LED	S
LED844	PQVDBR1111C	LED	S
		(CONNECTORS)	
CN801	PQJS30B37Z	CONNECTOR SOCKET	S
CN802	PQJS22B11Z	FPC CONNECTOR	
		(RESISTORS)	
R801	ERJ3GEYF824	820k	S
R802	ERJ3GEYF434	430k	S
		(CAPACITORS)	
C801	ECUV1A474KBV	0.47	
C802	ECUV1C104KBV	0.1	
C803	ECUV1C104KBV	0.1	
C804	ECUV1C104KBV	0.1	
C805	ECUV1C104KBV	0.1	
C806	ECUV1C104KBV	0.1	
C807	ECUV1A474KBV	0.47	
C808	ECUV1A474KBV	0.47	

23.1.4. RF UNIT PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB3	PQLP10243Z	RF BLOCK	

23.2. Handset

23.2.1. CABINET AND ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
101	PQADGP0831GN	LIQUID CRYSTAL DISPLAY	S
102	PQAX2P07Z	SPEAKER	
103	PQBC10335Z1	BUTTON, NAVIGATOR KEY	S
104	PQGT14558Z	NAME PLATE (for KX-TG2583B)	
104	PQGT14510Z	NAME PLATE (for KX-TG2583S)	
104	PQGT14647Z	NAME PLATE (for KX-TG2583W)	
105	PQHE10119Z	CUSHION, URETHANE FORM	
106	PQHG10620Z	PACKING RUBBER, BATTERY	
107	PQHG10621Z	RINGER RUBBER	
108	PQHG10630Z	PACKING RUBBER	
109	PQHR10727Z	LCD PLATE	
110	PQHR10739Z	SPEAKER HOLDER	
111	PQHR10850Z	LCD HOLDER	
112	PQHS10384Z	PACKING SHEET, RINGER	
113	PQHS10386Z	PACKING SHEET, MIC	
114	PQHS10461Z	PACKING SHEET, SPEAKER	
115	PQHS10484Z	PACKING SHEET, EP CAP	
116	PQHS10485Z	CUSHION, SPEAKER	
117	PQHX10862Z	LCD COVER SHEET	
118	PQHX10934Z	SHEET	
119	PQHX10959Z	RF SPONGE	
120	PQJT10175Z	CHARGE TEMRINAL	
121	PQKE10128Z1	EARPHONE CAP (for KX-TG2583B) (for KX-TG2583S)	S
121	PQKE10128Z2	EARPHONE CAP (for KX-TG2583W)	S
122	PQKE10129Z1	COVER (for KX-TG2583B) (for KX-TG2583S)	S
122	PQKE10129Z2	COVER (for KX-TG2583W)	S
123	PQP508SVC	BATTERY	S
124	PQQT22212Z	CHARGE LABEL	
125	PQSA10120Z	ANTENNA (for KX-TG2583B) (for KX-TG2583S)	
125	PQSA10120X	ANTENNA (for KX-TG2583W)	
126	PQSX10171Z	RUBBER SWITCH (for KX-TG2583B) (for KX-TG2583S)	
126	PQSX10171W	RUBBER SWITCH (for KX-TG2583W)	
127	PQYF10524Z1	REAR CABINET (for KX-TG2583B)	S
127	PQYF10524Z2	REAR CABINET (for KX-TG2583S)	S
127	PQYF10524Z4	REAR CABINET (for KX-TG2583W)	S
128	PQYMTG2583BR	FRONT CABINET ASS'Y (for KX-TG2583B)	
128	PQYMTG2583SR	FRONT CABINET ASS'Y (for KX-TG2583S)	
128	PQYMTG2583WR	FRONT CABINET ASS'Y (for KX-TG2583W)	

23.2.2. MAIN P.C. BOARD PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB100	PQWPTG2583BR	MAIN P.C.BOARD ASS'Y (RTL)	
		(ICS)	
IC201	C2HBBH000015	IC	
IC202	PQWITG2583BR	IC	
IC203	PQVIC62FP33M	IC	S
IC204	PQVIXCP3302M	IC	S
IC205	PQVIC61CN32N	IC	S
		(TRANSISTORS)	
Q201	PQVTDTC143E	TRANSISTOR(SI)	S
Q202	PQVTDTC143E	TRANSISTOR(SI)	S
Q203	PQVTDTA143TU	TRANSISTOR(SI)	
Q204	2SA1797Q	TRANSISTOR(SI)	S
Q205	2SD1819A	TRANSISTOR(SI)	
Q206	PQVTDTC143E	TRANSISTOR(SI)	S
Q207	2SD1819A	TRANSISTOR(SI)	
Q208	PQVTD123T146	TRANSISTOR(SI)	S
Q209	PQVTD123T146	TRANSISTOR(SI)	S
Q210	UN521	TRANSISTOR(SI)	
Q211	PQVTDTA143TU	TRANSISTOR(SI)	
		(DIODES)	
D203	MA111	DIODE(SI)	
D212	MA8150	DIODE(SI)	
D213	MA8150	DIODE(SI)	
D214	PQVD1SR154	DIODE(SI)	S
D215	MA2ZD1400	DIODE(SI)	
D216	PQVD1SR154	DIODE(SI)	S
		(LEDS)	
LED201	PQVDSML310MT	LED	S
LED202	PQVDSML310MT	LED	S
LED203	PQVDSML310MT	LED	S
LED204	PQVDSML310MT	LED	S
LED205	PQVDSML310MT	LED	S
LED206	PQVDSML310MT	LED	S
LED207	PQVDSML310MT	LED	S
		(CONNECTORS)	
CN201	PQJS22B11Z	FPC CONNECTOR	
CN202	PQJP2D13Z	CONNECTOR PIN	S
CN203	PQJJ1J007Z	EAR JACK	S
		(COILS)	
L204	PQLQR3FL121	COIL	S
L205	PQLQR3FL121	COIL	S
		(OTHERS)	
E101	PQEFBC12111B	RINGER	S
E102	PQJM146Y	MICROPHONE	
G1	PQJT10152Z	CHARGE TERMINAL	
G2	PQJT10152Z	CHARGE TERMINAL	
G3	PQJT10152Z	CHARGE TERMINAL	
G4	PQJT10152Z	CHARGE TERMINAL	
G5	PQJT10152Z	CHARGE TERMINAL	
G6	PQJT10152Z	CHARGE TERMINAL	
X201	PQVCI4096N3Z	CRYSTAL OSCILLATOR	
		(RESISTORS)	
R201	ERJ3GEYJ331	330	
R202	ERJ3GEYJ331	330	

Ref. No.	Part No.	Part Name & Description	Remarks
R203	ERJ3GEYJ331	330	
R204	ERJ3GEYJ331	330	
R205	ERJ3GEYJ101	100	
R206	ERJ3GEYJ101	100	
R207	ERJ3GEYJ101	100	
R209	ERJ3GEYJ102	1k	
R210	ERJ3GEYJ104	100k	
R211	ERJ3GEYJ104	100k	
R212	ERJ3GEYJ101	100	
R213	ERJ3GEYJ101	100	
R217	D1BB4533A001	453k	
R218	ERJ3GEYF824	820k	S
R220	ERJ3GEYJ474	470k	
R221	ERJ3GEYJ103	10k	
R222	ERJ3GEYJ101	100	
R223	ERJ3GEY0R00	0	
R224	ERJ3GEYJ103	10k	
R225	ERJ3GEYJ472	4.7k	
R226	ERJ3GEYJ103	10k	
R227	ERJ3GEYJ473	47k	
R228	ERJ3GEYJ224	220k	
R229	ERJ3GEYJ102	1k	
R230	ERJ3GEYJ102	1k	
R231	ERJ3GEYJ102	1k	
R232	ERJ3GEYJ103	10k	
R233	ERJ3GEY0R00	0	
R234	ERJ3EKF2204	0	
R235	ERJ3EKF2204	0	
R236	ERJ3GEYJ473	47k	
R241	ERJ3GEY0R00	0	
R242	ERJ3GEYJ180	18	
R243	ERJ3GEYJ180	18	
R244	ERJ3GEYJ473	47k	
R245	ERJ3GEYJ103	10k	
R246	ERJ3GEYJ153	15k	
R247	ERJ3GEYJ391	390	
R248	ERJ3GEYJ393	39k	
R249	ERJ3GEYJ222	2.2k	
R250	ERJ3GEYJ222	2.2k	
R251	ERJ3GEYJ120	12	
R252	ERJ3GEYJ820	82	
R253	ERJ3GEYJ222	2.2k	
R260	ERJ3GEYJ103	10k	
R263	ERJ3GEYJ104	100k	
R264	ERJ3GEYJ103	10k	
R265	ERJ3GEYJ103	10k	
R266	ERJ3GEYJ105	1M	
R270	ERJ3GEYJ104	100k	
R271	ERJ3GEY0R00	0	
R272	ERJ3GEYJ105	1M	
R273	ERJ3GEY0R00	0	
R274	ERJ3GEY0R00	0	
R275	ERJ3GEY0R00	0	
		(CAPACITORS)	

Ref. No.	Part No.	Part Name & Description	Remarks
C203	ECUV1C104ZFV	0.1	
C205	ECUV1H101JCV	100P	
C206	ECUV1C104KBV	0.1	
C207	ECUV1C104KBV	0.1	
C208	ECUV1C104KBV	0.1	
C209	ECUV1C104KBV	0.1	
C210	ECUV1C104KBV	0.1	
C211	ECUV1A474KBV	0.47	
C212	ECUV1A474KBV	0.47	
C213	ECEV1AA221	220	
C214	ECUV1H103KBV	0.01	
C215	ECUV1A474KBV	0.47	
C217	ECUV1C104ZFV	0.1	
C218	ECUV1C104ZFV	0.1	
C219	ECUV1H470JCV	47P	
C220	ECEV0JA101	100	
C221	ECUV1C104ZFV	0.1	
C222	ECUV1C104ZFV	0.1	
C223	ECST0JY106	10	
C224	ECUV1C104ZFV	0.1	
C226	ECUV1C104ZFV	0.1	
C227	ECUV1H470JCV	47P	
C228	ECUV1C104ZFV	0.1	
C229	ECUV1C104ZFV	0.1	
C230	ECUV1C104KBV	0.1	
C231	ECUV1A224KBV	0.22	
C232	ECUV1C104KBV	0.1	
C233	ECUV1C104ZFV	0.1	
C234	ECUV1A224KBV	0.22	
C236	ECUV1H060DCV	6P	S
C237	ECUV1H060DCV	6P	S
C239	ECUV1H103KBV	0.01	
C249	ECST0GY226	22	
C255	ECUV1A224KBV	0.22	
C267	ECST0JY226	22	
C270	ECST0JY475	4.7	
C274	ECUV1C104ZFV	0.1	
C280	ECUV1C104ZFV	0.1	
C283	ECUV1A105ZFV	1	
C290	ECUV1H102KBV	0.001	
C291	ECUV1H102KBV	0.001	
C294	ECUV1H103KBV	0.01	
C296	ECUV1C104ZFV	0.1	
C297	ECUV1C104ZFV	0.1	
C298	ECUV1A105ZFV	1	

23.2.3. RF UNIT PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB200	PQLP10244Z	RF BLOCK	

23.2.4. ACCESSORIES AND PACKING MATERIALS

Ref. No.	Part No.	Part Name & Description	Remarks
A1	PQJA10075Z	TEL CORD	
A2	PQKE10127Z1	BELT CLIP (for KX-TG2583B) (for KX-TG2583S)	S
A2	PQKE10127Z2	BELT CLIP (for KX-TG2583W)	S
A3	PQKL10038Z3	WALL MOUNT ADAPTOR (for KX-TG2583B) (for KX-TG2583S)	S
A3	PQKL10038Y1	WALL MOUNT ADAPTOR (for KX-TG2583W)	S
A4	PQLV10Z	AC ADAPTOR	⚠
A5	PQPD10440Y	PAD	
A6	PQQT22229Z	TAM LABEL	
A7	PQQW12360Z	QUICK GUIDE (for English)	
A8	PQQW12361Z	QUICK GUIDE (for Spanish)	
A9	PQZTTG2583B	INSTRUCTION BOOK ASS'Y	
A10	PQPD10469Z	CUSHION CORRUGATED (for KX-TG2583S)	
A11	PQXDDS400-8	SECURITY TAG (for KX-TG2583S)	
A12	PQXDZLDRS1	SECURITY TAG (for KX-TG2583S)	
P1	XZB21X35A03	PROTECTION COVER (for Base Unit)	
P2	XZB10X35A02	PROTECTION COVER (for Handset)	
P3	PQPK13353Z	GIFT BOX (for KX-TG2583B)	
P3	PQPK13344Z	GIFT BOX (for KX-TG2583S)	
P3	PQPK13387Z	GIFT BOX (for KX-TG2583W)	

24. FOR SCHEMATIC DIAGRAM

24.1. Base Unit (SCHEMATIC DIAGRAM (Base Unit))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

> Important Safety Notice:
> Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

This schematic diagram may be modified at any time with the development of new technology.

24.2. Handset (SCHEMATIC DIAGRAM (Handset))

Notes:

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.

2. The schematic diagrams and circuit board may be modified at any time with the development of new technology.

25. CIRCUIT BOARD (RF Unit)

25.1. RF Unit Reference Drawing (Base Unit and Handset)
26. SCHMATIC DIAGRAM (RF UNIT)
26.1. Base Unit and Handset
27. CIRCUIT BOARD (OPERATION)
28. SCHEMATIC DIAGRAM (Operation)
29. CIRCUIT BOARD (Base Unit)
29.1. Component View
29.2. Flow Solder Side View
30. SCHEMATIC DIAGRAM (Base Unit)
31. CIRCUIT BOARD (Handset)
31.1. Component View
31.2. Flow Solder Side View
32. SCHEMATIC DIAGRAM (Handset)

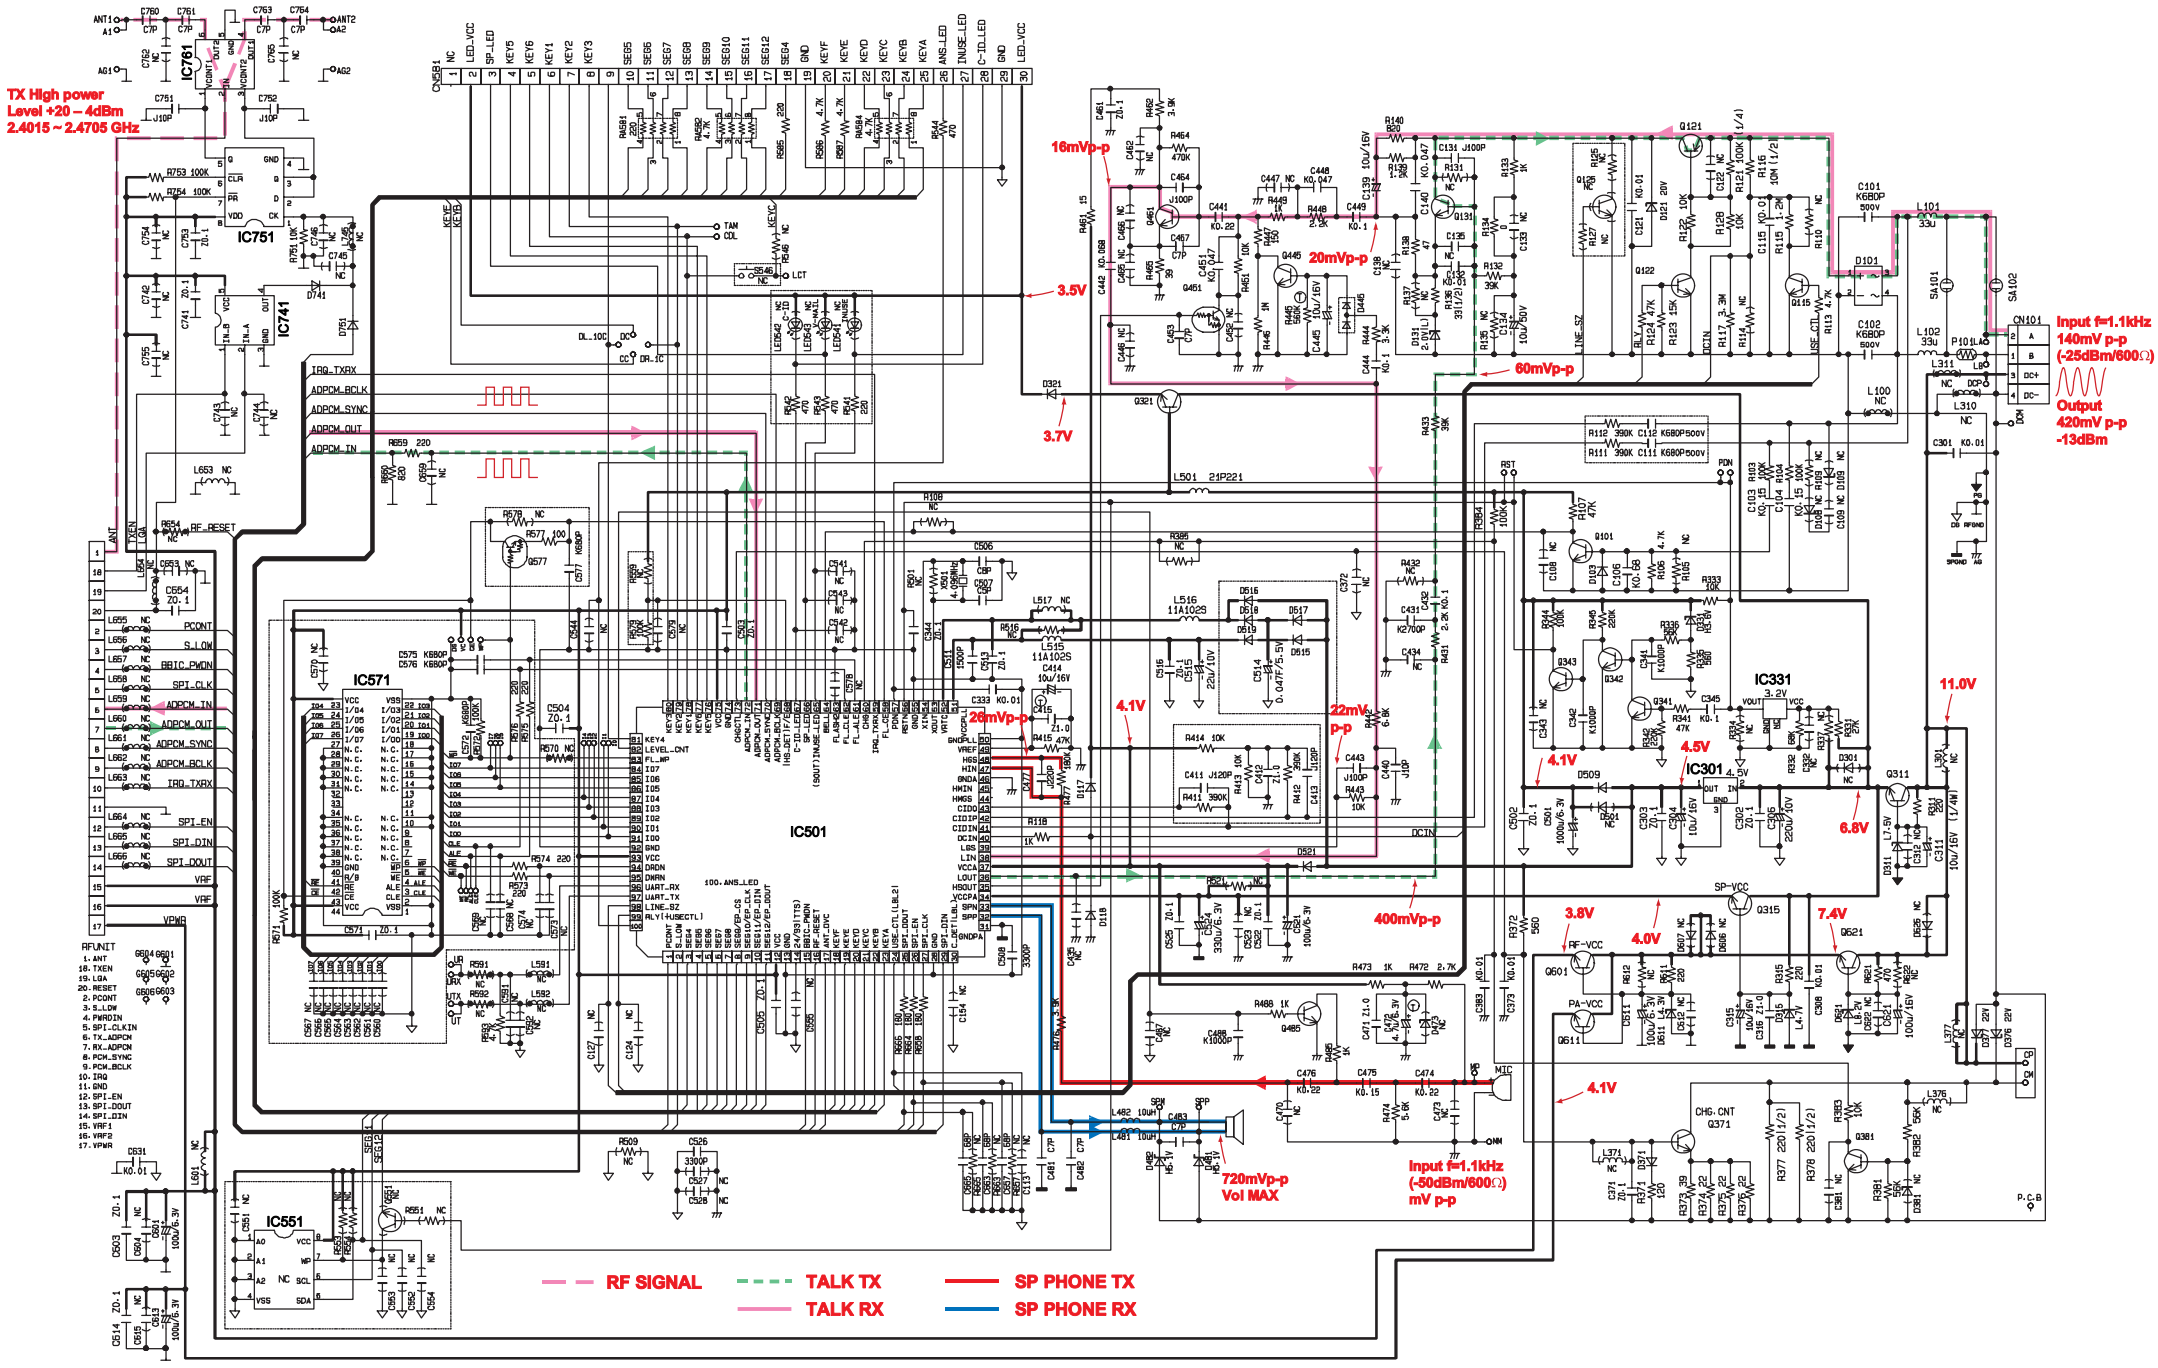
TX High power
Level +20 – 4dBm
2.4015 ~ 2.4705 GHz
16mVp-p
20mVp-p
3.5V
3.7V
60mVp-p
Input f=1.1kHz
140mV p-p
(-25dBm/600Ω)
Output
420mV p-p
-13dBm
4.1V
22mVp-p
20mVp-p
11.0V
4.5V
6.8V
400mVp-p
3.8V
4.0V
7.4V
720mVp-p
Vol MAX
Input f=1.1kHz
(-50dBm/600Ω)
mV p-p
IC751
IC741
IC761
IC571
IC501
IC331
IC301
IC551
RF SIGNAL
TALK TX
TALK RX
SP PHONE TX
SP PHONE RX

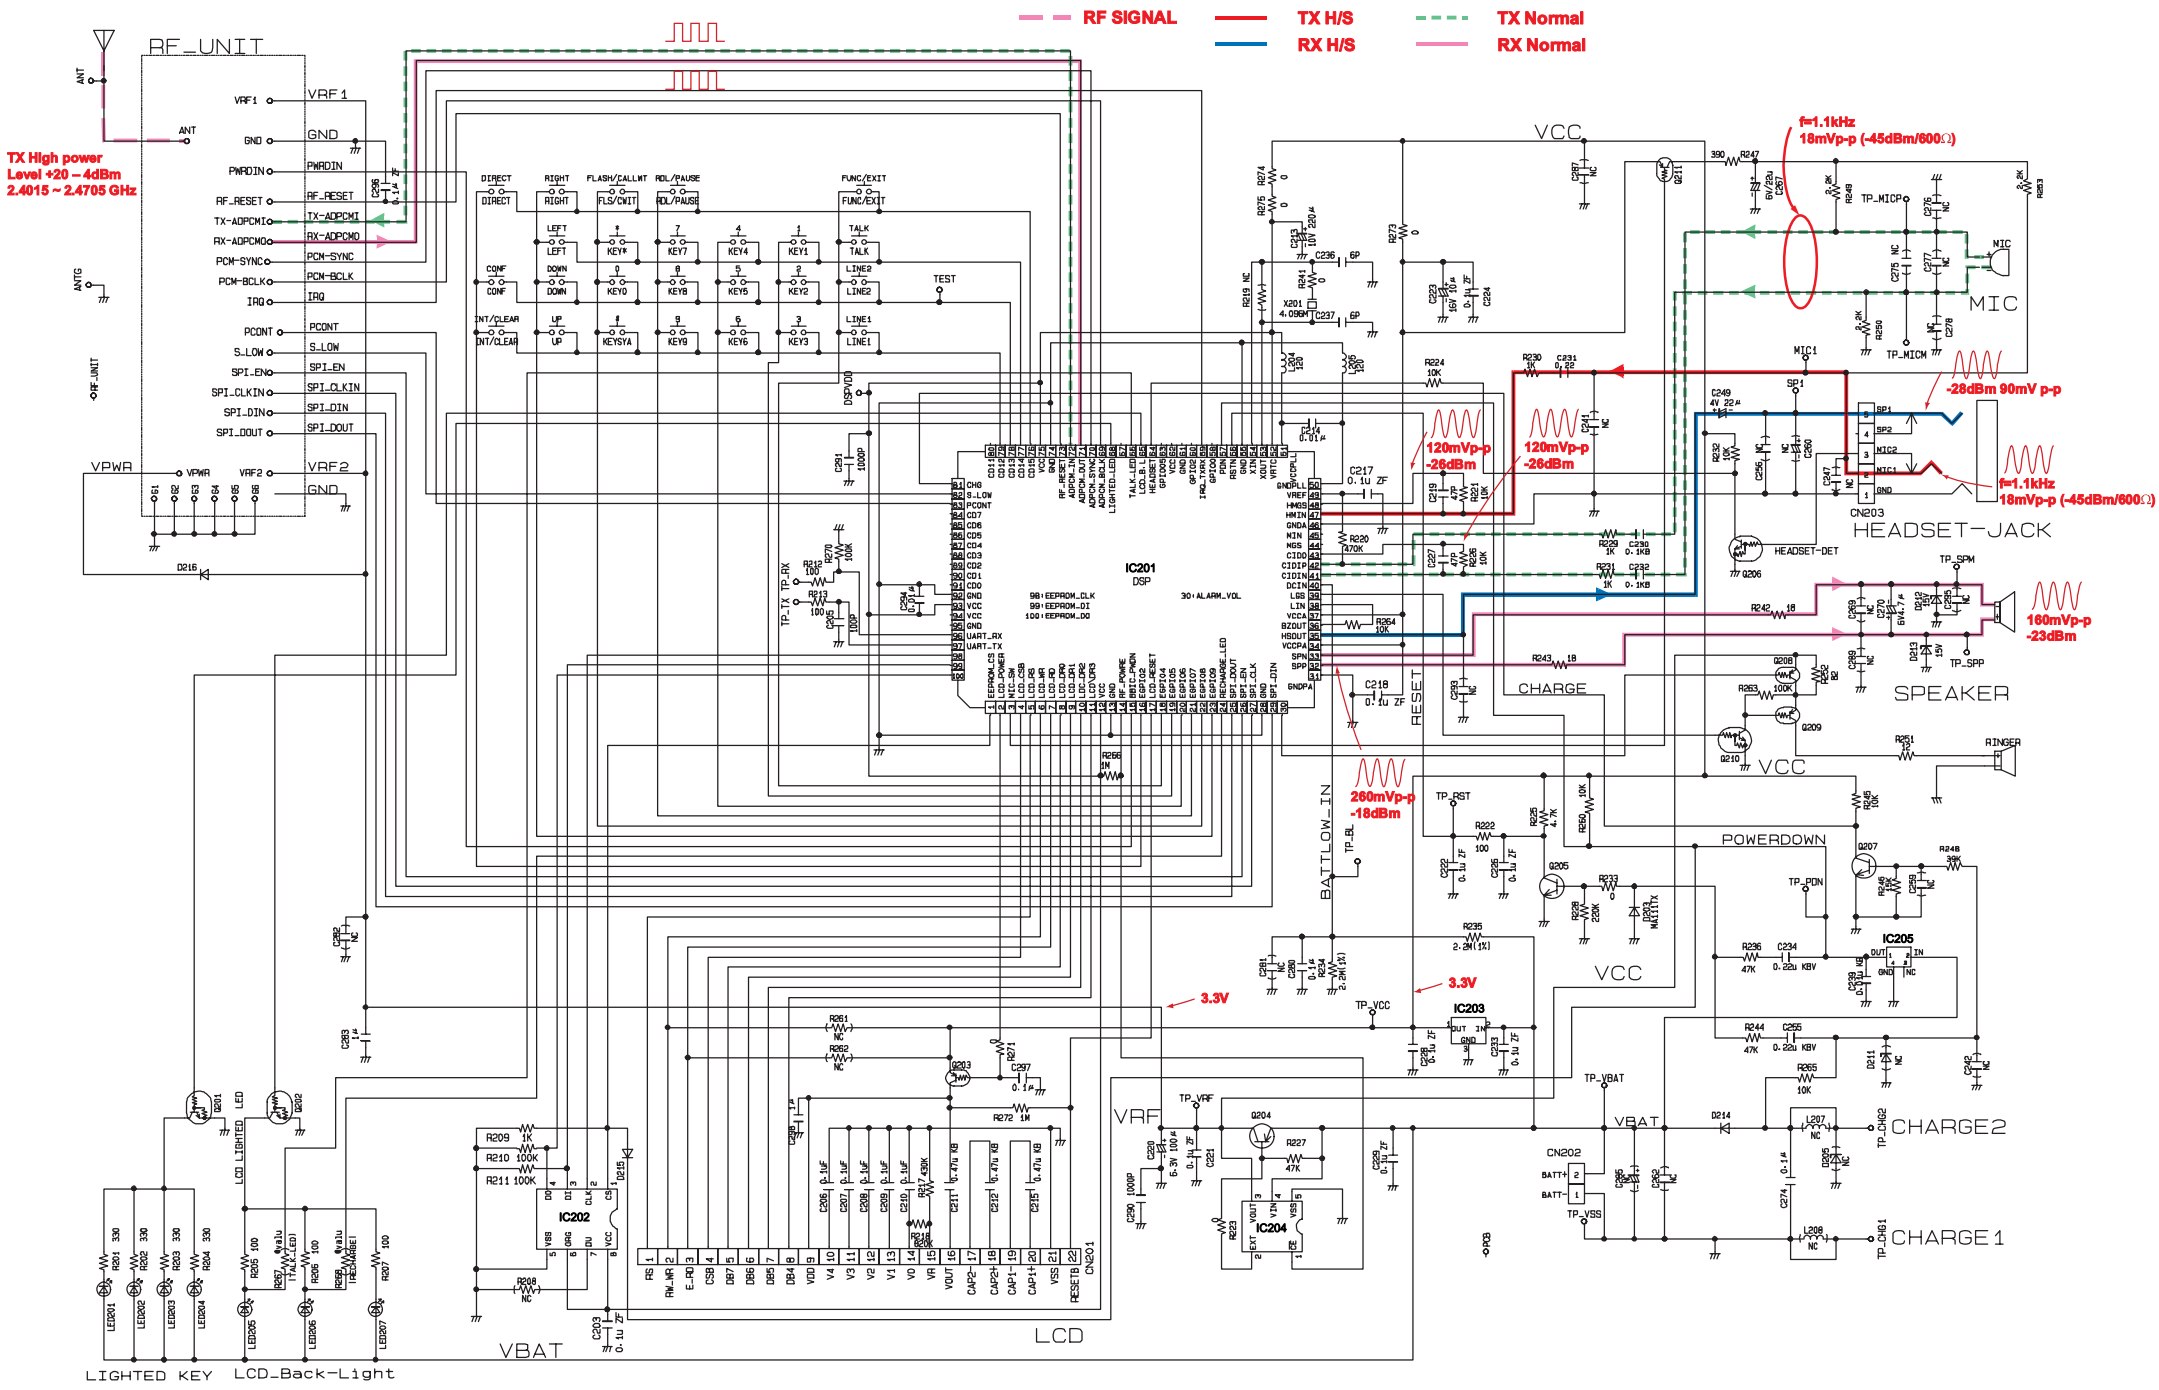
RF SIGNAL
TX H/S
RX H/S
TX Normal
RX Normal
RF_UNIT
TX High power
Level +20 ~ 4dBm
2.4015 ~ 2.4705 GHz
IC201
DSP
IC202
IC203
IC204
IC205
LCD
VCC
VBAT
VRF
RESET
CHARGE
POWERDOWN
BATTLOW_IN
SPEAKER
RINGER
MIC
HEADSET-JACK
CHARGE2
CHARGE1
LIGHTED KEY
LCD_Back-Light
f=1.1kHz
18mVp-p (-45dBm/600Ω)
-28dBm 90mV p-p
120mVp-p
-26dBm
260mVp-p
-18dBm
160mVp-p
-23dBm
3.3V

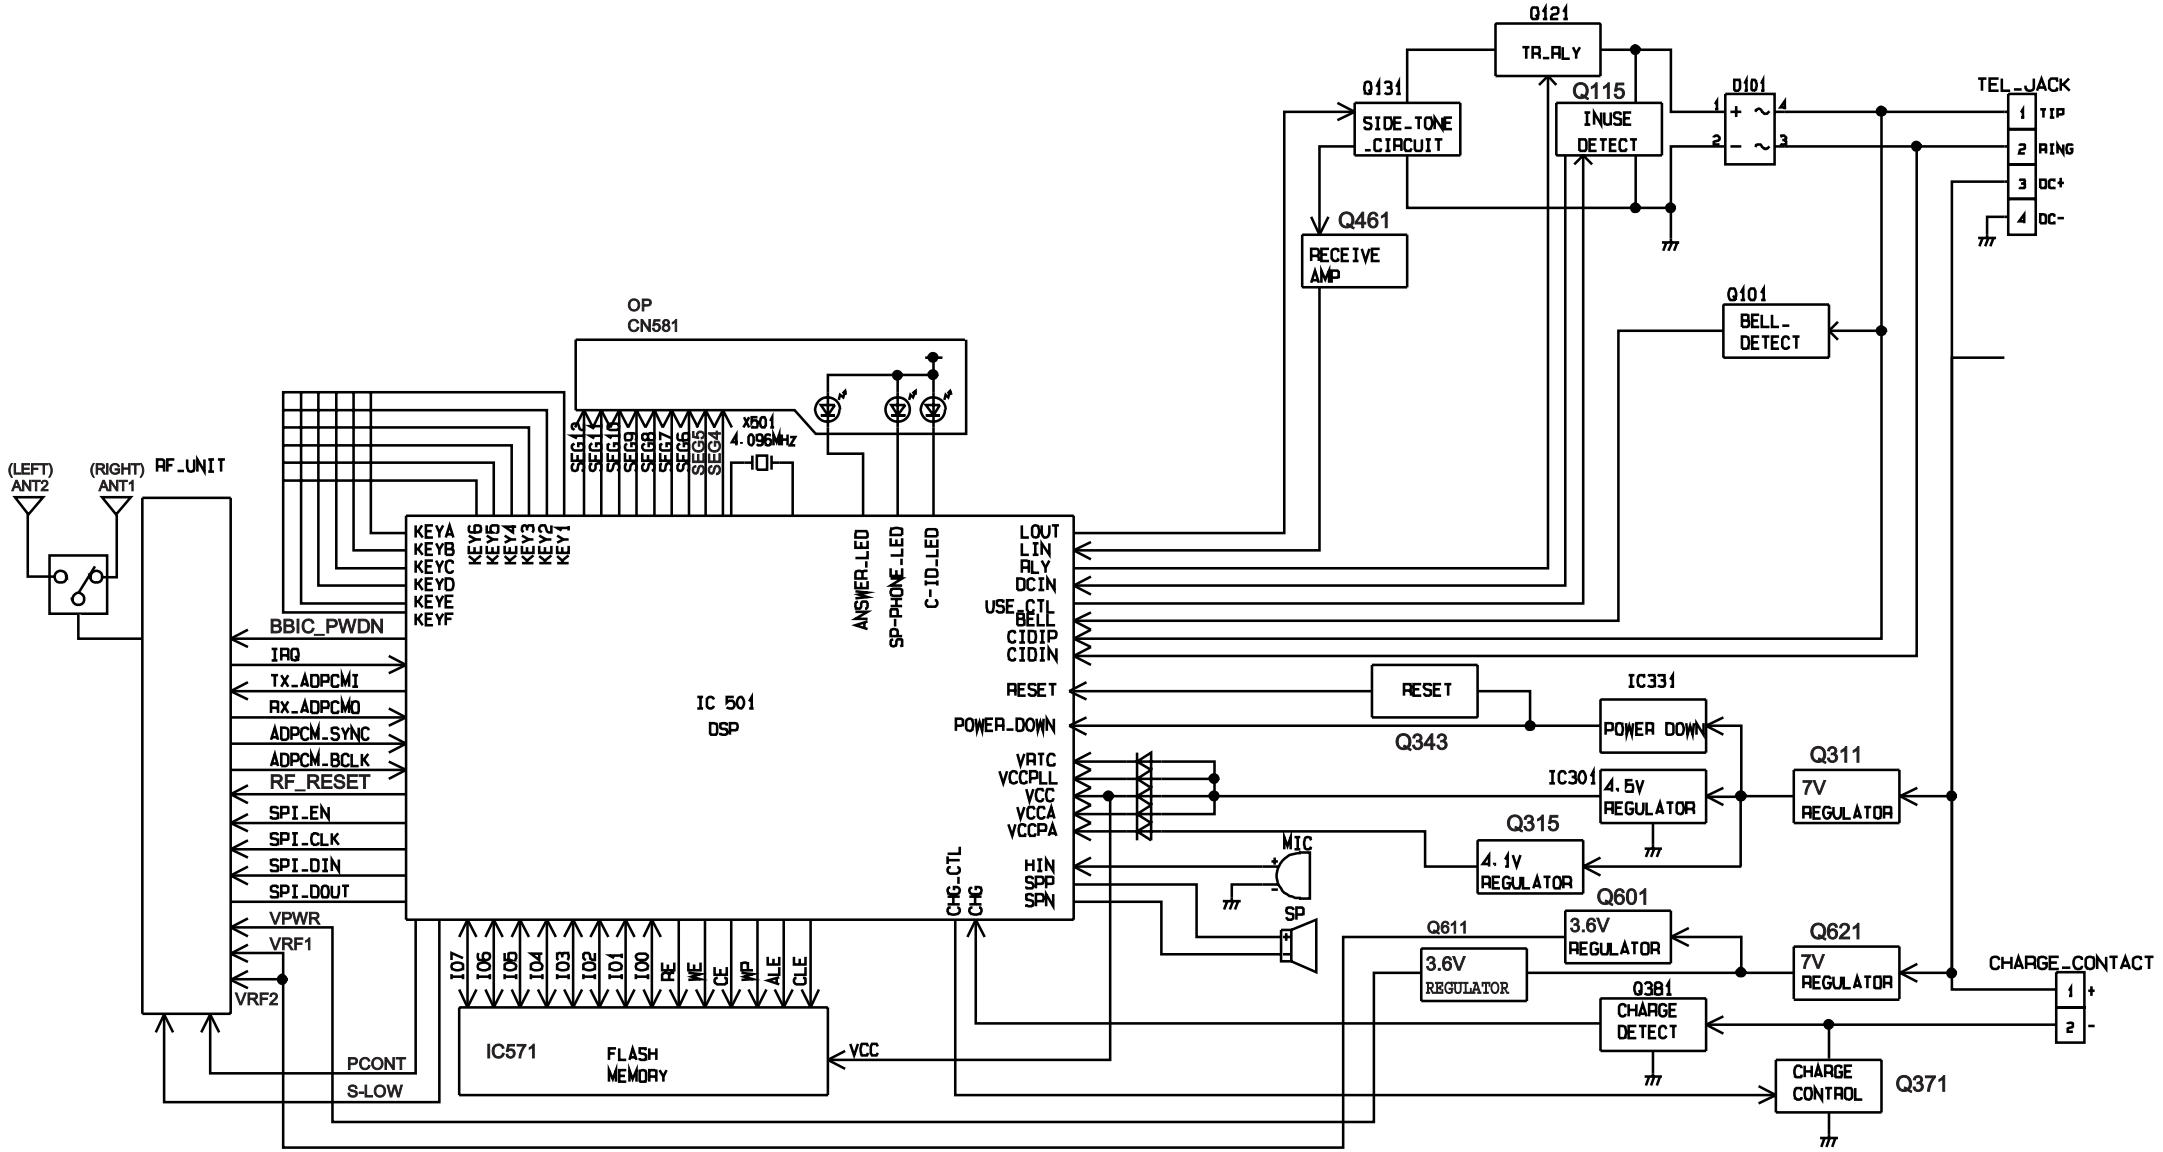
(LEFT)
ANT2
(RIGHT)
ANT1
RF_UNIT
OP
CN581
x501
4.096MHz
SEG12
SEG11
SEG10
SEG9
SEG8
SEG7
SEG6
SEG5
SEG4
KEYA
KEYB
KEYC
KEYD
KEYE
KEYF
KEY6
KEY5
KEY4
KEY3
KEY2
KEY1
ANSWER-LED
SP-PHONE-LED
C-ID-LED
IC 501
DSP
LOUT
LIN
RLY
DCIN
USE_CTL
BELL
CIDIP
CIDIN
RESET
POWER_DOWN
VRTC
VCCPLL
VCC
VCCA
VCCPA
HIN
SPP
SPN
CHG_CTL
CHG
BBIC_PWDN
IRQ
TX_ADPCMI
RX_ADPCMO
ADPCM_SYNC
ADPCM_BCLK
RF_RESET
SPI_EN
SPI_CLK
SPI_DIN
SPI_DOUT
VPWR
VRF1
VRF2
PCONT
S-LOW
IO7
IO6
IO5
IO4
IO3
IO2
IO1
IO0
RE
WE
CE
WP
ALE
CLE
IC571
FLASH
MEMORY
VCC
Q121
TR_RLY
Q131
SIDE-TONE
_CIRCUIT
Q115
INUSE
DETECT
D101
TEL_JACK
1 TIP
2 RING
3 DC+
4 DC-
Q461
RECEIVE
AMP
Q101
BELL_
DETECT
RESET
Q343
IC331
POWER DOWN
IC301
4.5V
REGULATOR
Q311
7V
REGULATOR
Q315
4.1V
REGULATOR
MIC
SP
Q601
3.6V
REGULATOR
Q611
3.6V
REGULATOR
Q621
7V
REGULATOR
CHARGE_CONTACT
Q381
CHARGE
DETECT
CHARGE
CONTROL
Q371

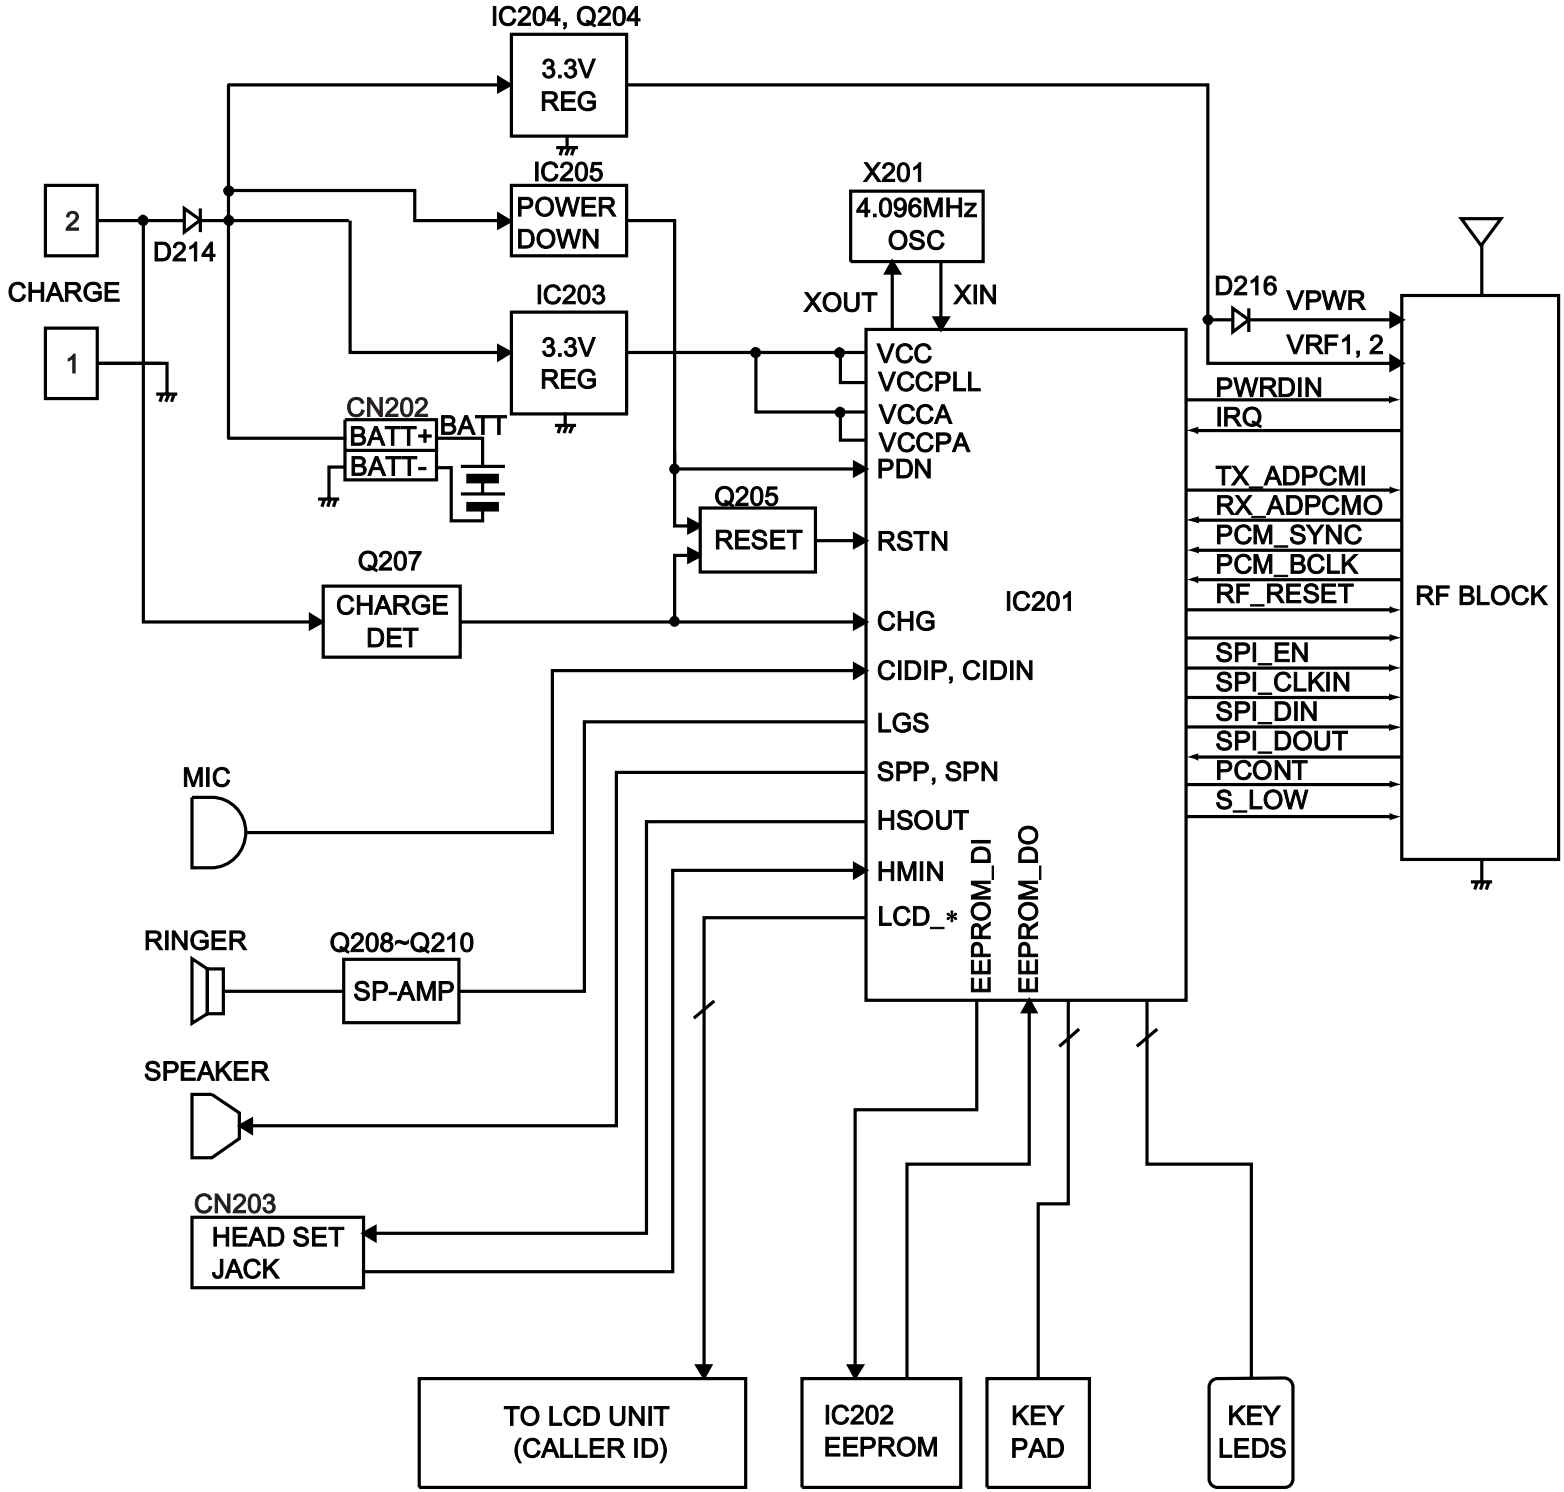
IC204, Q204
3.3V REG
IC205
POWER DOWN
X201
4.096MHz OSC
2
D214
CHARGE
1
IC203
3.3V REG
XOUT
XIN
D216
VPWR
VRF1, 2
CN202
BATT+
BATT-
BATT
VCC
VCCPLL
VCCA
VCCPA
PDN
PWRDIN
IRQ
TX_ADPCMI
RX_ADPCMO
PCM_SYNC
PCM_BCLK
RF_RESET
Q205
RESET
RSTN
Q207
CHARGE DET
IC201
CHG
CIDIP, CIDIN
SPI_EN
SPI_CLKIN
SPI_DIN
SPI_DOUT
PCONT
S_LOW
RF BLOCK
MIC
LGS
SPP, SPN
HSOUT
HMIN
LCD_*
EEPROM_DI
EEPROM_DO
RINGER
Q208~Q210
SP-AMP
SPEAKER
CN203
HEAD SET JACK
TO LCD UNIT (CALLER ID)
IC202 EEPROM
KEY PAD
KEY LEDS

Block Diagram (Handset Power)

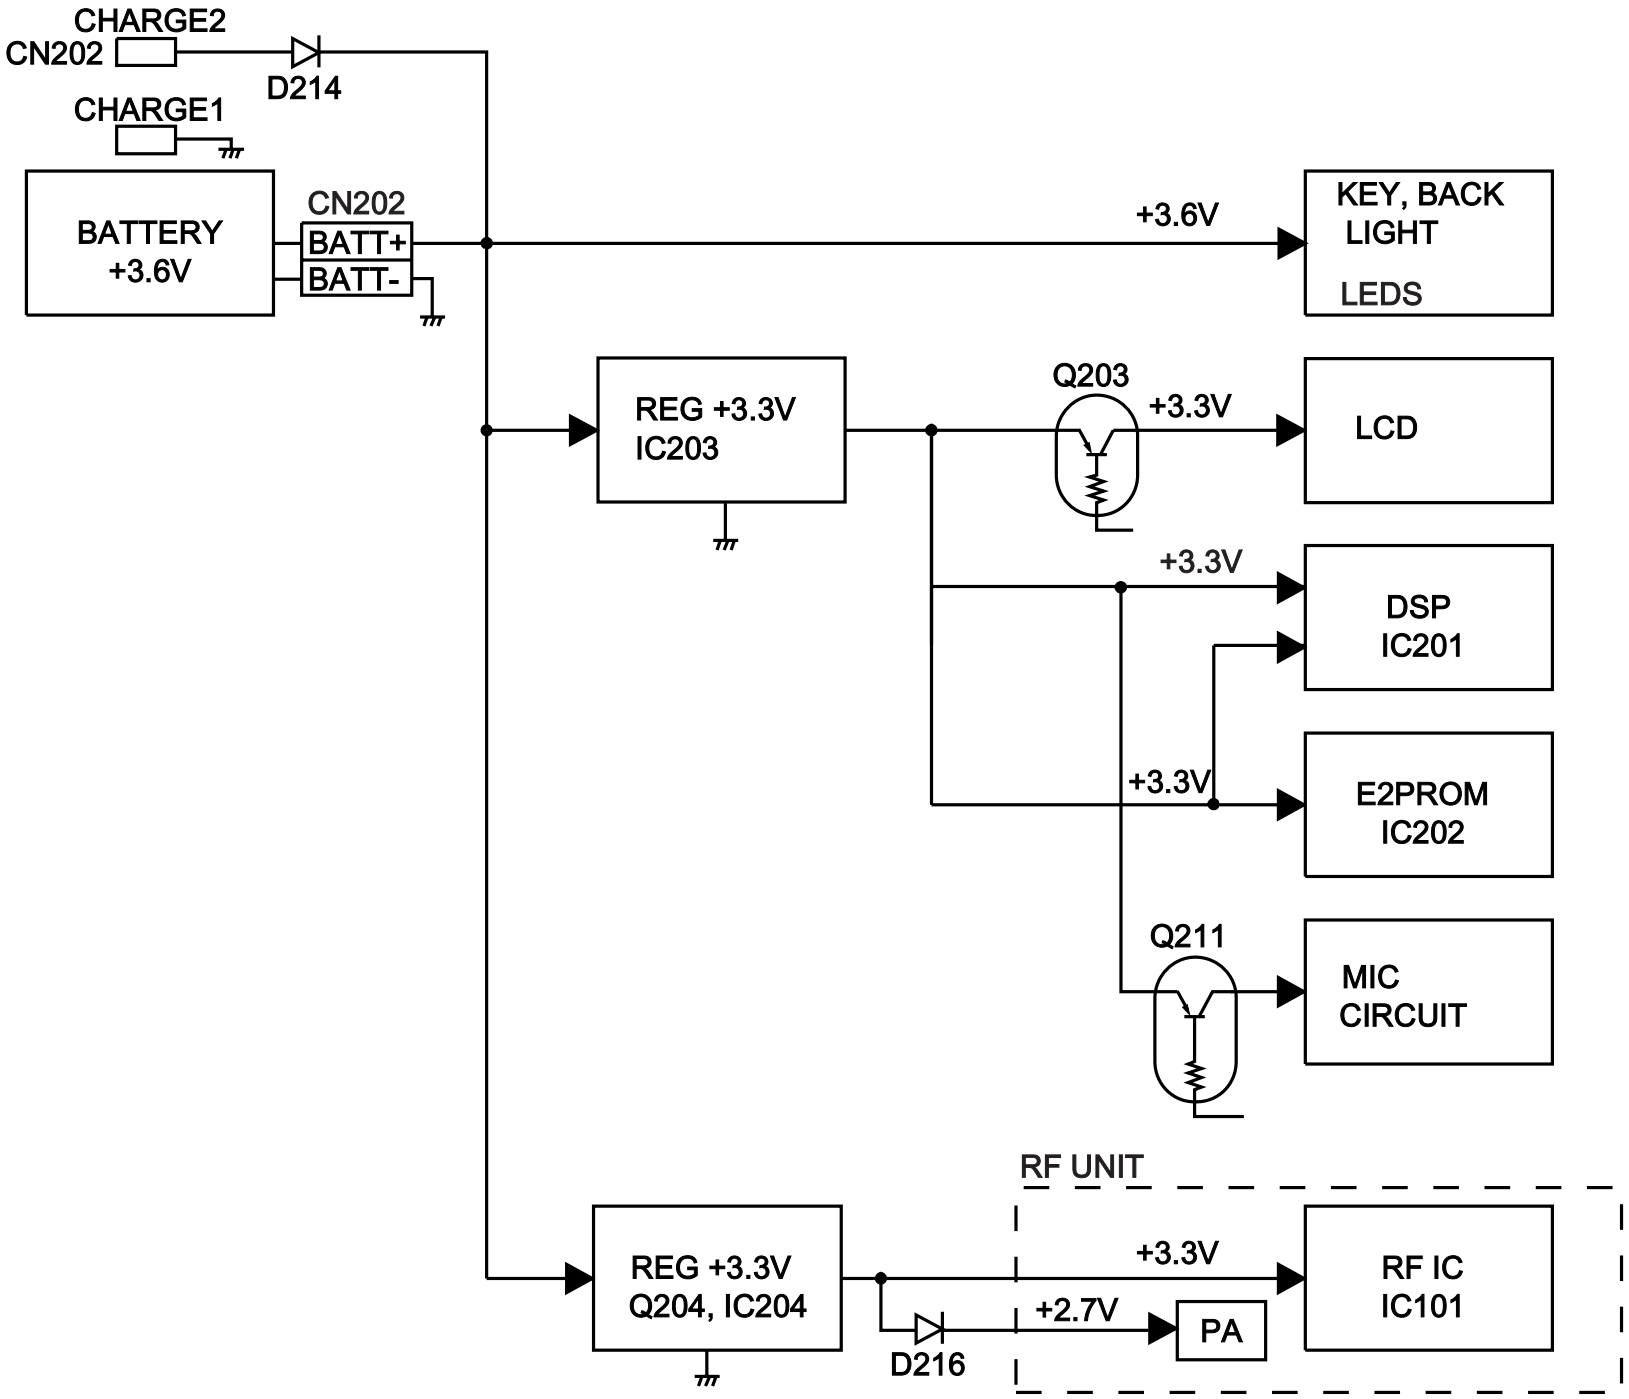

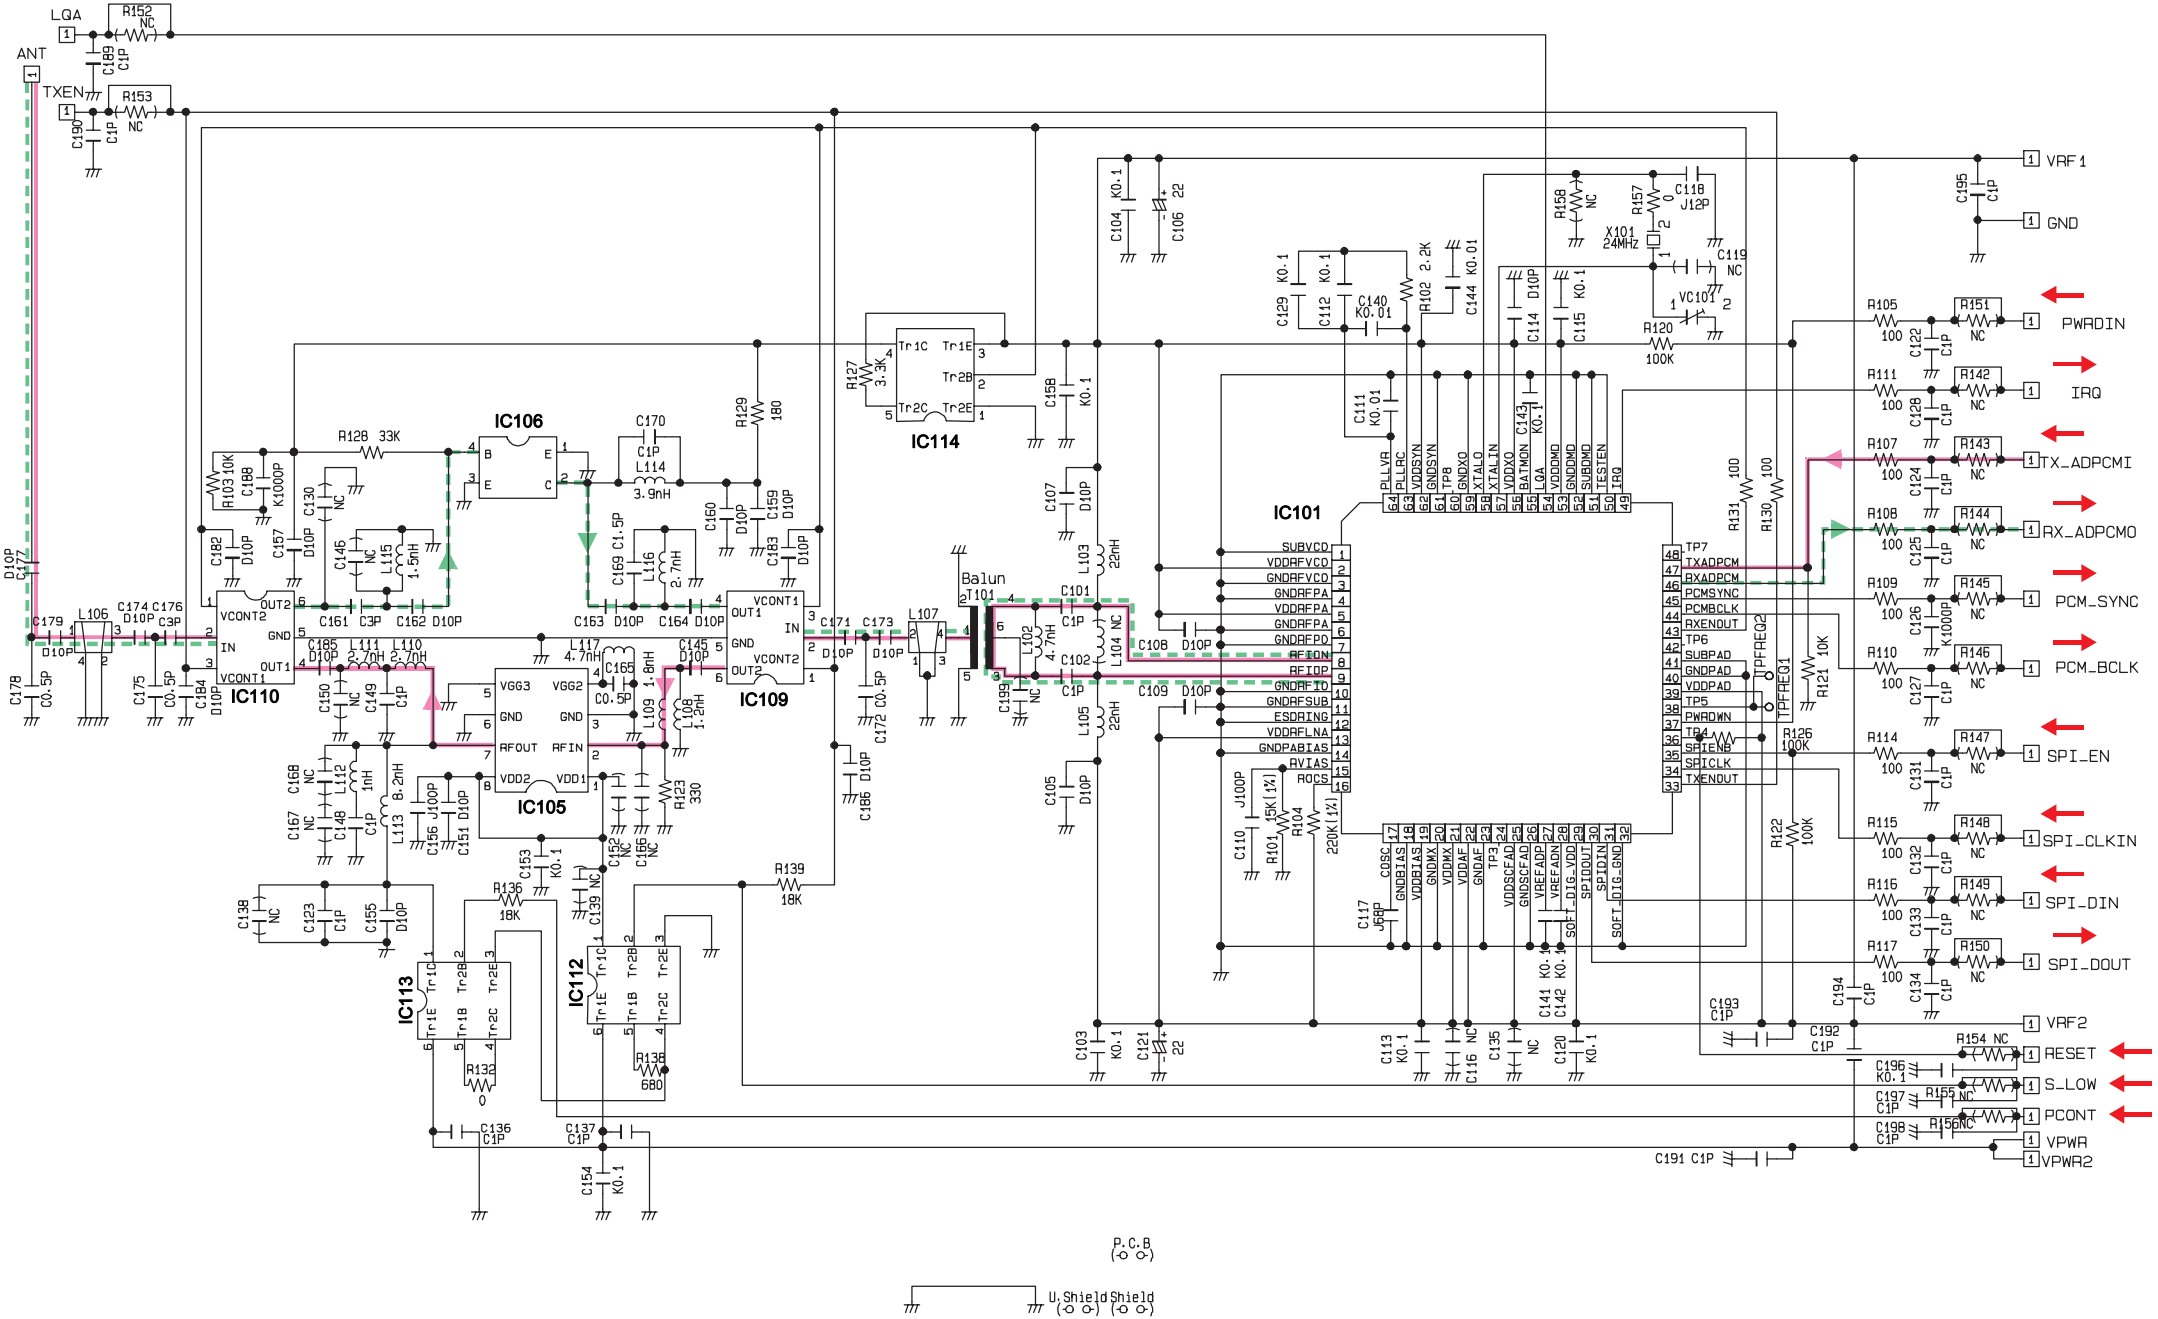
LGA
ANT
TXEN
R152 NC
R153 NC
IC101
IC105
IC106
IC109
IC110
IC112
IC113
IC114
Balun T101
X101 24MHz
VC101
TPFREQ01
TPFREQ2
VRF1
GND
PWRDIN
IRQ
TX_ADPCMI
RX_ADPCMO
PCM_SYNC
PCM_BCLK
SPI_EN
SPI_CLKIN
SPI_DIN
SPI_DOUT
VRF2
RESET
S_LOW
PCONT
VPWR
VPWR2
P.C.B
U.Shield
Shield

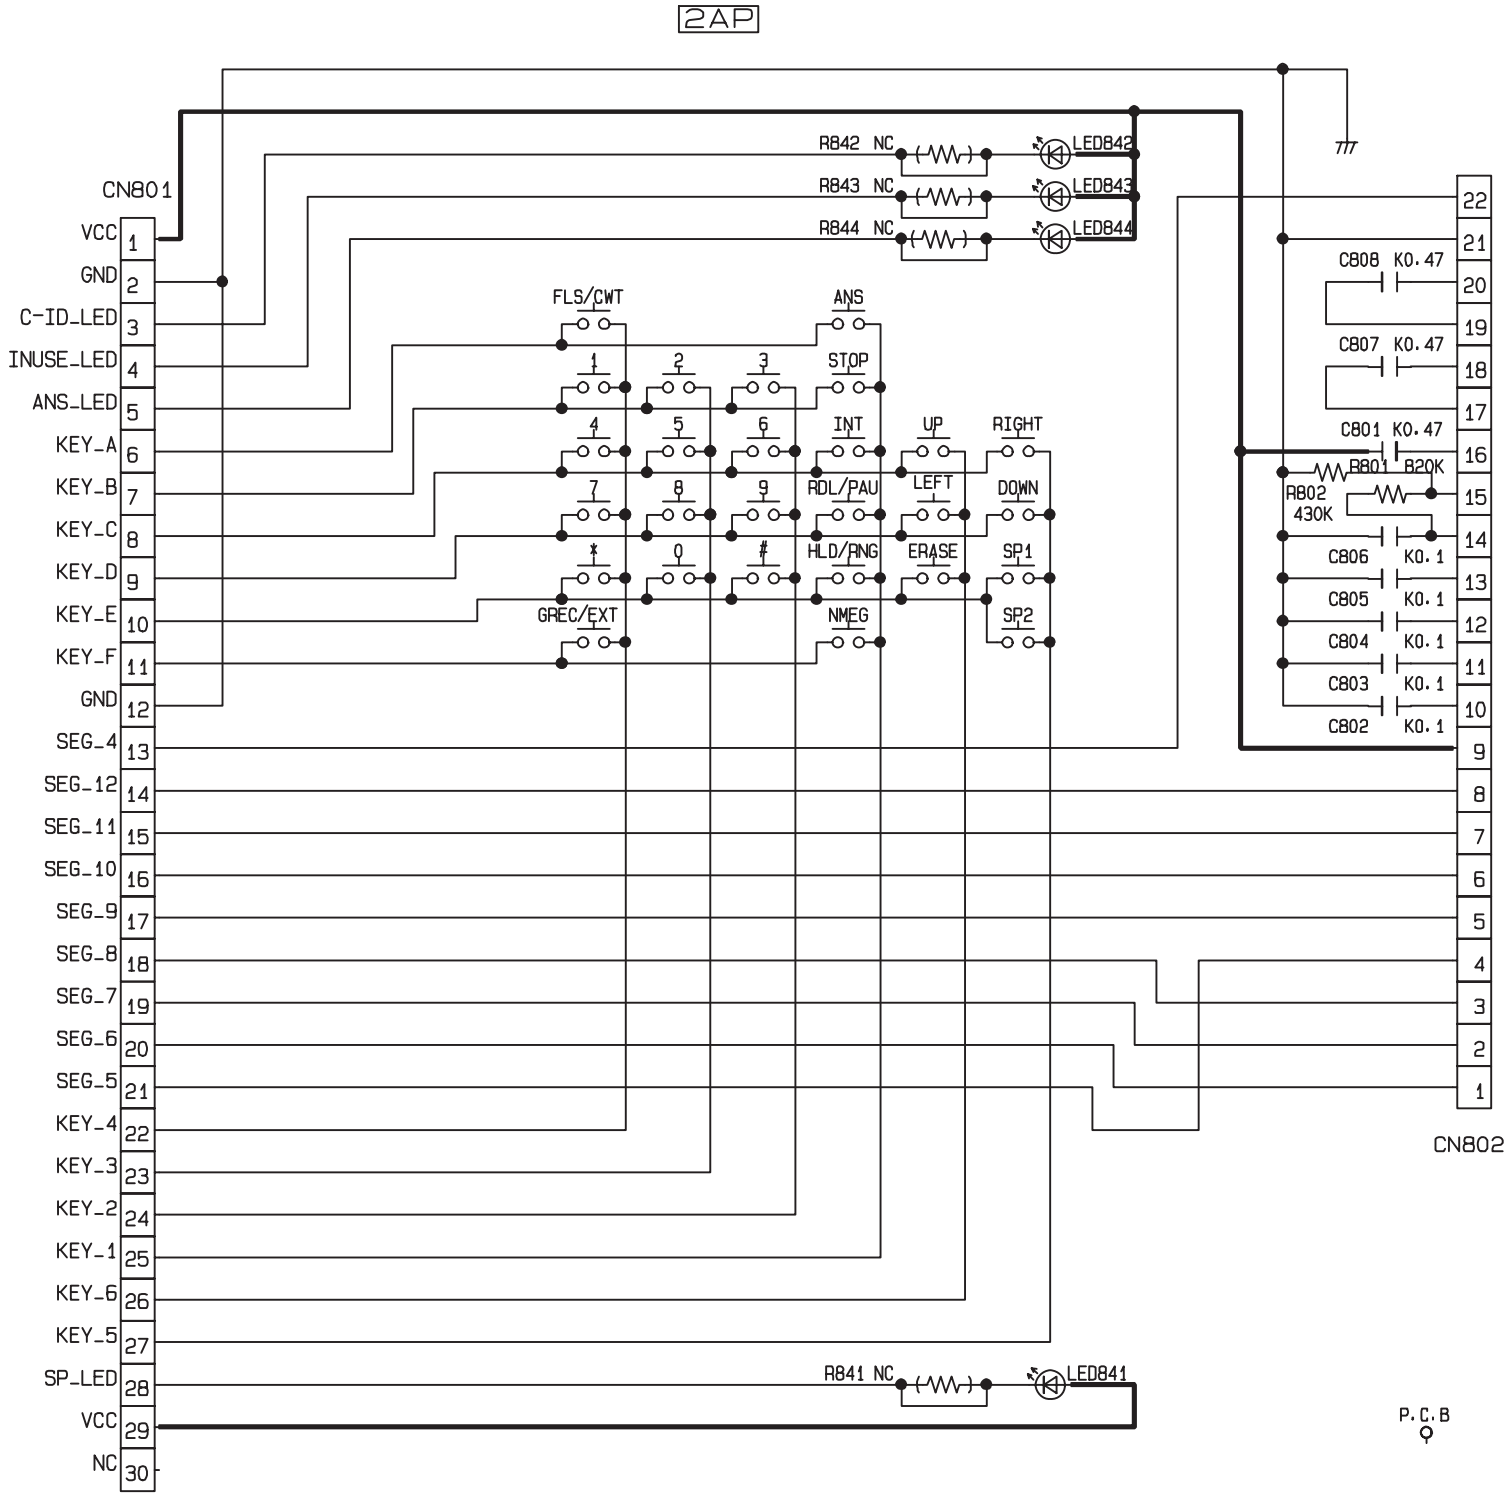
2AP
CN801
VCC 1
GND 2
C-ID_LED 3
INUSE_LED 4
ANS_LED 5
KEY_A 6
KEY_B 7
KEY_C 8
KEY_D 9
KEY_E 10
KEY_F 11
GND 12
SEG_4 13
SEG_12 14
SEG_11 15
SEG_10 16
SEG_9 17
SEG_8 18
SEG_7 19
SEG_6 20
SEG_5 21
KEY_4 22
KEY_3 23
KEY_2 24
KEY_1 25
KEY_6 26
KEY_5 27
SP_LED 28
VCC 29
NC 30
R842 NC
R843 NC
R844 NC
LED842
LED843
LED844
R841 NC
LED841
FLS/CWT
ANS
1
2
3
STOP
4
5
6
INT
UP
RIGHT
7
8
9
RDL/PAU
LEFT
DOWN
*
0
#
HLD/RNG
ERASE
SP1
GREC/EXT
NMEG
SP2
C808 K0.47
C807 K0.47
C801 K0.47
R801 820K
R802 430K
C806 K0.1
C805 K0.1
C804 K0.1
C803 K0.1
C802 K0.1
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
CN802
P.C.B

(Base Unit)

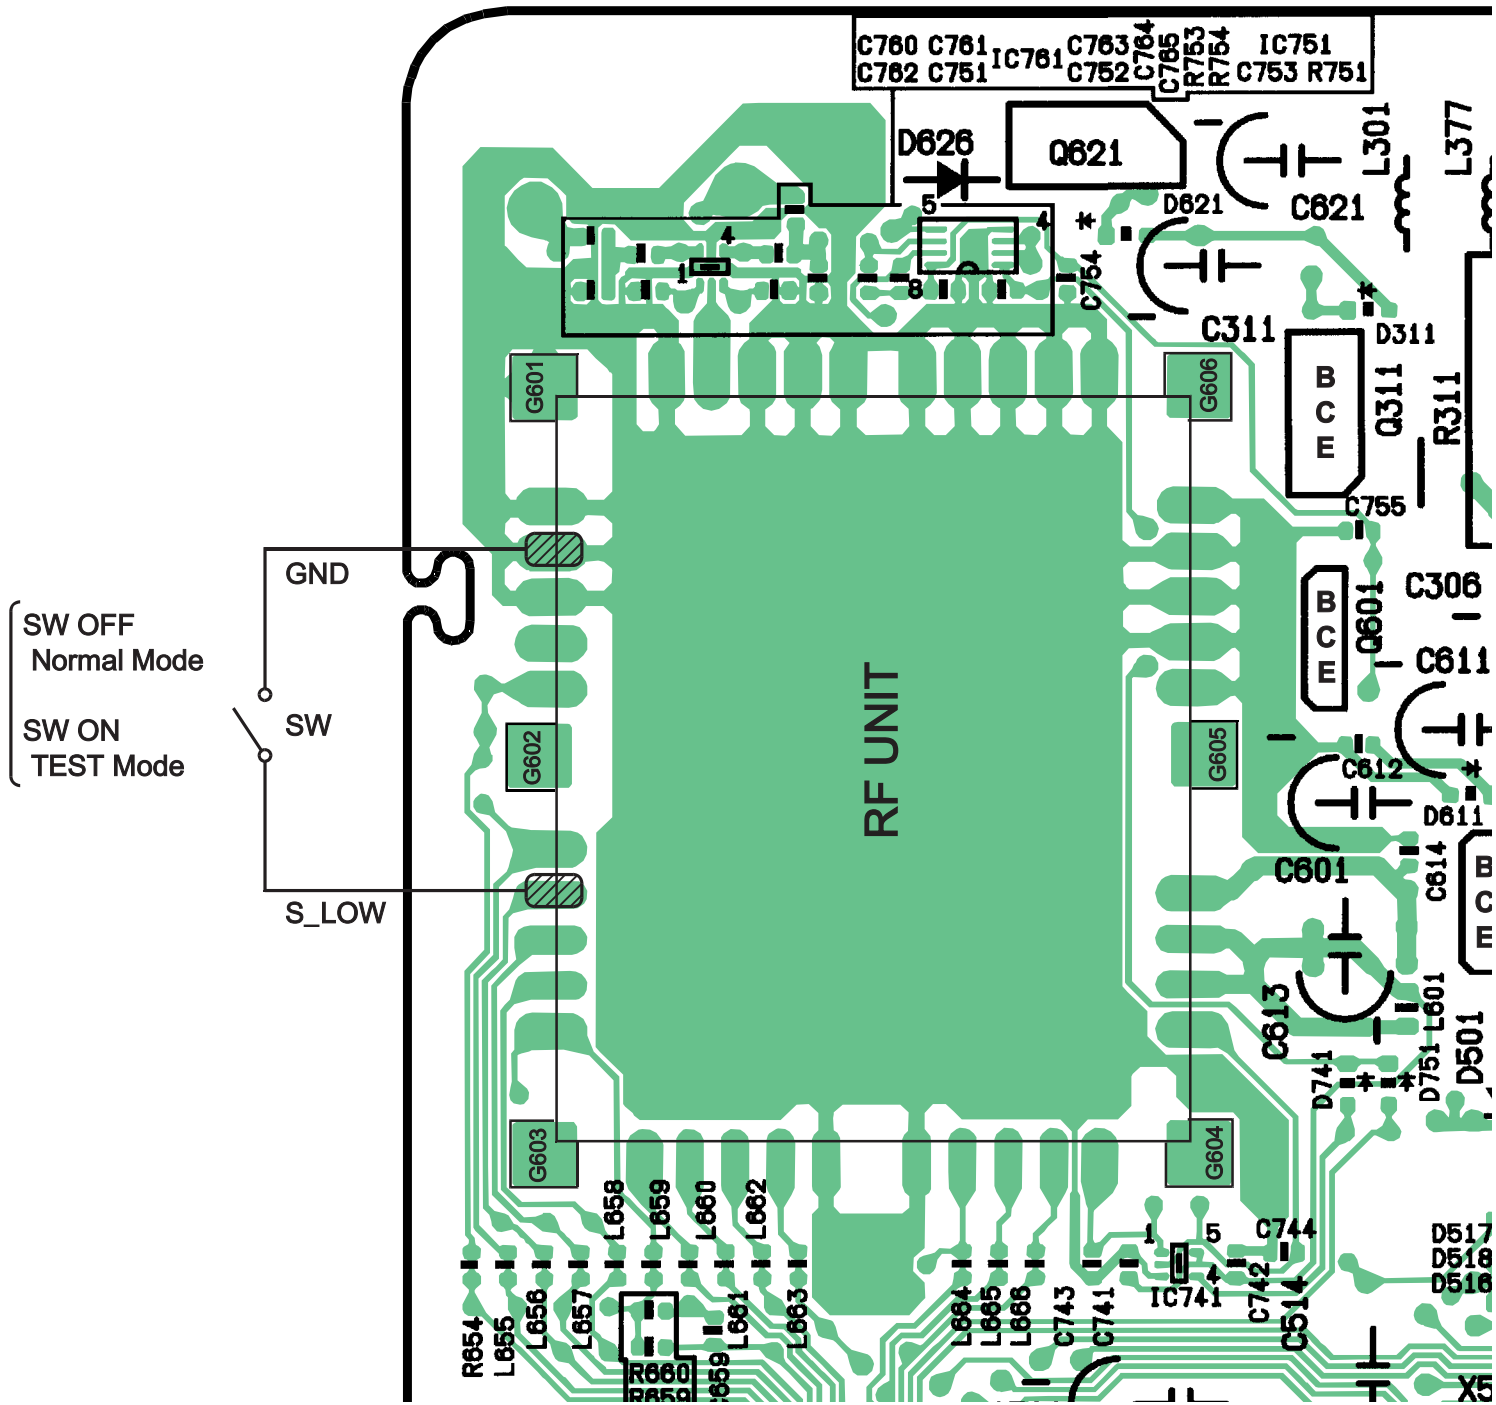
GND
SW OFF
Normal Mode
SW ON
TEST Mode
SW
S_LOW
RF UNIT
G601
G602
G603
G604
G605
G606
C760 C761
C762 C751
IC761
C763
C752
C764
C765
R753
R754
IC751
C753 R751
D626
Q621
D621
C621
L301
L377
C754
C311
D311
Q311
R311
C755
C306
Q601
C611
C612
D611
C601
C614
C613
D751
L601
D741
D501
C744
D517
D518
D516
IC741
C742
C514
C743
C741
L654
L655
L656
L657
L658
L659
L660
L661
L662
L663
L664
L665
L666
R660
X5

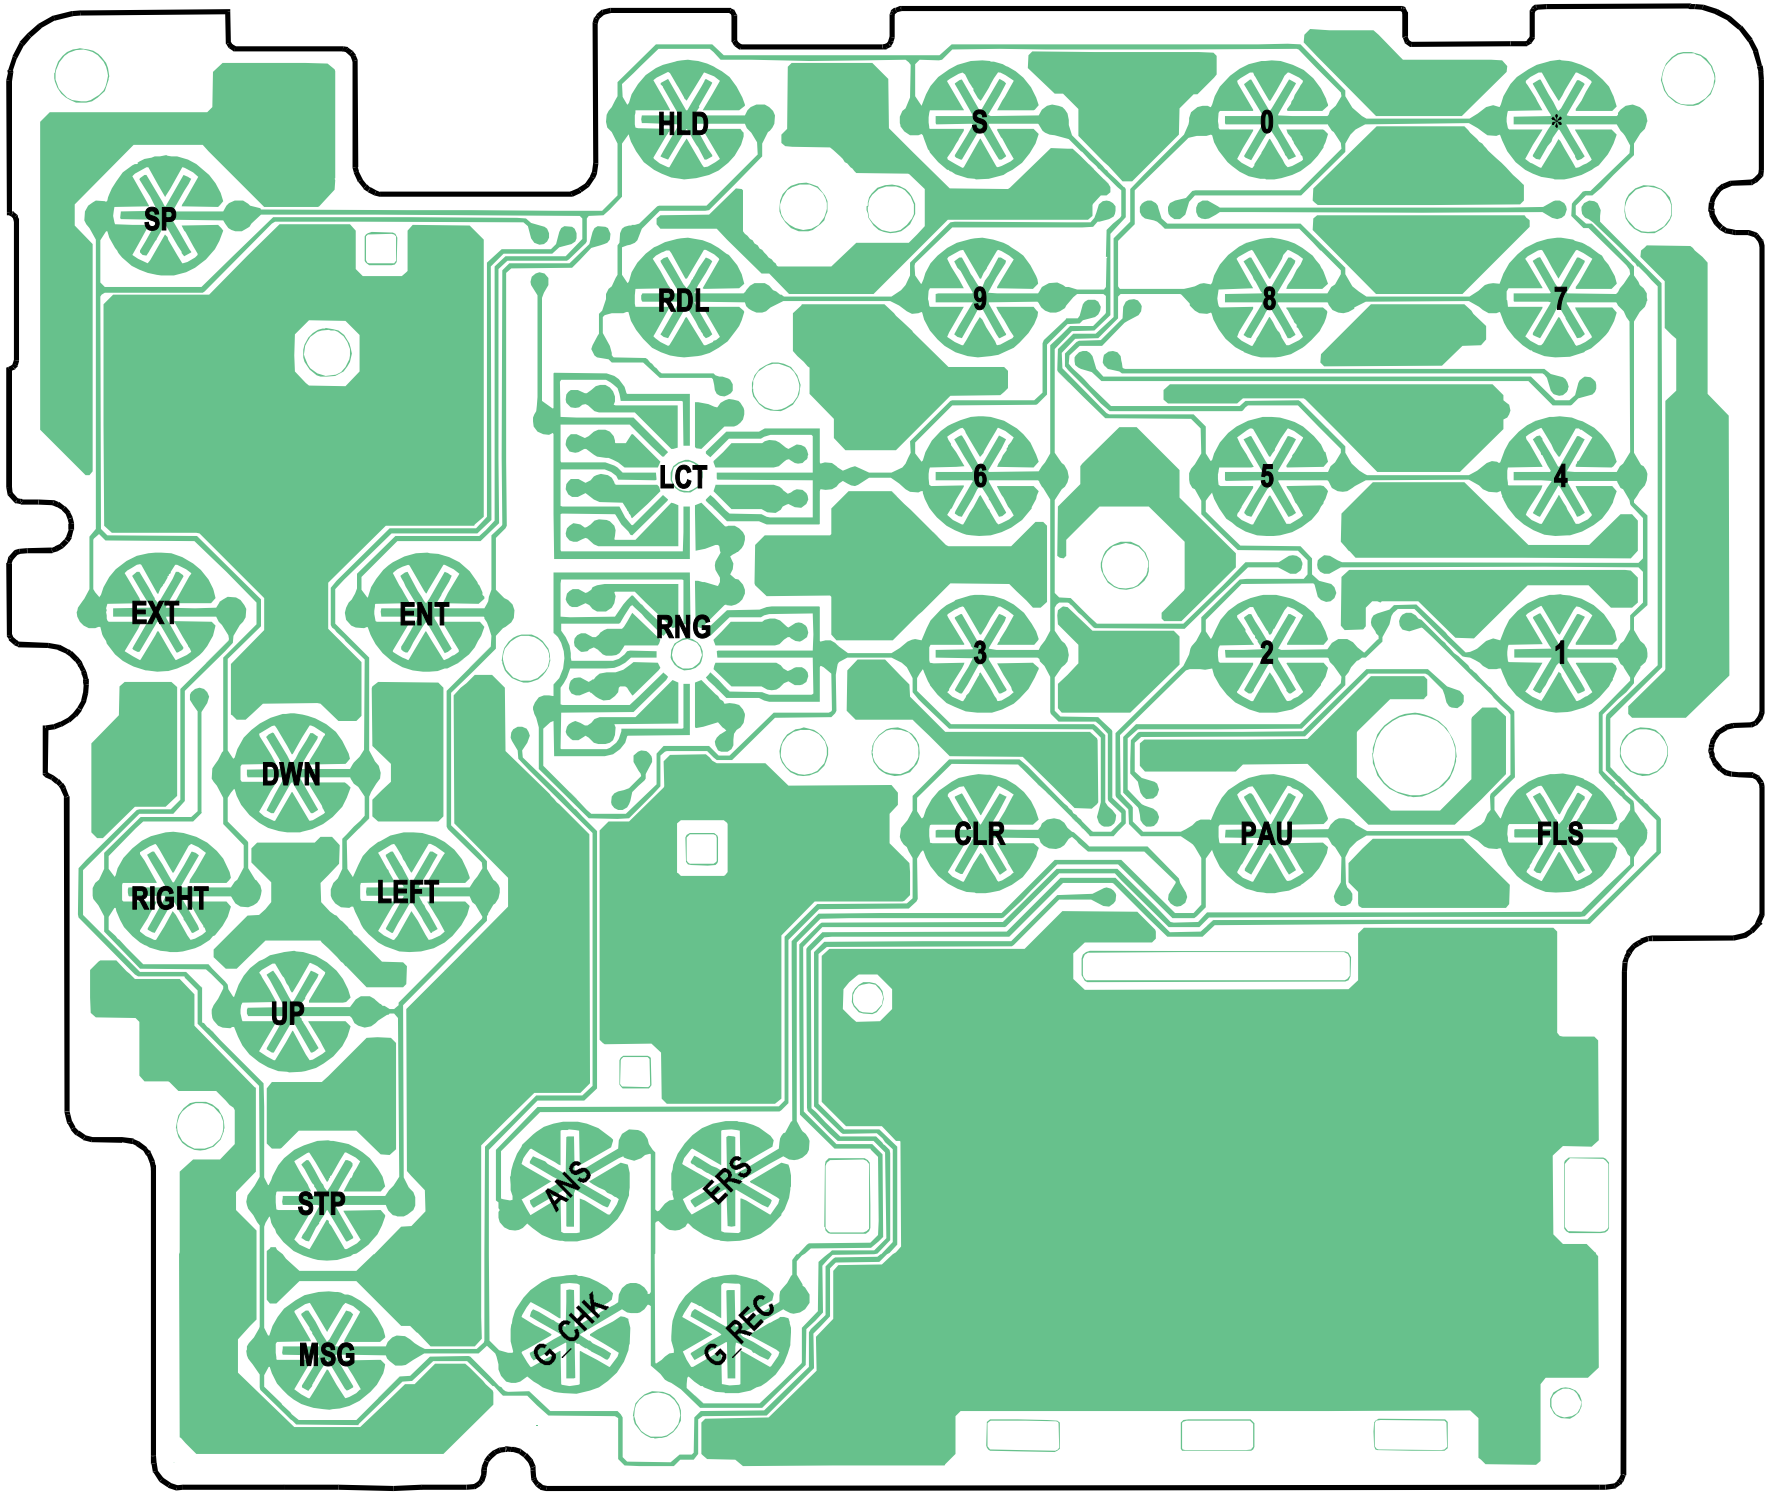
HLD
S
0
*
SP
RDL
9
8
7
LCT
6
5
4
EXT
ENT
RNG
3
2
1
DWN
CLR
PAU
FLS
RIGHT
LEFT
UP
STP
ANS
ERS
MSG
G_CHK
G_REC

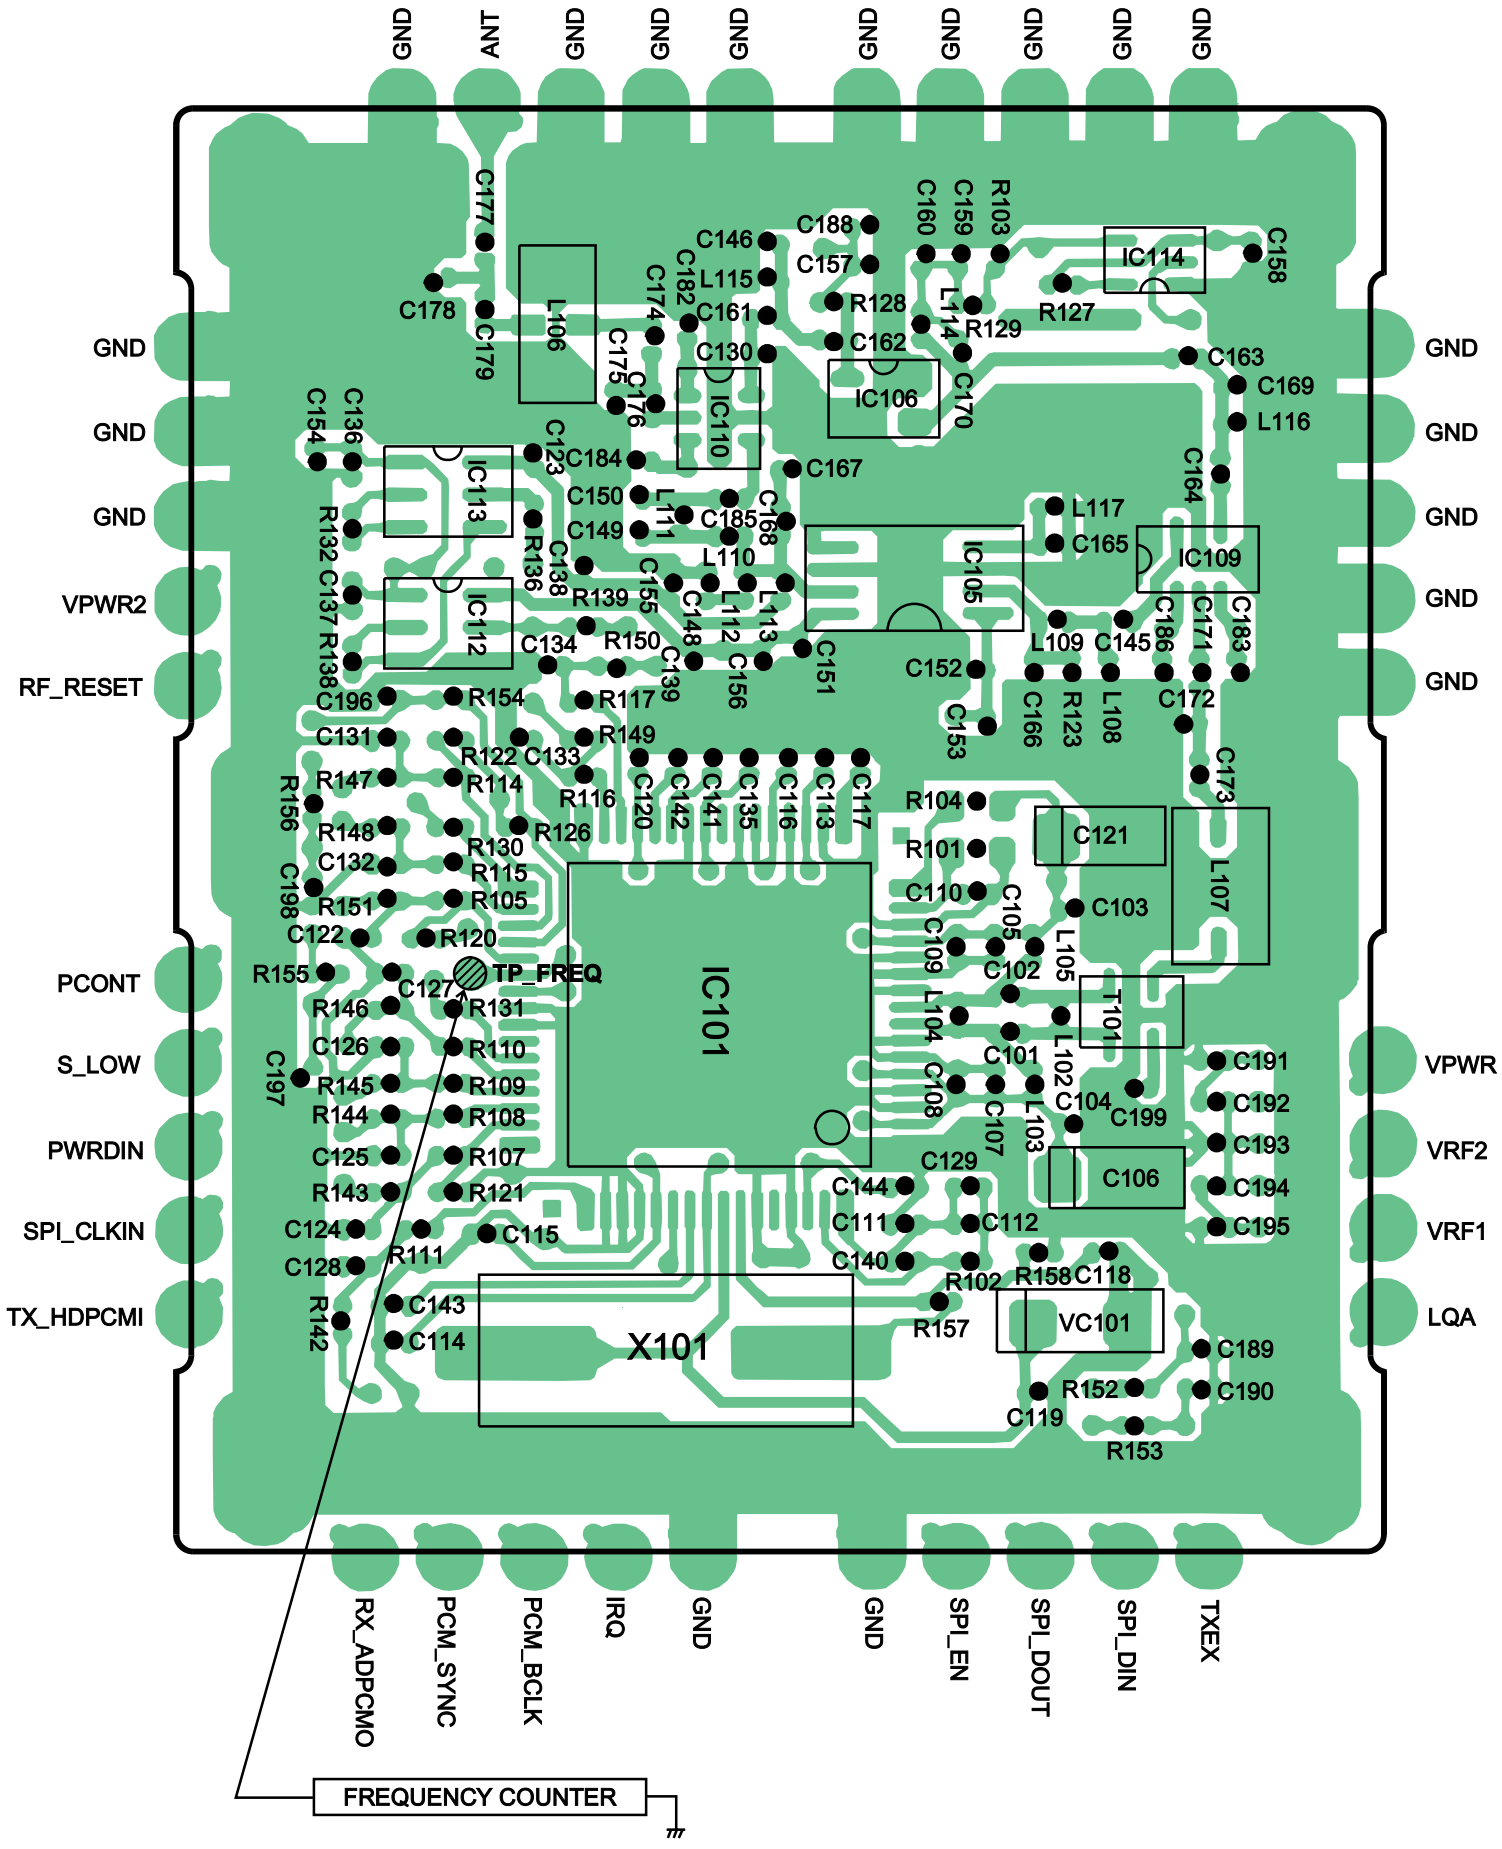
GND
ANT
GND
GND
GND
GND
GND
GND
GND
GND
GND
GND
GND
GND
GND
GND
VPWR2
RF_RESET
PCONT
S_LOW
PWRDIN
SPI_CLKIN
TX_HDPCMI
VPWR
VRF2
VRF1
LQA
RX_ADPCMO
PCM_SYNC
PCM_BCLK
IRQ
GND
GND
SPI_EN
SPI_DOUT
SPI_DIN
TXEX
IC101
X101
IC105
IC106
IC109
IC110
IC112
IC113
IC114
VC101
T101
L106
L107
TP_FREQ
FREQUENCY COUNTER

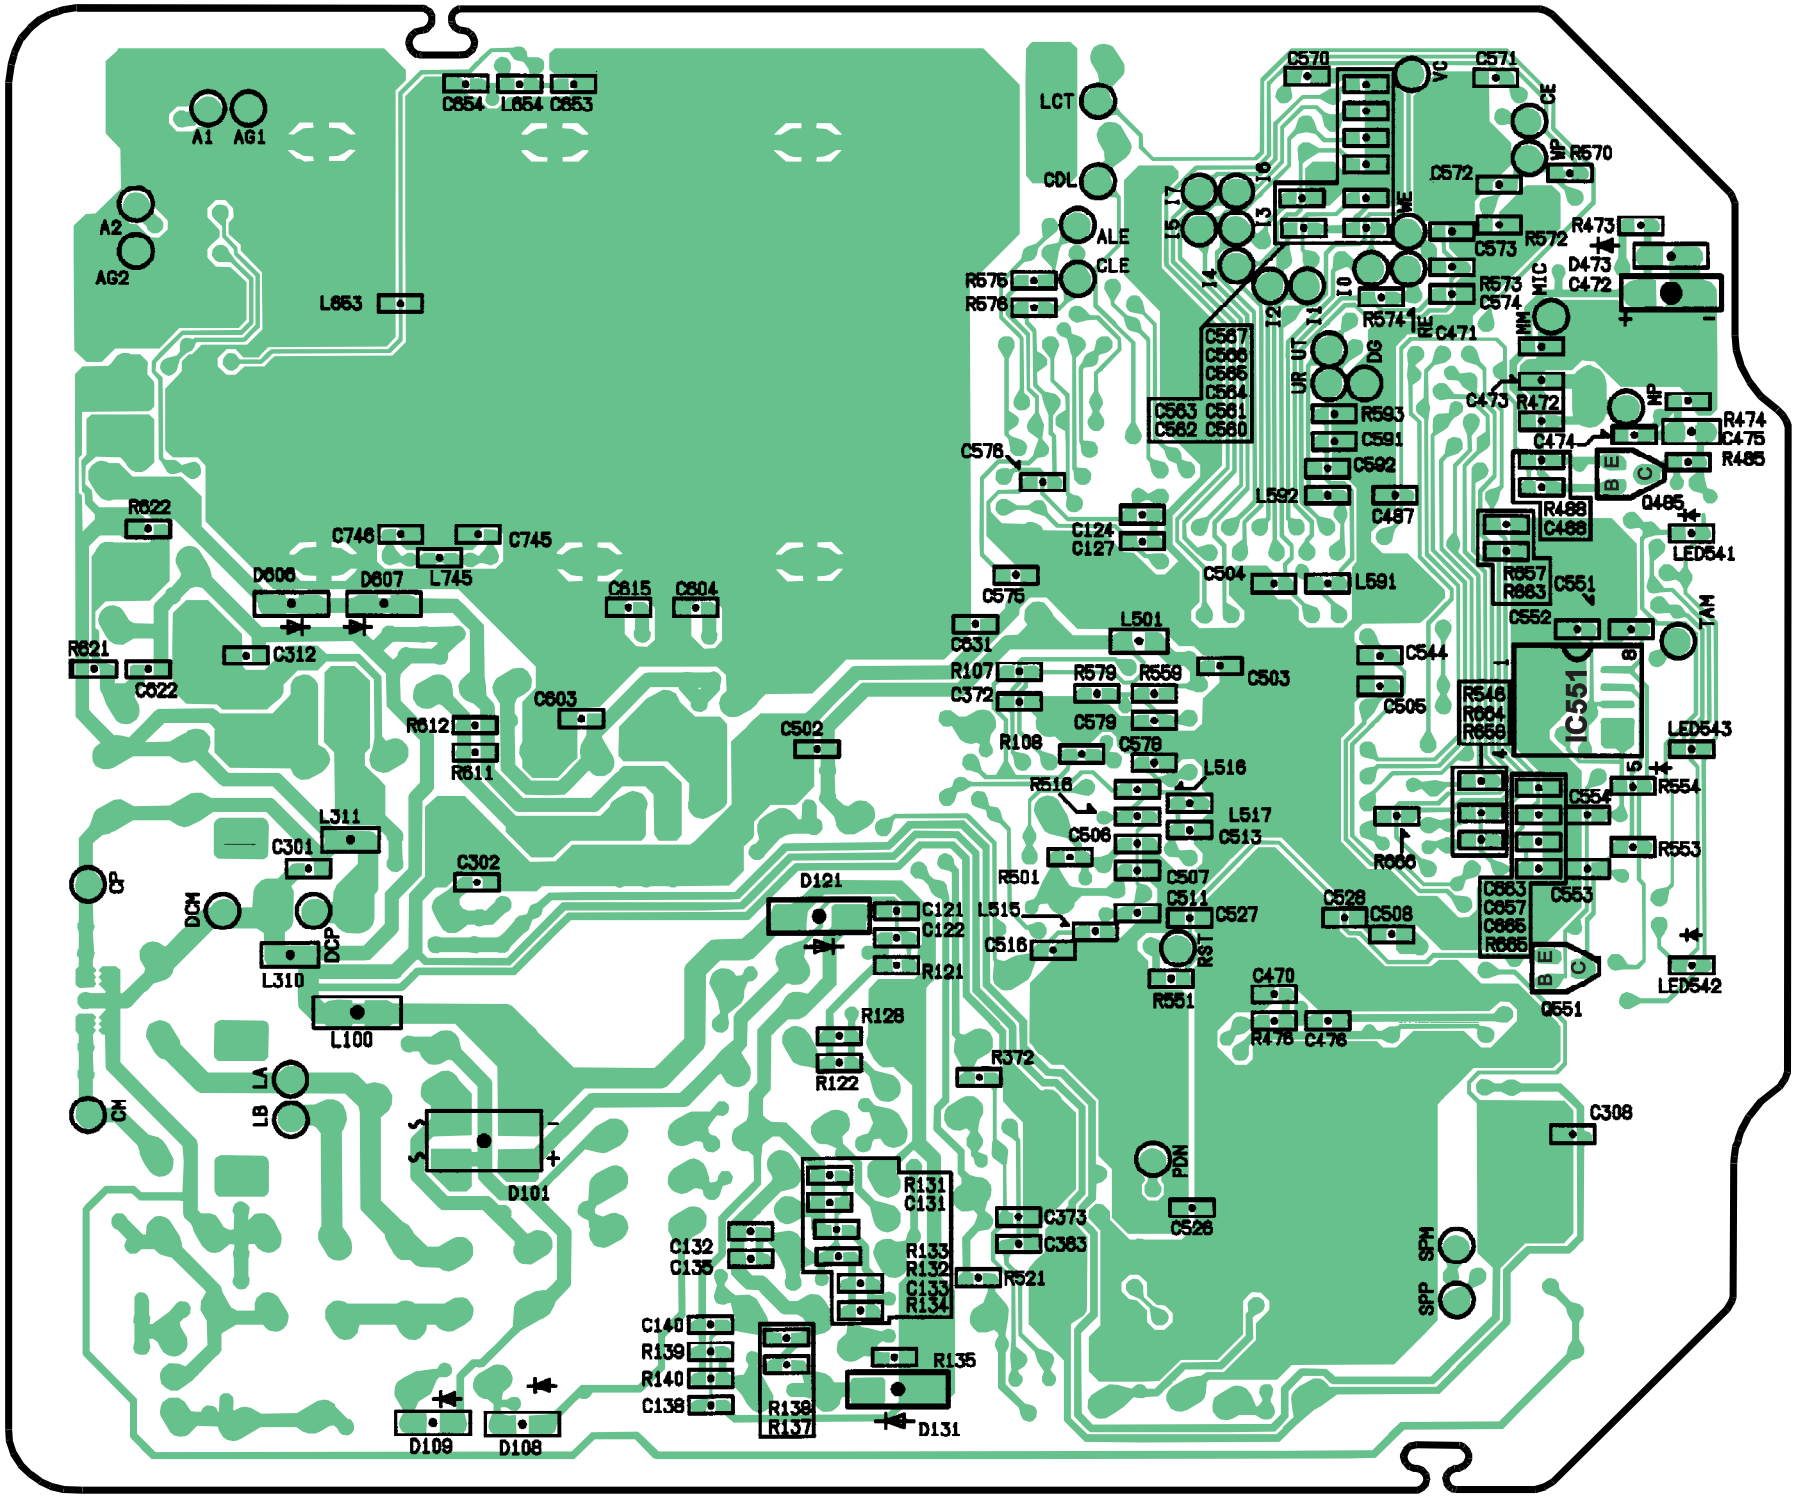
A1
AG1
A2
AG2
L853
C854
L854
C853
LCT
CDL
ALE
CLE
R576
R578
C570
C571
VC
CE
WP
R570
C572
R572
C573
R573
C574
R574
C471
R473
D473
C472
MIC
C567
C566
C565
C564
C563
C562
C561
C560
R593
C591
C592
L592
C487
C576
C124
C127
C504
L591
C631
L501
R107
C372
R579
R559
C503
C579
R108
C578
L516
R516
L517
C513
C506
C507
C511
C527
R501
C515
C516
R551
C528
C508
C470
R476
C476
C308
C544
C505
R546
R664
R660
IC551
C554
R554
R553
C553
C663
C657
C666
R665
Q551
LED542
LED543
C551
C552
R557
R663
C488
R488
C474
C475
R474
R485
Q485
LED541
TAM
R622
C746
C745
L745
D606
D607
C312
C615
C604
R621
C622
C603
R612
R611
C502
L311
C301
C302
L310
L100
D121
C121
C122
R121
R128
R122
R372
D101
LB
DCM
DCP
PDN
C526
R131
C131
R133
R132
C133
R134
C373
C383
R521
C132
C135
C140
R139
R140
C138
R138
R137
R135
D131
D109
D108
SPM
SPP

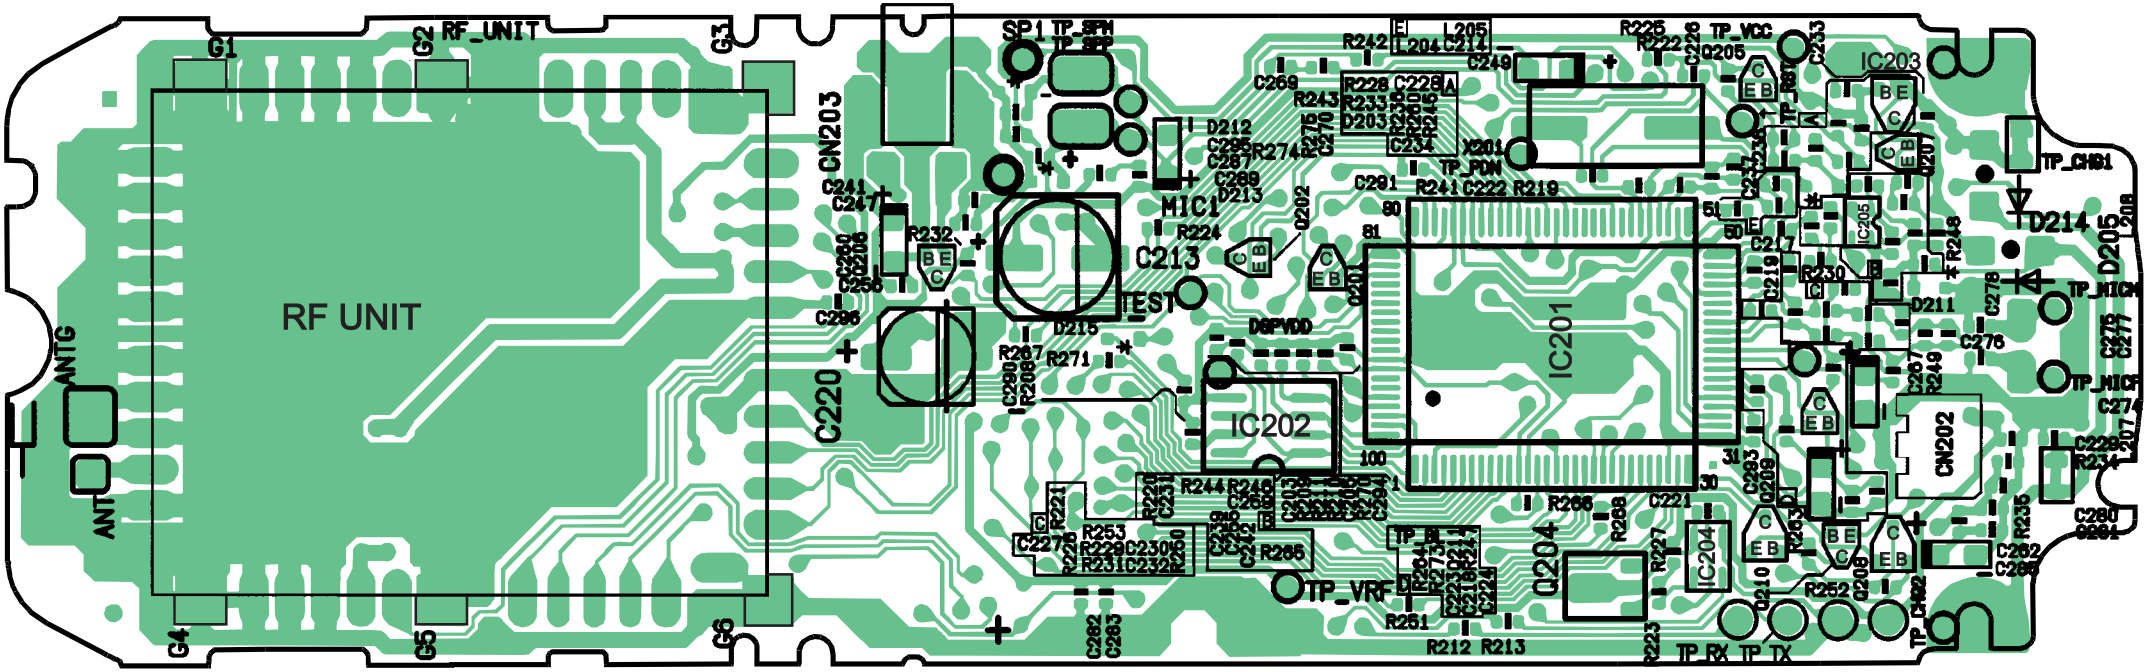
RF UNIT
G1
G2
RF_UNIT
G3
G4
G5
G6
ANTG
ANT
CN203
C220
SP1
TP_SPM
TP_SPP
MIC1
C213
TEST
D215
D212
D213
IC202
D8PVDD
IC201
Q202
Q204
X201
TP_PDN
TP_VRF
TP_VCC
Q205
IC203
IC204
IC205
D214
D205
D211
TP_CHG1
TP_MICP
TP_MICN
CN202
TP_RX
TP_TX
R232
R224
R241
R222
R219
R230
R266
R268
R227
R252
R251
R212
R213
C241
C247
C296
C269
C249
C234
C201
C207
C221
C276
C277
C274
C275
C280
C281
C262
C263
C253
C254
C255
C256
C257
C258
C259
C260
C261
C264
C265
C266
C267
C268
C270
C271
C272
C273
C278
C279
C282
C283
C284
C285
C286
C287
C288
C289
C290
C291
C292
C293
C294
C295
C297
C298
C299
C300
C301
C302
C303
C304
C305
C306
C307
C308
C309
C310
C311
C312
C313
C314
C315
C316
C317
C318
C319
C320
C321
C322
C323
C324
C325
C326
C327
C328
C329
C330
C331
C332
C333
C334
C335
C336
C337
C338
C339
C340
C341
C342
C343
C344
C345
C346
C347
C348
C349
C350
C351
C352
C353
C354
C355
C356
C357
C358
C359
C360
C361
C362
C363
C364
C365
C366
C367
C368
C369
C370
C371
C372
C373
C374
C375
C376
C377
C378
C379
C380
C381
C382
C383
C384
C385
C386
C387
C388
C389
C390
C391
C392
C393
C394
C395
C396
C397
C398
C399
C400
C401
C402
C403
C404
C405
C406
C407
C408
C409
C410
C411
C412
C413
C414
C415
C416
C417
C418
C419
C420
C421
C422
C423
C424
C425
C426
C427
C428
C429
C430
C431
C432
C433
C434
C435
C436
C437
C438
C439
C440
C441
C442
C443
C444
C445
C446
C447
C448
C449
C450
C451
C452
C453
C454
C455
C456
C457
C458
C459
C460
C461
C462
C463
C464
C465
C466
C467
C468
C469
C470
C471
C472
C473
C474
C475
C476
C477
C478
C479
C480
C481
C482
C483
C484
C485
C486
C487
C488
C489
C490
C491
C492
C493
C494
C495
C496
C497
C498
C499
C500
C501
C502
C503
C504
C505
C506
C507
C508
C509
C510
C511
C512
C513
C514
C515
C516
C517
C518
C519
C520
C521
C522
C523
C524
C525
C526
C527
C528
C529
C530
C531
C532
C533
C534
C535
C536
C537
C538
C539
C540
C541
C542
C543
C544
C545
C546
C547
C548
C549
C550
C551
C552
C553
C554
C555
C556
C557
C558
C559
C560
C561
C562
C563
C564
C565
C566
C567
C568
C569
C570
C571
C572
C573
C574
C575
C576
C577
C578
C579
C580
C581
C582
C583
C584
C585
C586
C587
C588
C589
C590
C591
C592
C593
C594
C595
C596
C597
C598
C599
C600
C601
C602
C603
C604
C605
C606
C607
C608
C609
C610
C611
C612
C613
C614
C615
C616
C617
C618
C619
C620
C621
C622
C623
C624
C625
C626
C627
C628
C629
C630
C631
C632
C633
C634
C635
C636
C637
C638
C639
C640
C641
C642
C643
C644
C645
C646
C647
C648
C649
C650
C651
C652
C653
C654
C655
C656
C657
C658
C659
C660
C661
C662
C663
C664
C665
C666
C667
C668
C669
C670
C671
C672
C673
C674
C675
C676
C677
C678
C679
C680
C681
C682
C683
C684
C685
C686
C687
C688
C689
C690
C691
C692
C693
C694
C695
C696
C697
C698
C699
C700
C701
C702
C703
C704
C705
C706
C707
C708
C709
C710
C711
C712
C713
C714
C715
C716
C717
C718
C719
C720
C721
C722
C723
C724
C725
C726
C727
C728
C729
C730
C731
C732
C733
C734
C735
C736
C737
C738
C739
C740
C741
C742
C743
C744
C745
C746
C747
C748
C749
C750
C751
C752
C753
C754
C755
C756
C757
C758
C759
C760
C761
C762
C763
C764
C765
C766
C767
C768
C769
C770
C771
C772
C773
C774
C775
C776
C777
C778
C779
C780
C781
C782
C783
C784
C785
C786
C787
C788
C789
C790
C791
C792
C793
C794
C795
C796
C797
C798
C799
C800
C801
C802
C803
C804
C805
C806
C807
C808
C809
C810
C811
C812
C813
C814
C815
C816
C817
C818
C819
C820
C821
C822
C823
C824
C825
C826
C827
C828
C829
C830
C831
C832
C833
C834
C835
C836
C837
C838
C839
C840
C841
C842
C843
C844
C845
C846
C847
C848
C849
C850
C851
C852
C853
C854
C855
C856
C857
C858
C859
C860
C861
C862
C863
C864
C865
C866
C867
C868
C869
C870
C871
C872
C873
C874
C875
C876
C877
C878
C879
C880
C881
C882
C883
C884
C885
C886
C887
C888
C889
C890
C891
C892
C893
C894
C895
C896
C897
C898
C899
C900
C901
C902
C903
C904
C905
C906
C907
C908
C909
C910
C911
C912
C913
C914
C915
C916
C917
C918
C919
C920
C921
C922
C923
C924
C925
C926
C927
C928
C929
C930
C931
C932
C933
C934
C935
C936
C937
C938
C939
C940
C941
C942
C943
C944
C945
C946
C947
C948
C949
C950
C951
C952
C953
C954
C955
C956
C957
C958
C959
C960
C961
C962
C963
C964
C965
C966
C967
C968
C969
C970
C971
C972
C973
C974
C975
C976
C977
C978
C979
C980
C981
C982
C983
C984
C985
C986
C987
C988
C989
C990
C991
C992
C993
C994
C995
C996
C997
C998
C999
C1000

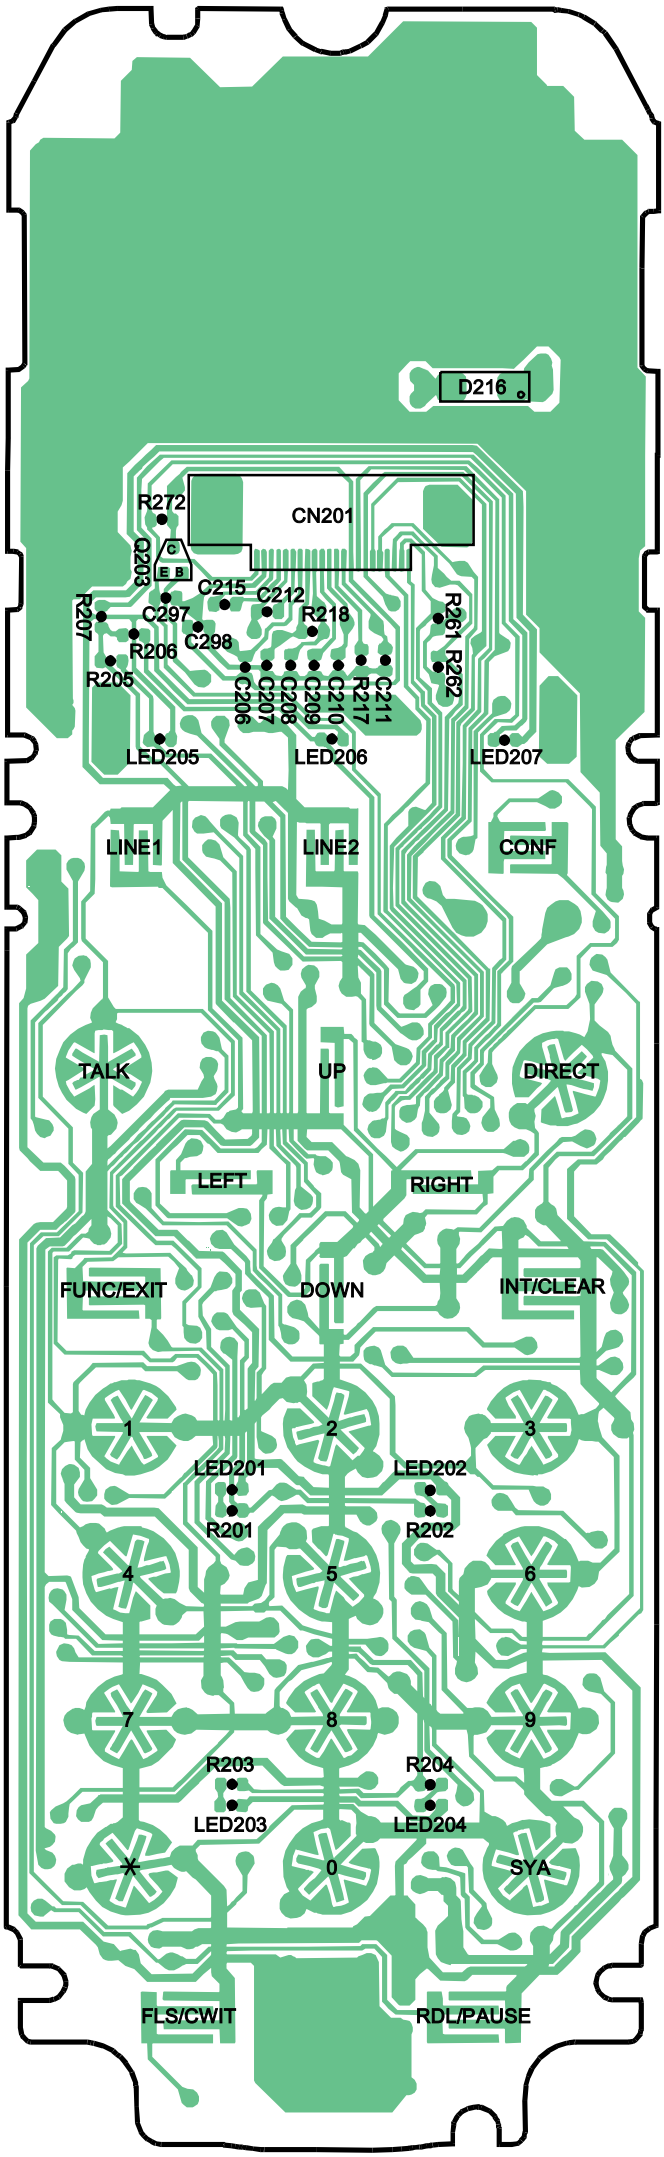
D216
R272
CN201
Q203
C
E B
C215
C212
R207
C297
R218
R261
C298
R206
R262
R205
C206
C207
C208
C209
C210
R217
C211
LED205
LED206
LED207
LINE1
LINE2
CONF
TALK
UP
DIRECT
LEFT
RIGHT
FUNC/EXIT
DOWN
INT/CLEAR
1
2
3
LED201
LED202
R201
R202
4
5
6
7
8
9
R203
R204
LED203
LED204
*
0
SYA
FLS/CWIT
RDL/PAUSE

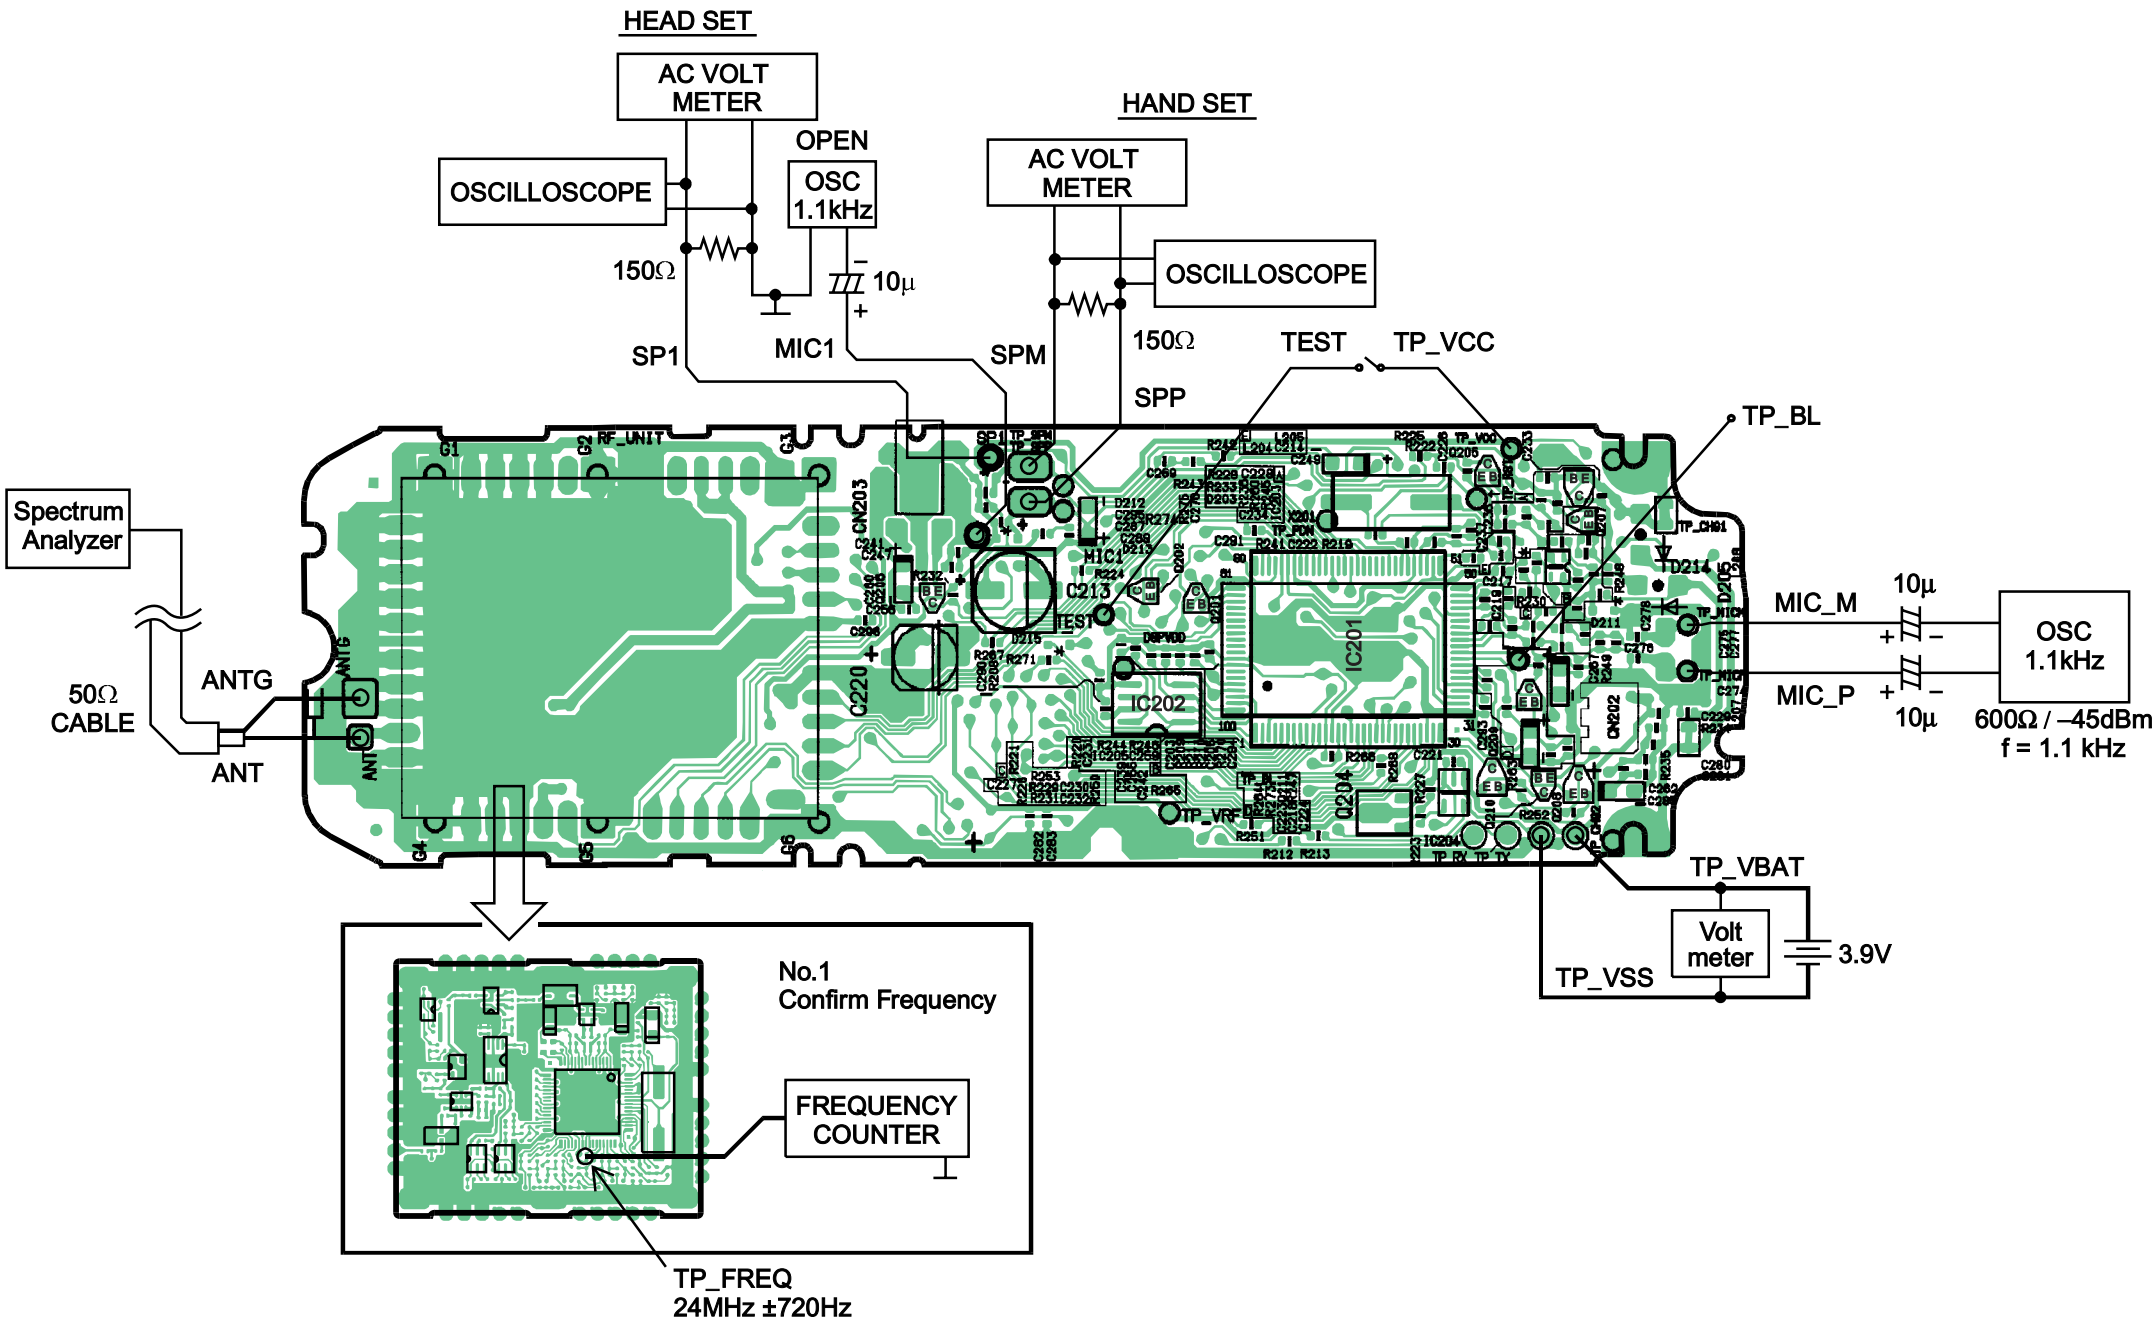
HEAD SET
AC VOLT METER
OPEN
OSCILLOSCOPE
OSC 1.1kHz
150Ω
10µ
SP1
MIC1
HAND SET
AC VOLT METER
OSCILLOSCOPE
150Ω
SPM
SPP
TEST
TP_VCC
TP_BL
Spectrum Analyzer
50Ω CABLE
ANTG
ANT
MIC_M
MIC_P
10µ
10µ
OSC 1.1kHz
600Ω / –45dBm
f = 1.1 kHz
TP_VBAT
Volt meter
3.9V
TP_VSS
No.1
Confirm Frequency
FREQUENCY COUNTER
TP_FREQ
24MHz ±720Hz

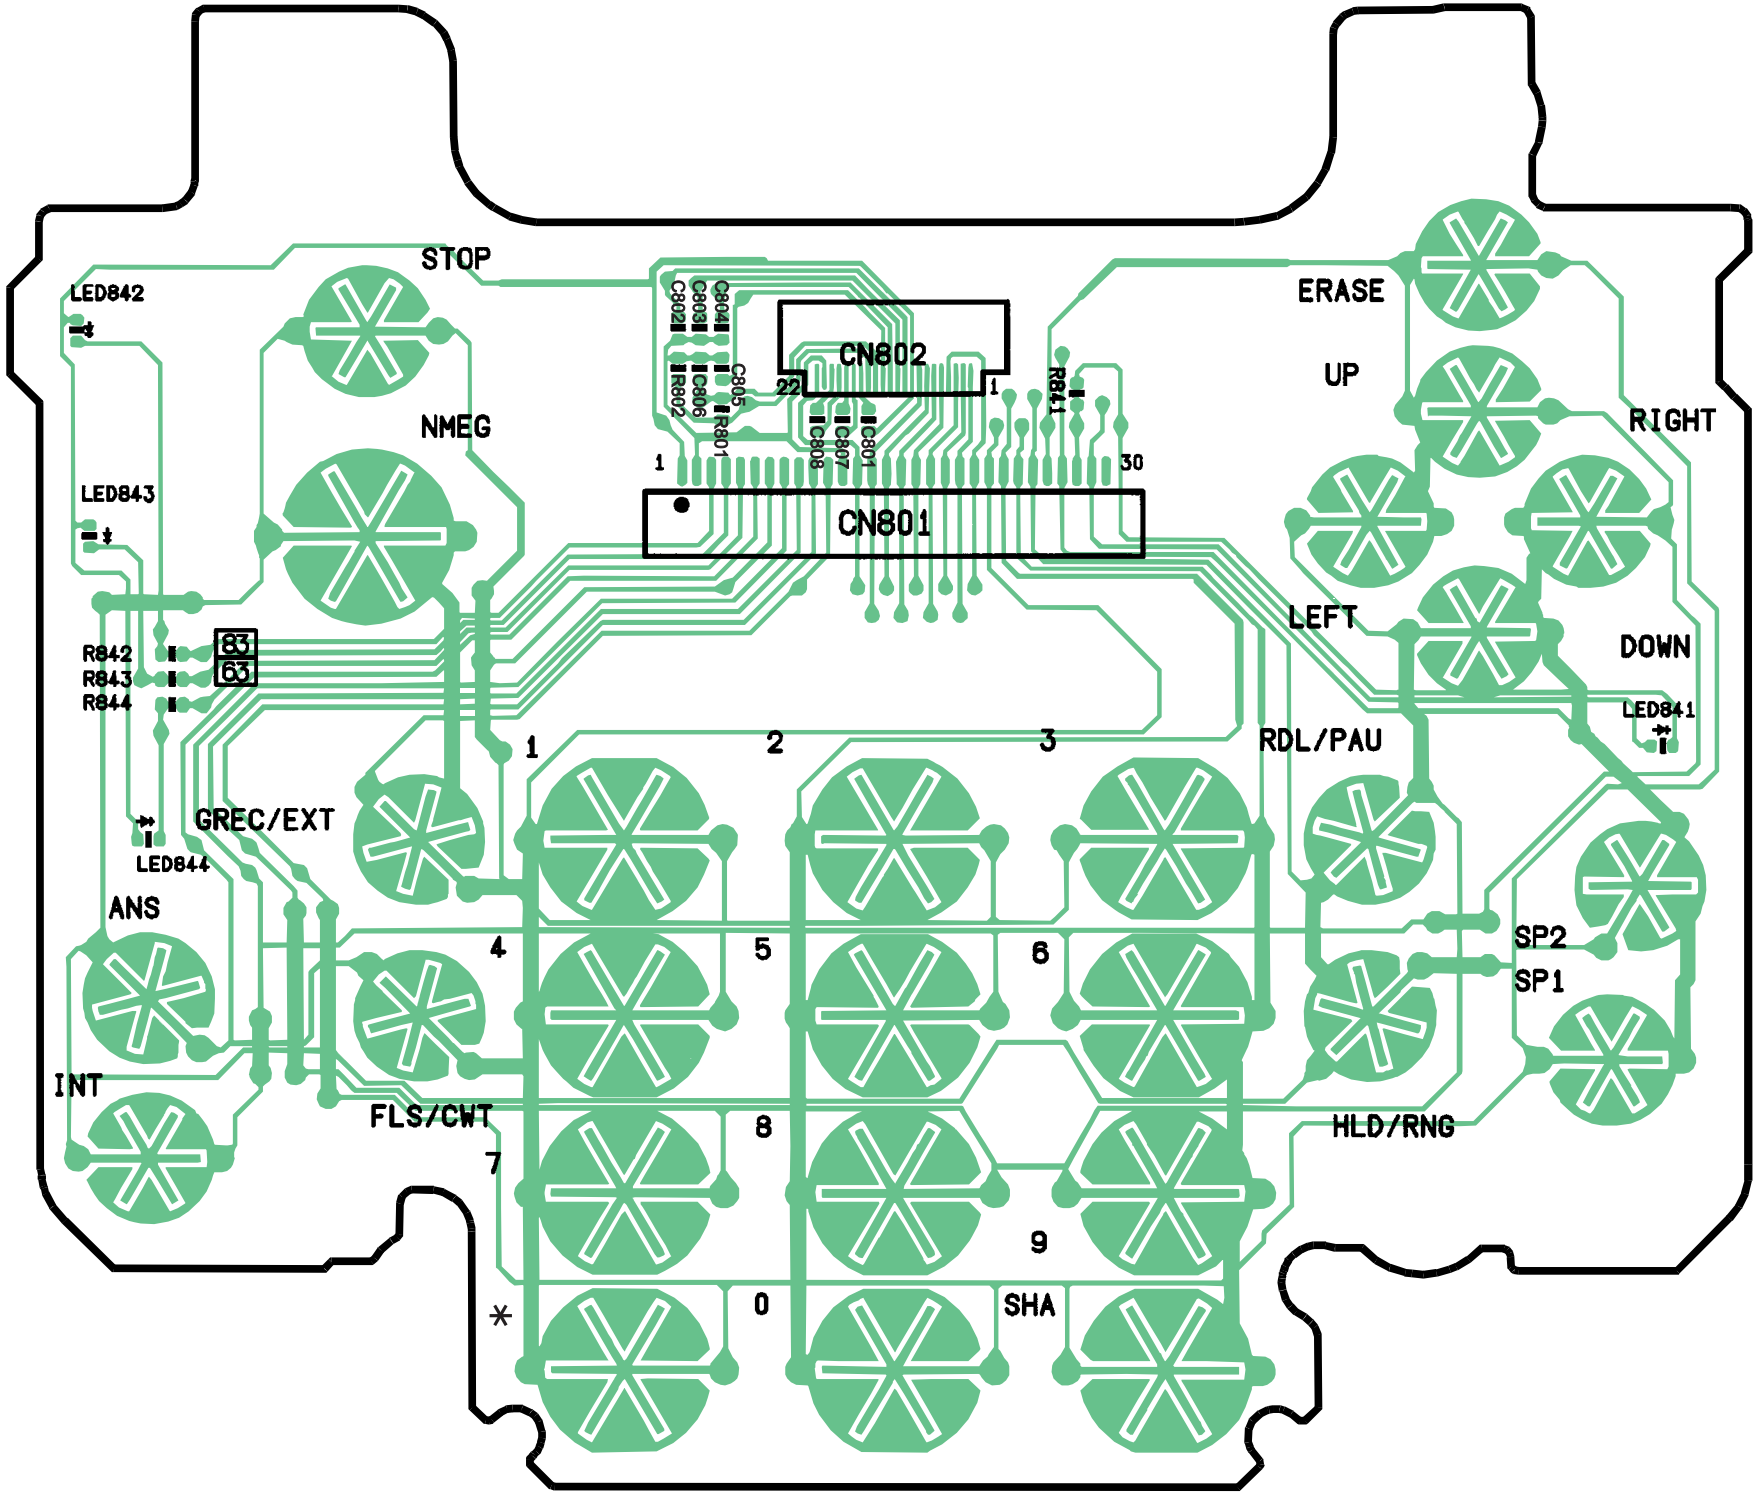
STOP
LED842
NMEG
LED843
R842
R843
R844
CN802
CN801
C804
C803
C802
C806
C805
R802
R801
C808
C807
C801
R841
ERASE
UP
RIGHT
LEFT
DOWN
LED841
RDL/PAU
GREC/EXT
LED844
ANS
INT
FLS/CWT
HLD/RNG
SP2
SP1
SHA
1
2
3
4
5
6
7
8
9
0
*

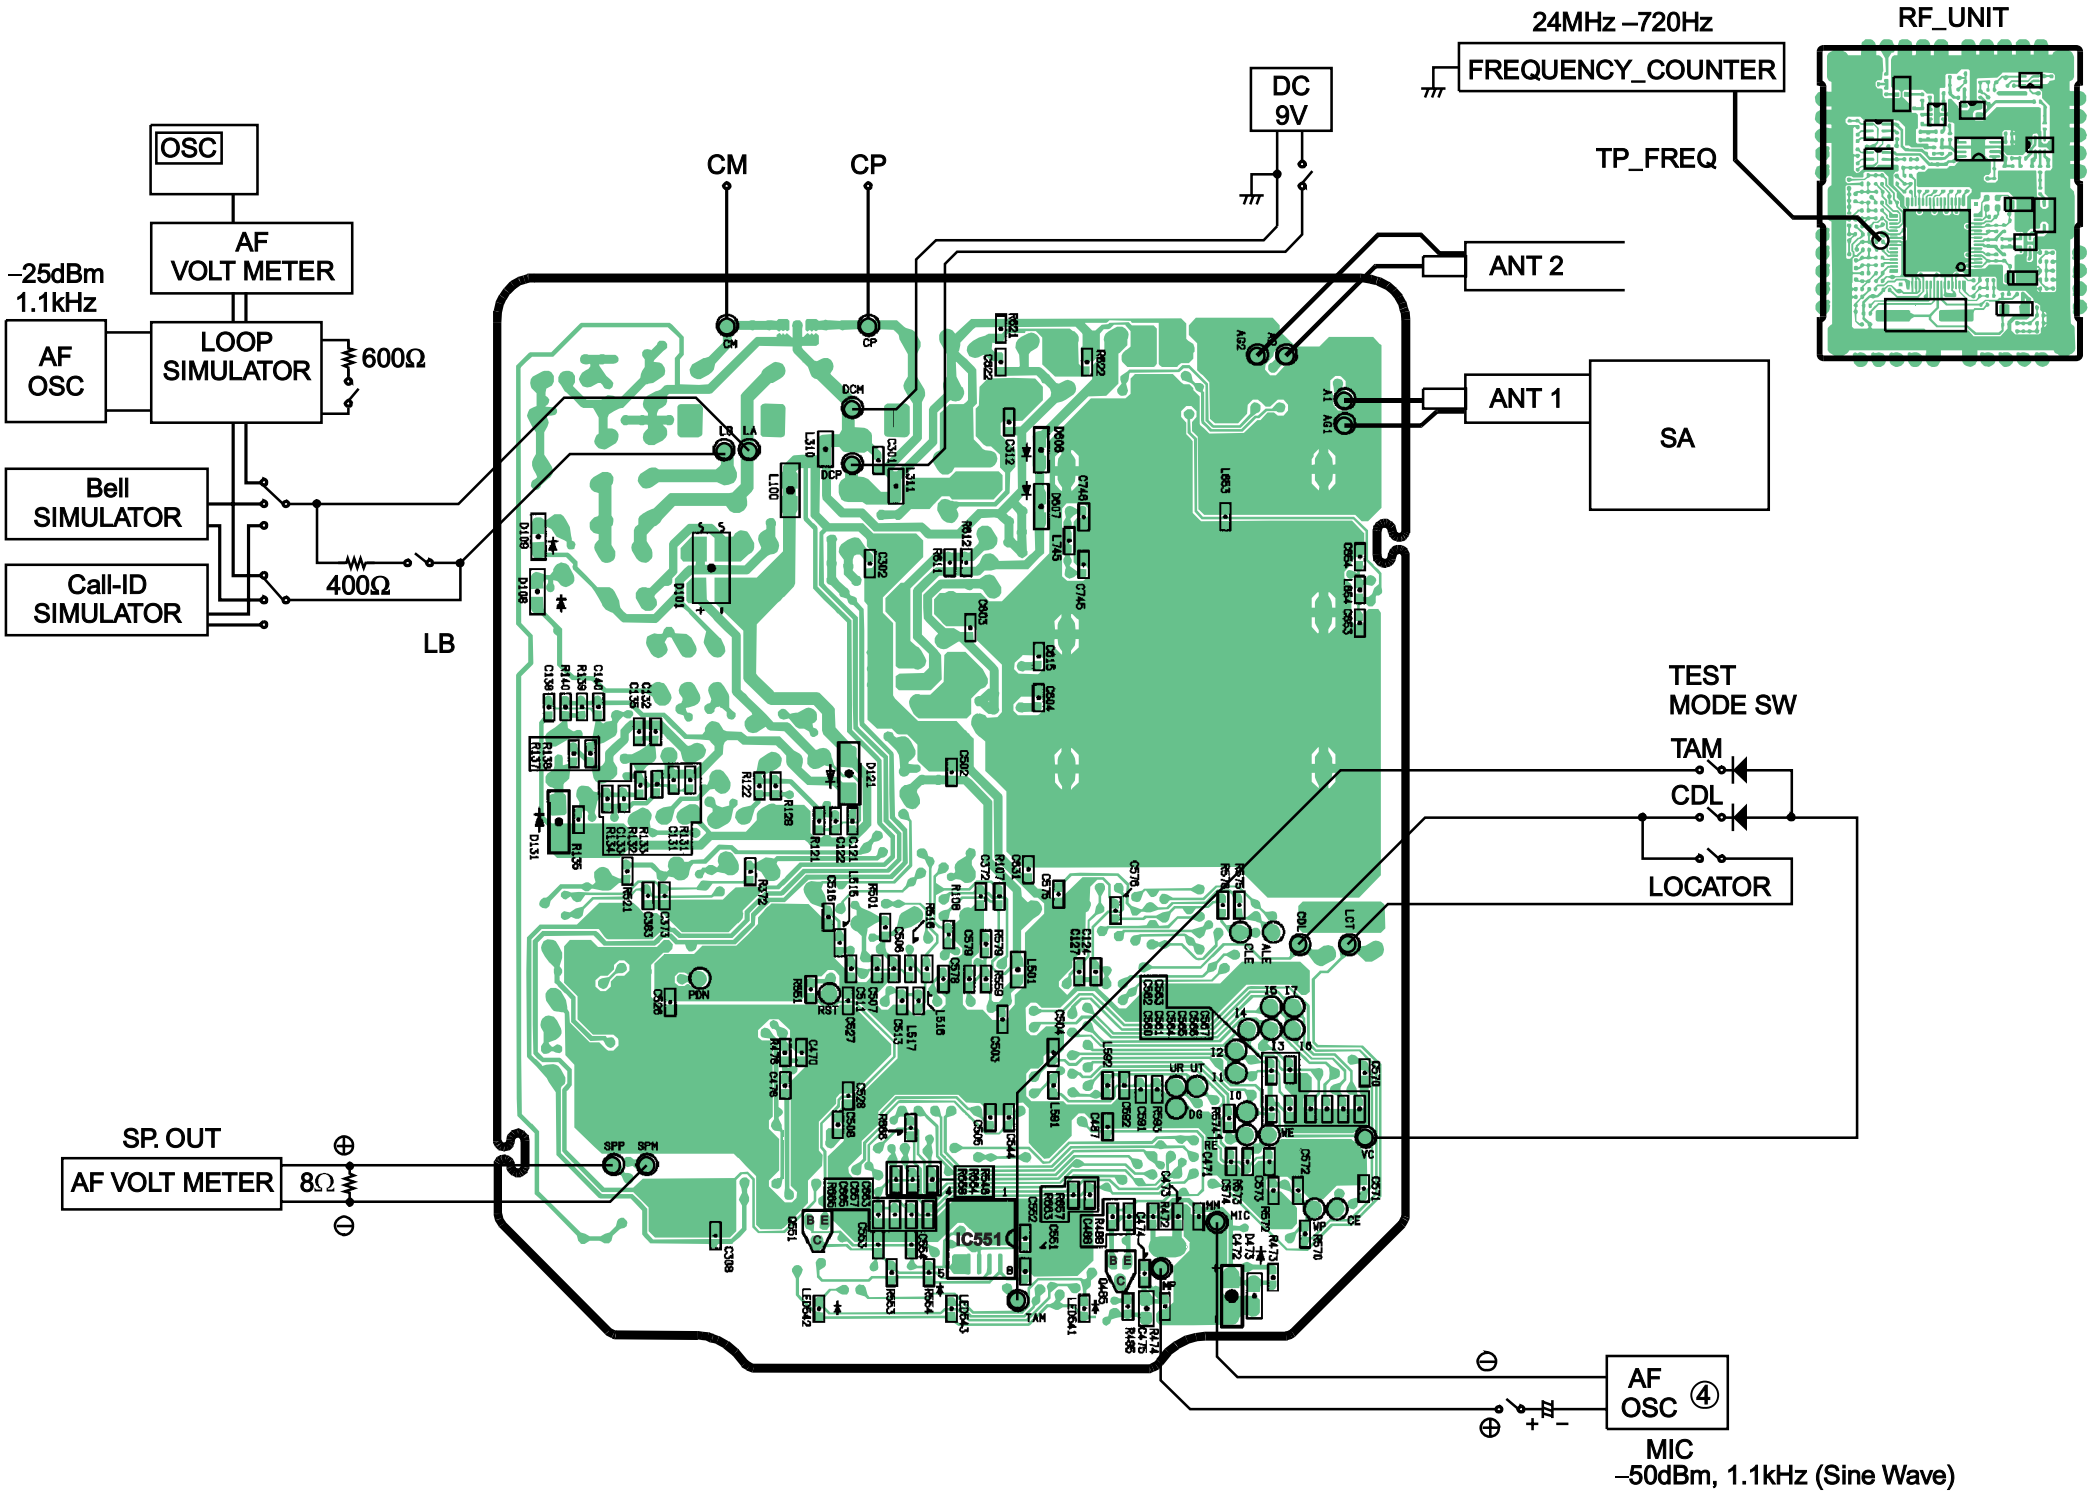
OSC
AF
VOLT METER
–25dBm
1.1kHz
AF
OSC
LOOP
SIMULATOR
600Ω
Bell
SIMULATOR
Call-ID
SIMULATOR
400Ω
LB
CM
CP
DC
9V
24MHz –720Hz
FREQUENCY_COUNTER
TP_FREQ
RF_UNIT
ANT 2
ANT 1
SA
TEST
MODE SW
TAM
CDL
LOCATOR
SP. OUT
AF VOLT METER
8Ω
AF
OSC
④
MIC
–50dBm, 1.1kHz (Sine Wave)

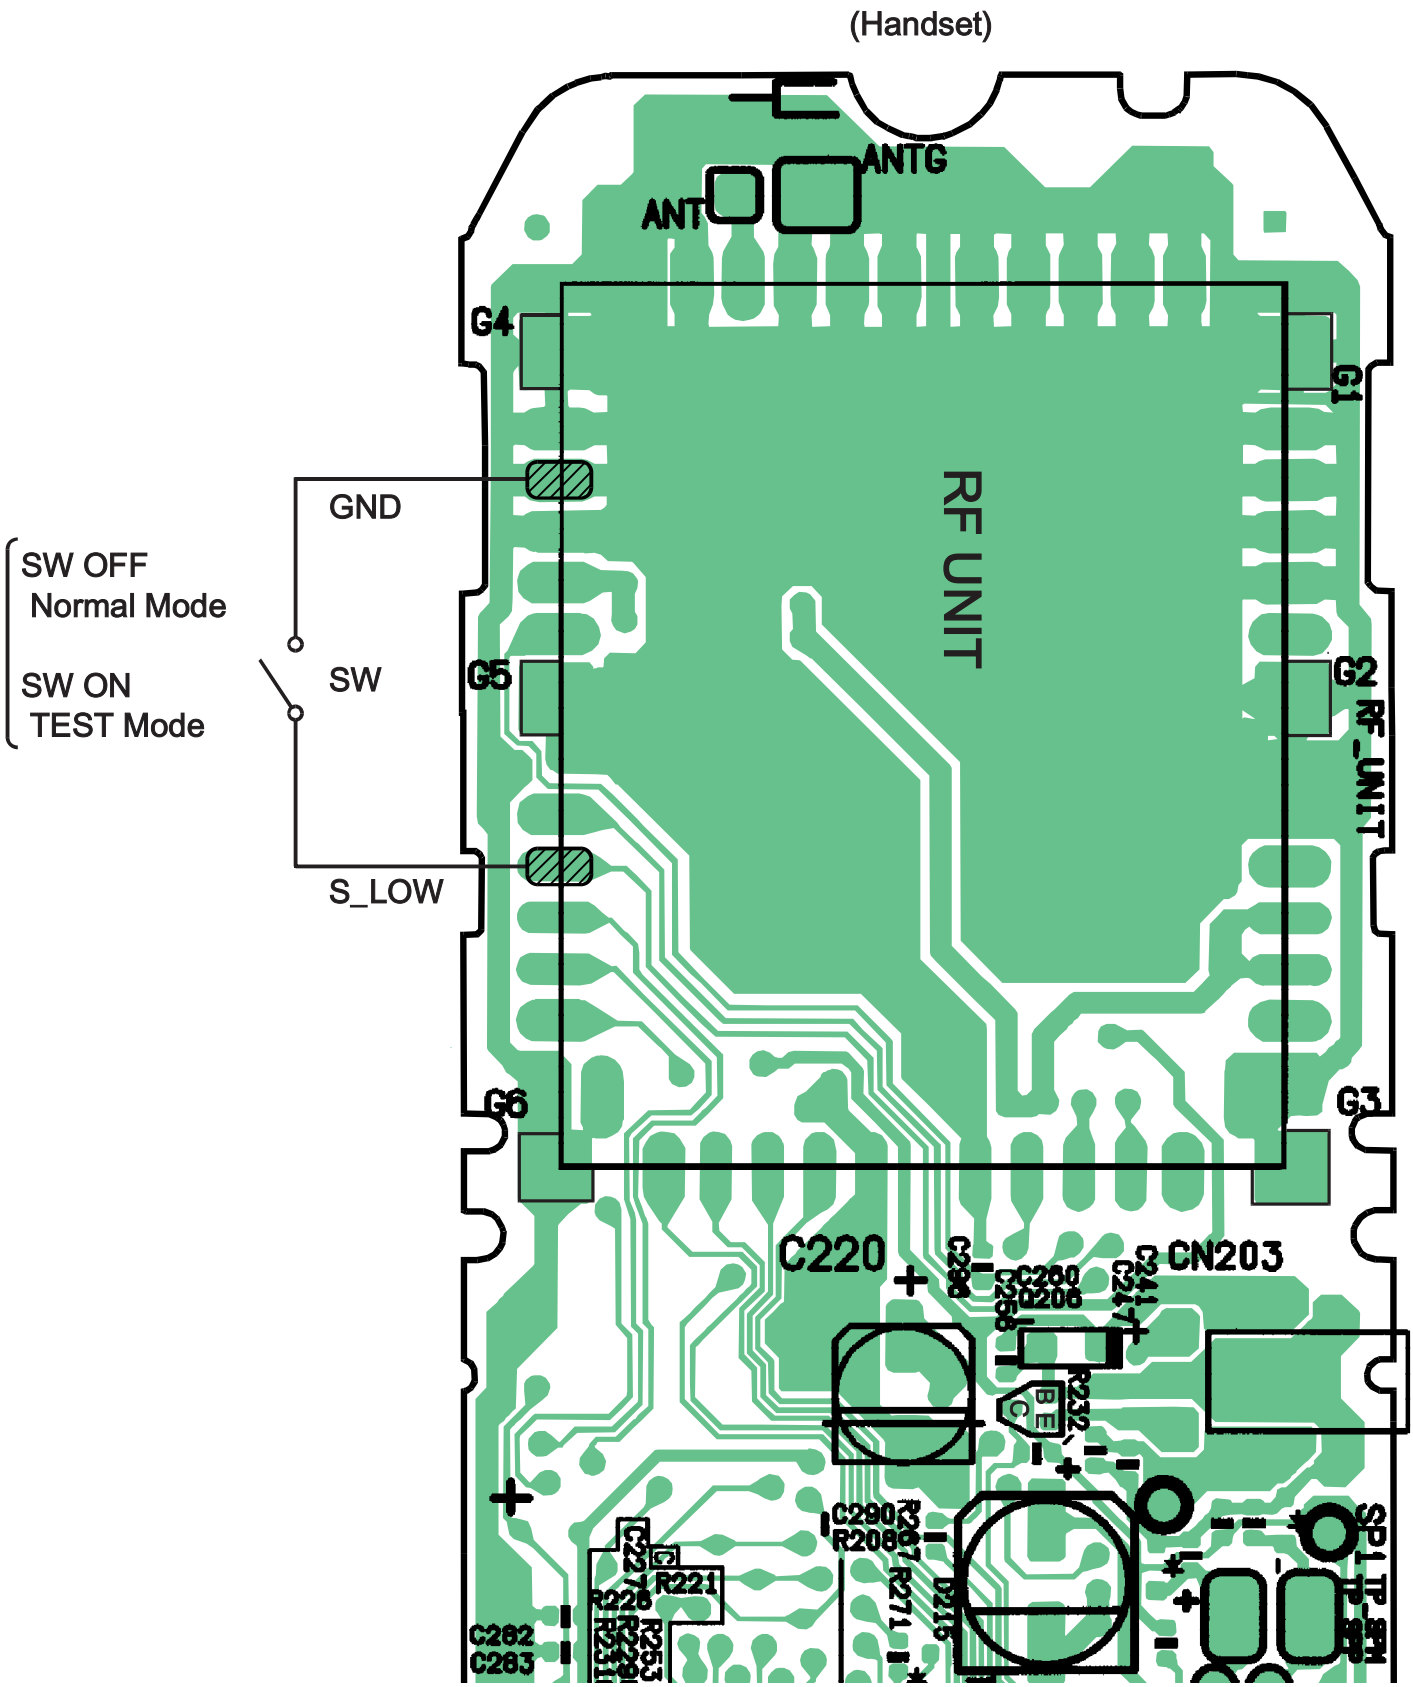
(Handset)
ANTG
ANT
G4
G1
GND
SW OFF
Normal Mode
SW ON
TEST Mode
SW
G5
G2
RF_UNIT
S_LOW
RF UNIT
G6
G3
C220
CN203
C290
R208
R221
C282
C283

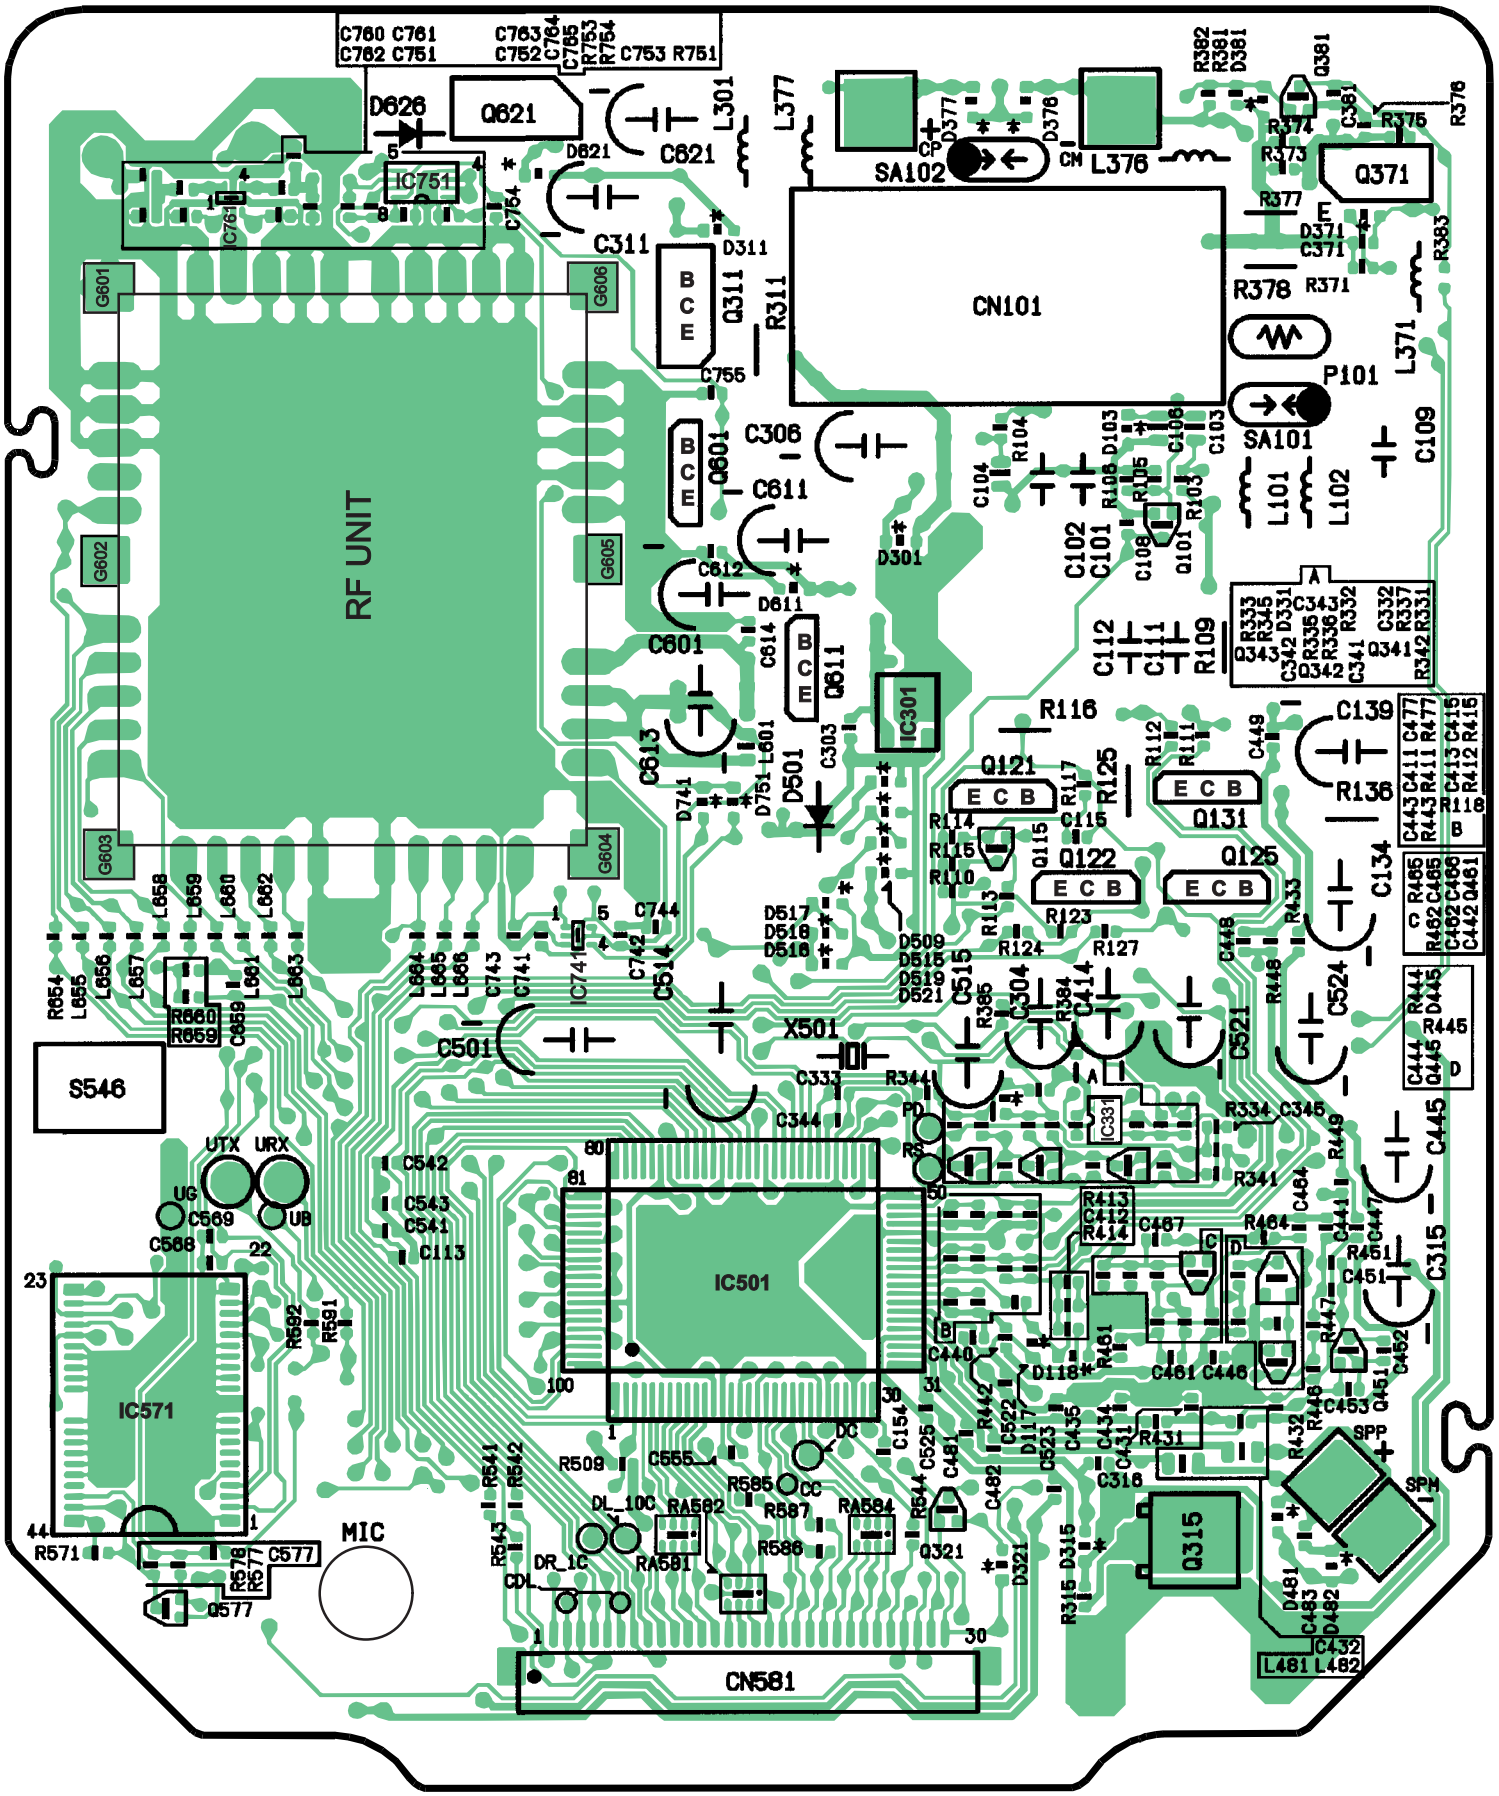
RF UNIT
IC501
IC571
IC751
CN101
CN581
SA102
SA101
P101
MIC
S546
X501
Q621
Q371
Q315
Q121
Q122
Q125
Q131
Q601
Q611
Q311
IC301
D626
L376
L377
L301
L371
L101
L102
C501
C601
C611
C621
C306
C311
C109
C139
R136
R116
R125
R311
R378
R371
R377
R381
R382
R374
R373
R376
R375
R383
C134
C315
C445
C524
C521
C514
C515
C414
C304
C501
C744
C742
C741
C743
C333
C344
C542
C543
C541
C113
C568
C569
C577
C578
C555
C525
C481
C482
C522
C523
C435
C434
C431
C316
C321
C315
C432
C483
C484
C451
C452
C453
C441
C447
C464
C467
C461
C446
C440
C331
C345
C334
C341
C342
C343
C332
C331
C303
C301
C611
C612
C613
C614
C601
C602
C603
C604
C605
C606
R571
R572
R573
R574
R575
R576
R577
R578
R591
R592
R541
R542
R543
R544
R545
R546
R547
R548
R549
R585
R586
R587
R588
R589
R509
R510
R511
R512
R513
R514
R515
R516
R517
R518
R519
R520
R521
R522
R523
R524
R525
R526
R527
R528
R529
R530
R531
R532
R533
R534
R535
R536
R537
R538
R539
R540
RA581
RA582
RA583
RA584
DL_10C
DR_1C
CDL
CC
DC
SPP
SPM
UTX
URX
UG
UB
PD
RS
L658
L659
L660
L662
L663
L661
L657
L656
L655
L654
L664
L665
L666
L667
L668
L669
L670
L671
L672
L673
L674
L675
L676
L677
L678
L679
L680
L681
L682
L683
L684
L685
L686
L687
L688
L689
L690
L691
L692
L693
L694
L695
L696
L697
L698
L699
L700
L701
L702
L703
L704
L705
L706
L707
L708
L709
L710
L711
L712
L713
L714
L715
L716
L717
L718
L719
L720
L721
L722
L723
L724
L725
L726
L727
L728
L729
L730
L731
L732
L733
L734
L735
L736
L737
L738
L739
L740
L741
L742
L743
L744
L745
L746
L747
L748
L749
L750
L751
L752
L753
L754
L755
L756
L757
L758
L759
L760
L761
L762
L763
L764
L765
L766
L767
L768
L769
L770
L771
L772
L773
L774
L775
L776
L777
L778
L779
L780
L781
L782
L783
L784
L785
L786
L787
L788
L789
L790
L791
L792
L793
L794
L795
L796
L797
L798
L799
L800
L801
L802
L803
L804
L805
L806
L807
L808
L809
L810
L811
L812
L813
L814
L815
L816
L817
L818
L819
L820
L821
L822
L823
L824
L825
L826
L827
L828
L829
L830
L831
L832
L833
L834
L835
L836
L837
L838
L839
L840
L841
L842
L843
L844
L845
L846
L847
L848
L849
L850
L851
L852
L853
L854
L855
L856
L857
L858
L859
L860
L861
L862
L863
L864
L865
L866
L867
L868
L869
L870
L871
L872
L873
L874
L875
L876
L877
L878
L879
L880
L881
L882
L883
L884
L885
L886
L887
L888
L889
L890
L891
L892
L893
L894
L895
L896
L897
L898
L899
L900
L901
L902
L903
L904
L905
L906
L907
L908
L909
L910
L911
L912
L913
L914
L915
L916
L917
L918
L919
L920
L921
L922
L923
L924
L925
L926
L927
L928
L929
L930
L931
L932
L933
L934
L935
L936
L937
L938
L939
L940
L941
L942
L943
L944
L945
L946
L947
L948
L949
L950
L951
L952
L953
L954
L955
L956
L957
L958
L959
L960
L961
L962
L963
L964
L965
L966
L967
L968
L969
L970
L971
L972
L973
L974
L975
L976
L977
L978
L979
L980
L981
L982
L983
L984
L985
L986
L987
L988
L989
L990
L991
L992
L993
L994
L995
L996
L997
L998
L999
L1000